


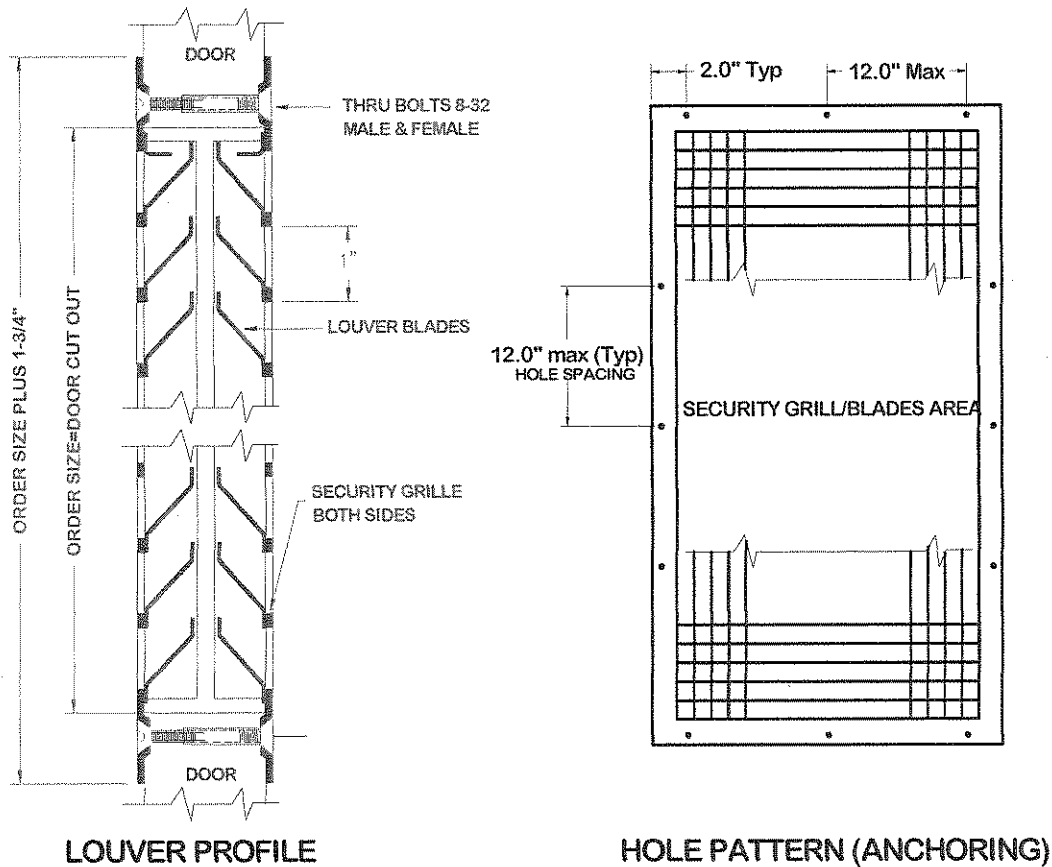


# INSTALLATION INSTRUCTIONS FOR 1500A LOUVER

1. Read and follow the installation requirements of the door manufacturers.
2. Cut the hole in the door to correspond to the order size of the louver. Assure that the opening is plumb and square.
4. Insert one half of the louver into the cutout, make sure is centered, use this as a template to drill holes on the door for the thru bolts. Remove louver and make holes.
5. Insert both sides of the louver into the cutout and align with the holes. Use setting blocks as needed.
7. Insert the screws provided in the countersunk holes. Screw in enough to hold the louver in place for alignment, and then insert the other screws lightly. Tighten the screws alternately in a criss-cross pattern to avoid putting more pressure on one side than the other. Do not over tighten



 <p><b>HIAWATHA</b></p>  <p><b>AIR LOUVERS</b></p>	<p>DIVISIONS OF</p>  <p><b>ACTIVAR</b> INC.</p> <p><i>Construction Products Group</i></p> <p><a href="http://www.activarcp.com">www.activarcp.com</a></p>
<p>HEADQUARTERS (HIAWATHA): 4450 WEST 78<sup>TH</sup> ST CIRCLE, BLOOMINGTON, MN 55435-5416 PH: 800-554-6077 FAX: 952-835-2218          ACPG WEST COAST (AIR LOUVERS): COMMERCE, CA PH: 800-554-6077 FAX: 952-835-2218          EMAIL: SALES@ACTIVARCPG.COM <a href="http://WWW.ACTIVARCPG.COM">WWW.ACTIVARCPG.COM</a> • WAREHOUSES: DALLAS TX, LANCASTER PA, ATLANTA GA, CHICAGO IL</p>	