



Aluminum Clad/Wood Awning Operating Window 48" x 48"

Thru Nail Fin Installation / Non-Impact

CCL Listing #436-H-103.28 & .29 ELEMENT TEST REPORT NUMBER: ESP019331-1700

Aluminum Clad/Wood Awning Operating Window Nail Fin Installation / WDMA Instructions / Non-Impact


SHEET: 1 OF 1

CERTIFICATION EXPIRATION DATE: 3/17/2025

DRAWN BY: S.P.W..

TEST REPORT SUMMARY:

- SINGLE UNIT, MAXIMUM BASIC UNIT FRAME SIZE: 48 3/16" (1224mm) x 48 3/16" (1224mm)
- OVERALL DESIGN PRESSURE: 50 psf
- STRUCTURAL TEST PRESSURE: +75/-75 psf
- RATING: CW-PG50

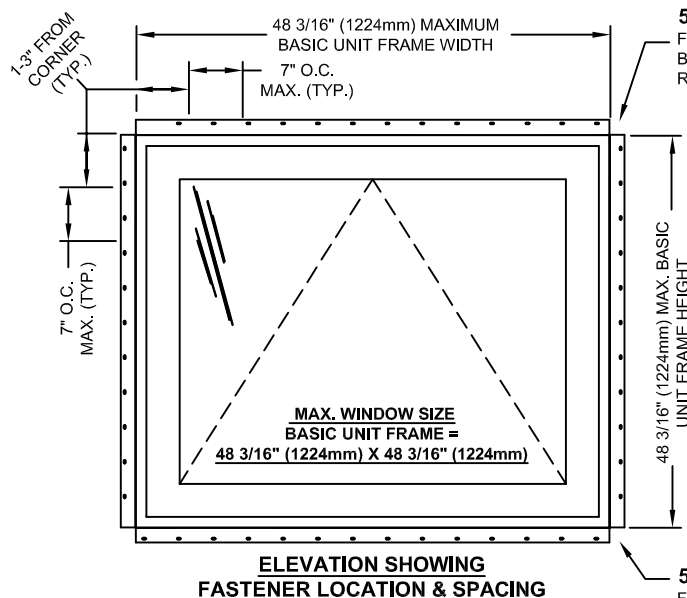

INSTALLATION NOTES:

1. USE 2" x _ PINE FOR WOOD BUCK
2. PLACE WOOD SHIMS EVERY 6-10"
3. 1/4" MAXIMUM SHIM SPACE AT HEAD, SILL AND EACH JAMB
4. APPLY A CONTINUOUS BEAD OF SEALANT BETWEEN THE VINYL NAIL FIN AND THE BUCK, ON ALL FOUR SIDES
5. INSTALL 2" GALV. ROOFING NAILS SPACED APPROXIMATELY 1-3" FROM EACH CORNER AND 7" ON CENTER THEREAFTER, THROUGH THE VINYL NAIL FIN INTO THE FRAMING MATERIAL, AT HEAD, SILL AND SIDE JAMBS
 - SILICONE SEAL OVER NAIL HEADS
 - FULLY SEAL ALL GAPS AT EACH CORNER OF THE UNIT AND THE ROUGH OPENING
 - APPLY A CONTINUOUS CAP BEAD OF SEALANT AROUND THE FULL PERIMETER AT THE NAIL FIN
6. 1 7/8" MINIMUM FASTENER EMBEDMENT INTO FRAMING MATERIAL
7. MAXIMUM WINDOW SIZE: B.U.S. (Basic Unit Size) = 48 3/16" (1224mm) x 48 3/16" (1224mm)
8. THIS INFORMATION DOES NOT APPLY TO MULLED UNITS

GENERAL INSTALLATION NOTES:

- Check rough opening for proper size, plumb, level and square.
- Make all necessary adjustments to ensure rough opening is plumb, level & square.
- Sill must be flat, level and capable of supporting the weight of the unit.
- Opening must allow a maximum of 1/4" shim space at head, sill and jambs.
- Consult full installation instructions found on the Sierra Pacific Windows web site, www.sierrapacificwindows.com, for all recommended installation procedures.
- Wood buck, framing, fasteners, sealant and all wall system materials are provided by others

FLASHING

- For units that have to meet a specific DP (Design Pressure) rating, any kind of building wrap must be folded and taped away from each rough opening before the unit is installed. Unit must come in contact with the building's bare sheathing. A bead of silicone must be applied to the backside of the nail fin where it meets the unit, at head and jambs.
- Once unit is installed and flashed properly, the building wrap must be reapplied and trimmed flush with the unit's exterior. A bead of sealant must be placed along the seam joint of the building wrap and the unit. Tape the corner cuts in the building wrap. See full window installation brochure for complete flashing details.

