



FeelSafe Casement / Direct Set Stacked
2-Wide Muller Stacked Under 1-Wide Direct Set Unit
72 5/8" x 146 3/8" Overall Frame Size
Thru Frame Installation / Impact

CCL Listing #436-H-105.59 & .62 | ELEMENT TEST REPORT# EP024728P-2111.1 REV. C

FeelSafe Clad Casement Stacked under 1-Wide Direct Set
Thru Frame Installation / WDMA Instructions / Impact

SHEET: 1 OF 2

UPDATED: 11/27/2017

DRAWN BY: B.K.

TEST REPORT SUMMARY:

- OVERALL MAXIMUM BASIC UNIT FRAME SIZE:
72 5/8" (1845mm) x 146 3/8" (3718mm)
- OVERALL DESIGN PRESSURE: +65.16/-70.18 psf
- STRUCTURAL TEST PRESSURE: +97.74/-105.26 psf
- RATING: CW-PG65

Direct Set/Operating Horizontal Stack


INSTALLATION NOTES FOR SCREW THROUGH FRAME

MOUNT UNITS:


1. USE 2" X 4" MIN. WOOD FRAME OR BUCK
2. 1/4" MAXIMUM SHIM SPACE AT HEAD, SILL, JAMB. WOOD SHIM REQUIRED BEHIND EACH FRAME ANCHOR.
3. INSTALL #10 X 3" PFH SCREWS 3" AND 6" ON EACH SIDE OF THE HORIZONTAL AND VERTICAL MULL POSTS THROUGH JAMB INTO FRAMING MATERIAL. SECURE UNIT INTO ROUGH OPENING WITH #10 x 3" PFH SS SCREWS SPACED MAX. 6" FROM EACH CORNER AND 15-21" ON CENTER THROUGH THE JAMBS FRAMING MATERIAL, ALL 4 SIDES.
4. 1" MINIMUM FASTENER EMBEDMENT INTO FRAMING MATERIAL
5. SILICONE SEAL JOINT BETWEEN THE FRAME AND ROUGH OPENING, ALL 4 SIDES
6. OVERALL COMBINATION WINDOW SIZE: B.U.S. (Basic Unit Size) =
72 5/8" (1845mm) x 146 3/8" (3718mm)

GENERAL INSTALLATION NOTES:


- Check rough opening for proper size, plumb, level and square.
- Make all necessary adjustments to ensure rough opening is plumb, level and square.
- Sill must be flat, level and capable of supporting the weight of the window unit.
- Opening should allow a maximum of 1/4" shim space at head, sill and jambs.
- Consult full installation instructions found on the Sierra Pacific Windows web site, www.sierrapacificwindows.com, for all recommended installation procedures.
- Wood buck, framing, fasteners, sealant and all wall system materials are provided by others.

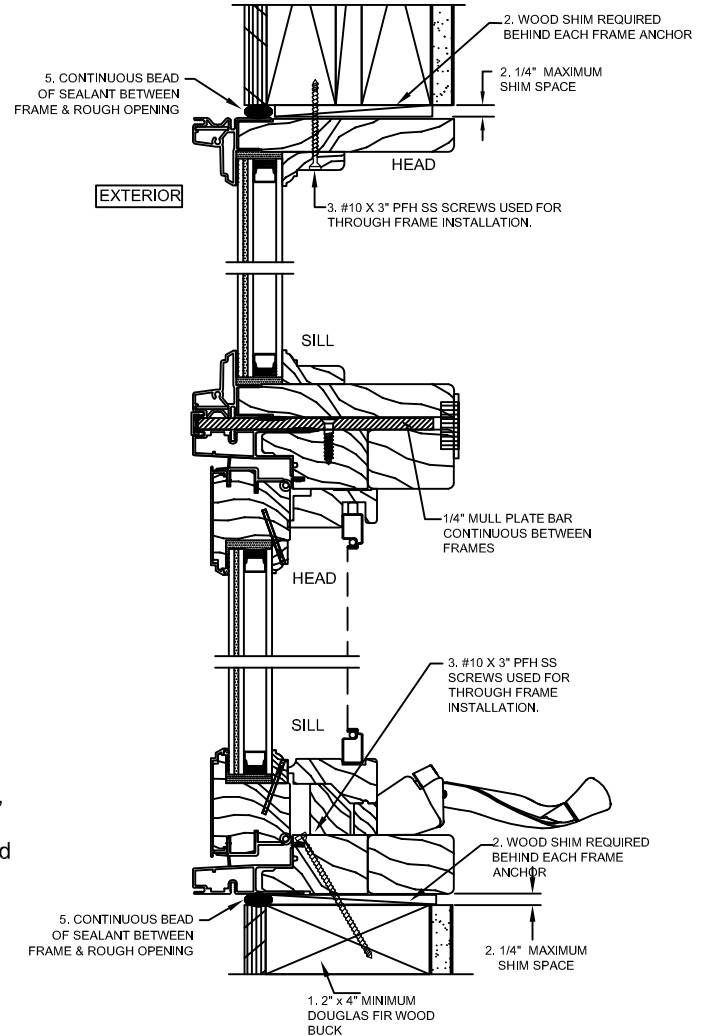

Direct Set Horizontal Section

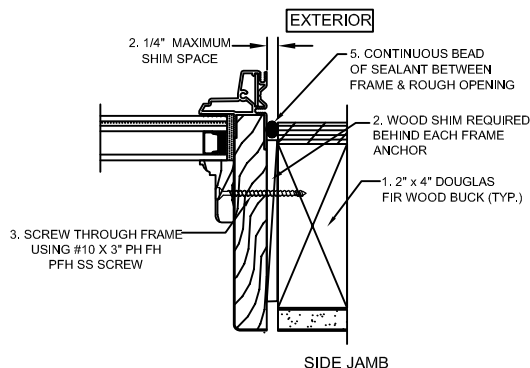

Casement Horizontal Section

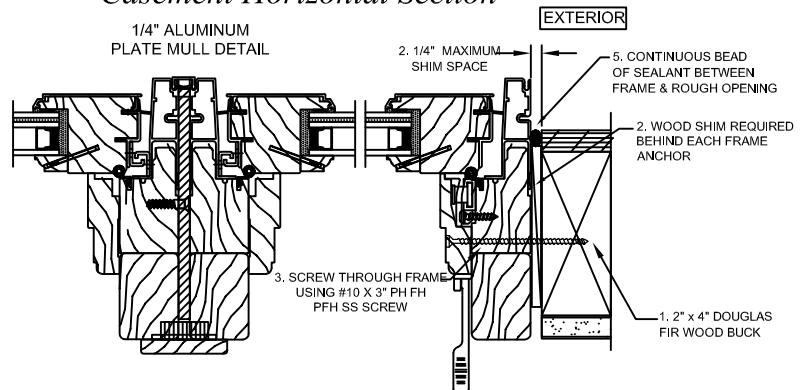

Installation requirements may vary in particular locations and in other types of construction. Proper installation is essential, and Sierra Pacific Windows, recommends consultation with an AAMA Certified Installer, or other qualified, registered building professional before installation of any Sierra Pacific product. Proper installation of Sierra Pacific products is the responsibility of the installer. Sierra Pacific is not responsible for proper installation. Sierra Pacific is not responsible for the design of, conditions in, or performance of building construction beyond the perimeters of the Sierra Pacific units. Sierra Pacific is not responsible for proper integration of the Sierra Pacific units with the weather-repellent systems of the building.

Installation requirements may vary in particular locations and in other types of construction. Proper installation is essential, and Sierra Pacific Windows, recommends consultation with an AAMA Certified Installer, or other qualified, registered building professional before installation of any Sierra Pacific product. Proper installation of Sierra Pacific products is the responsibility of the installer. Sierra Pacific is not responsible for proper installation. Sierra Pacific is not responsible for the design of, conditions in, or performance of building construction beyond the perimeters of the Sierra Pacific units. Sierra Pacific is not responsible for proper integration of the Sierra Pacific units with the weather-repellent systems of the building.