



ROOF FLASHING INSTALLATION INSTRUCTION

1. SELECT APPROPRIATE SIZE FLASHING FOR EACH VENT PIPE THROUGH ROOF.
2. INSTALL FLEXIBLE COLLAR* OVER PIPE.
3. PUSH DOWN UNTIL BASE LIES FLUSH ON ROOFTOP.
4. NAIL FLASHING ONLY WHERE FUTURE COURSES OF SHINGLES WILL COVER.

***CAUTION:**

DO NOT USE PETROLEUM BASE MASTICS, SEALING COMPOUNDS OR PAINT ON FLEXIBLE COLLAR PORTION, OR ON PLASTIC BASE OF HARD PLASTIC BASE AND ALL FLEXIBLE ROOF FLASHINGS.

COLLAR HEAT RATING:
180°F CONTINUOUSLY
225°F INTERMITTENTLY
UP TO 30-MINUTES

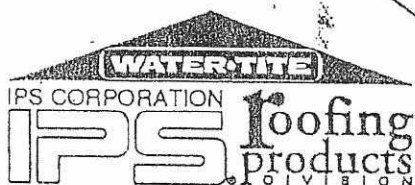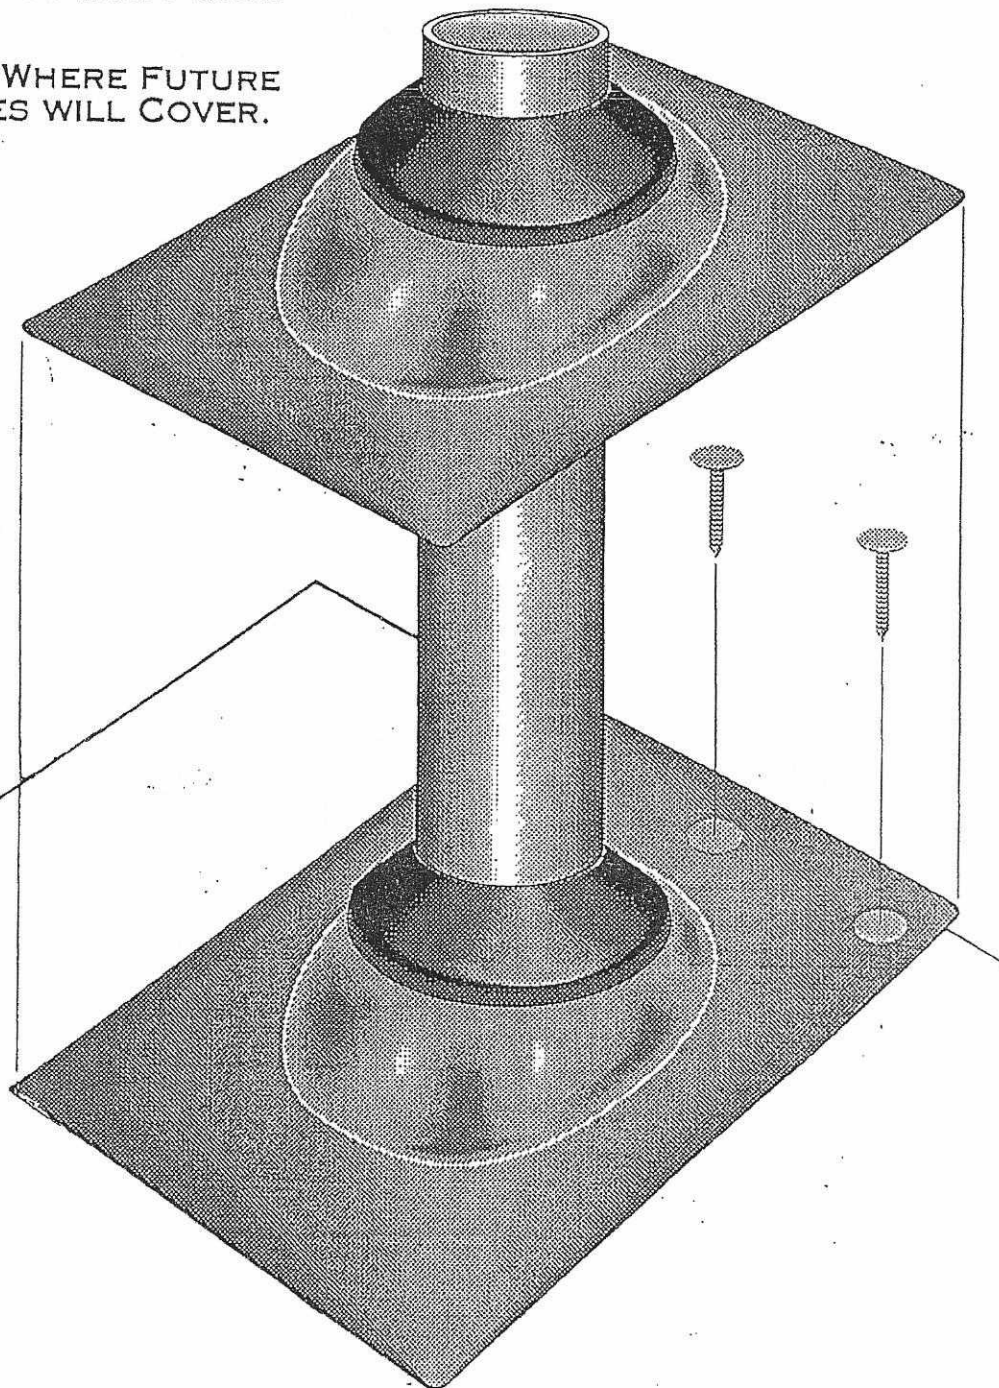

202 Industrial Park Lane, P.O. Box 220, Collierville, TN 38027 • TEL: (901) 853-5001 • FAX: (901) 853-5008 • WATS: (800) 888-8312