

ROOF FLASHING INSTALLATION INSTRUCTION



1. SELECT APPROPRIATE SIZE FLASHING FOR EACH VENT PIPE THROUGH ROOF.
2. INSTALL FLEXIBLE COLLAR* OVER PIPE.
3. PUSH DOWN UNTIL BASE LIES FLUSH ON ROOFTOP.
4. NAIL FLASHING ONLY WHERE FUTURE COURSES OF SHINGLES WILL COVER.

***CAUTION:**

DO NOT USE PETROLEUM BASE MASTICS, SEALING COMPOUNDS OR PAINT ON FLEXIBLE COLLAR PORTION, OR ON PLASTIC BASE OF HARD PLASTIC BASE AND ALL FLEXIBLE ROOF FLASHINGS.

COLLAR HEAT RATING:
180°F CONTINUOUSLY
225°F INTERMITTENTLY
UP TO 30 MINUTES

FOR USE WITHIN 3000
FEET OF THE COAST,
FASTENERS MUST COMPLY
WITH FBC TABLE 1711.1
OR FRC TABLE R332.1

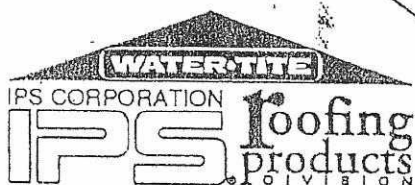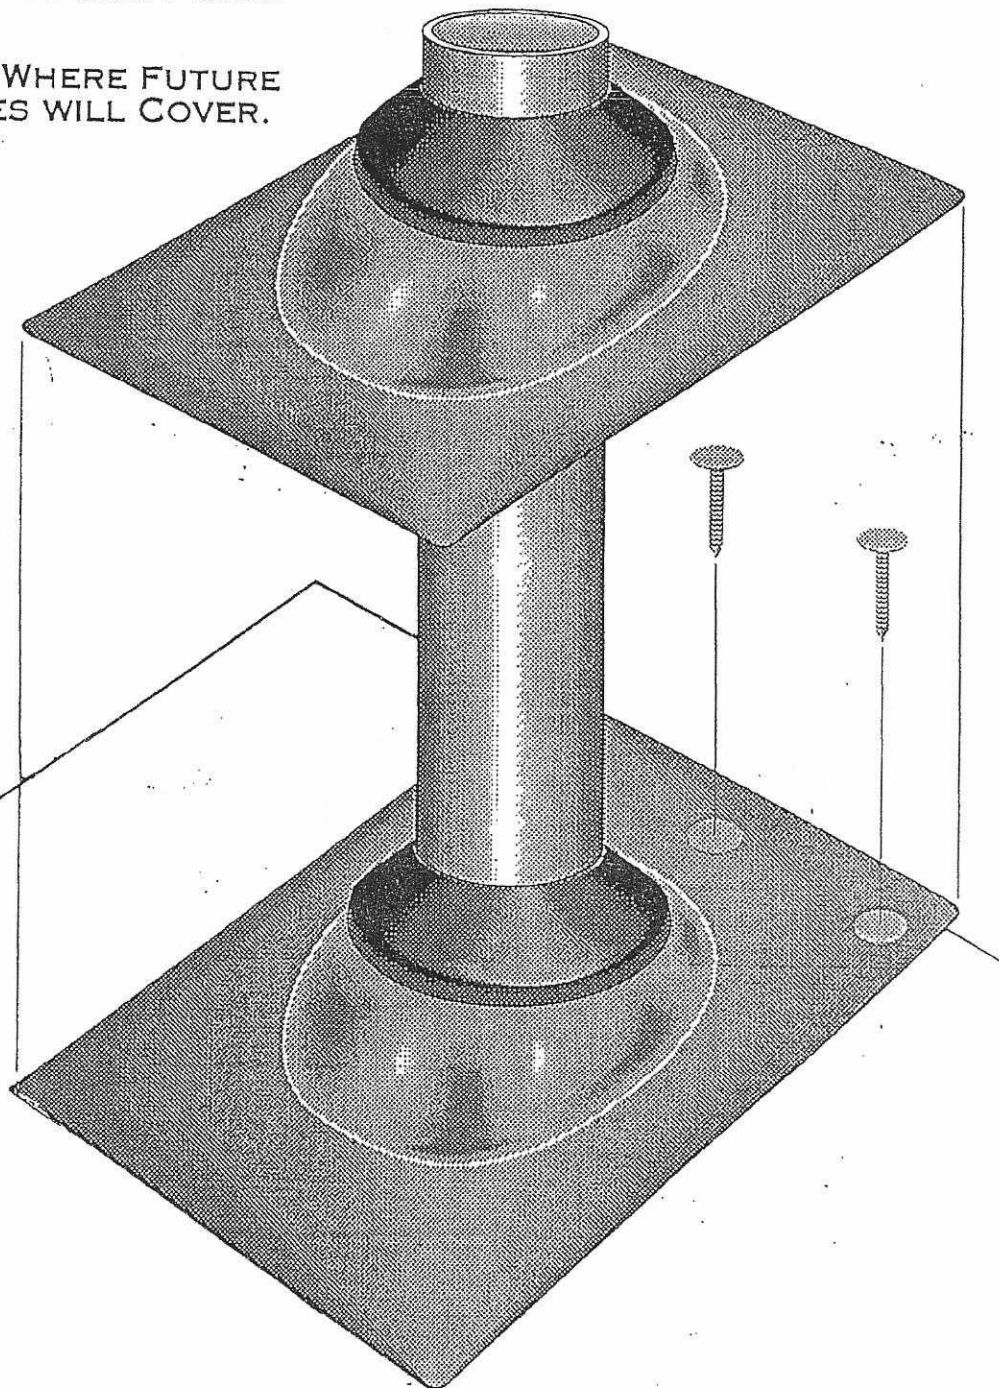

202 Industrial Park Lane, P.O. Box 220, Collierville, TN 38027 • TEL: (901) 853-5001 • FAX: (901) 853-5008 • WATS: (800) 888-8312