



Wood Direct Glazed
Fixed Window, Single Unit
Thru Brickmould Installation / Non-Impact

TEST REPORT SUMMARY:

- SINGLE UNIT, MAXIMUM BASIC UNIT FRAME SIZE:
96" (2438mm) x 75" (1905mm)
- OVERALL DESIGN PRESSURE: ± 25.06 psf
- STRUCTURAL TEST PRESSURE: ± 37.59 psf
- RATING: LC-PG 25

CCL Listing# 42-H-495.05-.09

Intertek Test Report# L8516.01-901-44

Wood Direct Glazed, Fixed Window
Brickmould Installation / WDMA Instructions / Non-Impact

SHEET: 1 OF 2

FL 41862

UPDATED: 1/03/2023

DRAWN BY: K.E.

INSTALLATION NOTES:



1. USE 2" x _ PINE FOR ROUGH OPENING
- PLACE WOOD SHIMS EVERY 6-10" AT SILL AND SIDE JAMBS
2. 1/4" MAXIMUM SHIM SPACE AT HEAD, SILL AND EACH JAMB
3. APPLY UNITS (FACTORY APPLIED) FLASHING PAPER FLAT AGAINST THE WALL SHEATHING. APPLY BUILDING PAPER OVER UNIT FLASHING AND RIGID FLASHING.
4. INSTALL #8 X 3" FAT HEAD SCREWS SPACED APPROXIMATELY 4" FROM EACH CORNER AND 13-14" ON CENTER THEREAFTER, THROUGH THE BRICKMOULD AND INTO THE FRAMING MATERIAL
 - SILICONE SEAL OVER SCREW HEADS.
 - FULLY SEAL ALL GAPS AT EACH CORNER OF THE UNIT AND THE ROUGH OPENING
5. 1" MINIMUM FASTENER EMBEDMENT INTO FRAMING MATERIAL
6. MAXIMUM WINDOW SIZE: B.U.S. (Basic Unit Size) =
96" (2438mm) x 75" (1905mm)
7. THIS INFORMATION DOES NOT APPLY TO MULLED UNITS

GENERAL INSTALLATION NOTES:

- Check rough opening for proper size, plumb, level and square.
- Make all necessary adjustments to ensure rough opening is plumb, level & square.
- Sill must be flat, level and capable of supporting the weight of the unit.
- Opening must allow a maximum of 1/4" shim space at head, sill and jambs.
- Consult full installation instructions found on the Sierra Pacific Windows web site, www.sierrapacificwindows.com, for all recommended installation procedures.
- Wood buck, framing, fasteners, sealant and all wall system materials are provided by others

FLASHING

- For units that have to meet a specific DP (Design Pressure) rating, any kind of building wrap must be folded and taped away from each rough opening before the unit is installed.
- Once unit is installed and flashed properly, the building wrap must be reapplied and trimmed flush with the unit's brickmould. A bead of sealant must be placed along the seam joint of the building wrap and the unit. Tape the corner cuts in the building wrap. See full window installation brochure for complete flashing details.

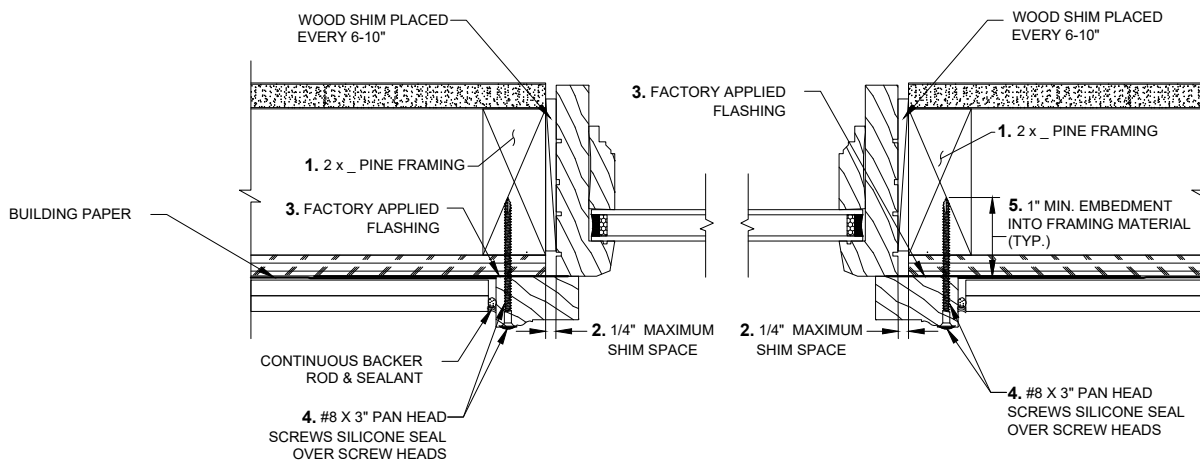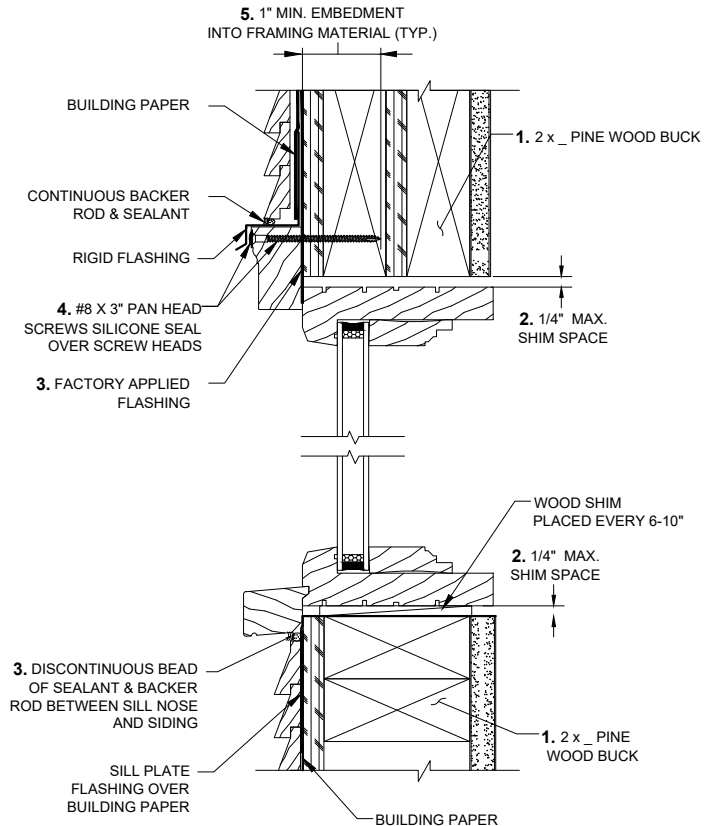

Installation requirements may vary in particular locations and in other types of construction. Proper installation is essential, and Sierra Pacific Windows, recommends consultation with an AAMA Certified Installer, or other qualified, registered building professional before installation of any Sierra Pacific product. Proper installation of Sierra Pacific products is the responsibility of the installer. Sierra Pacific is not responsible for proper installation. Sierra Pacific is not responsible for the design of, conditions in, or performance of building construction beyond the perimeters of the Sierra Pacific units. Sierra Pacific is not responsible for proper integration of the Sierra Pacific units with the weather-repellent systems of the building.



**SIERRA
PACIFIC**
WINDOWS


Wood Direct Glazed
Fixed Window, Single Unit
Thru Brickmould Installation / Non-Impact

TEST REPORT SUMMARY:

- SINGLE UNIT, MAXIMUM BASIC UNIT FRAME SIZE:
96" (2438mm) x 75" (1905mm)
- OVERALL DESIGN PRESSURE: ± 25.06 psf
- STRUCTURAL TEST PRESSURE: ± 37.59 psf
- RATING: LC-PG 25

CCL Listing# 42-H-495.05-.09	Intertek Test Report# L8516.01-901-44		
Wood Direct Glazed, Fixed Window Brickmould Installation / WDMA Instructions / Non-Impact			
SHEET: 2 OF 2	FL41862	UPDATED: 1/03/2023	DRAWN BY: K.E.

**ELEVATION SHOWING
FASTENER LOCATION & SPACING
(TYP.)**

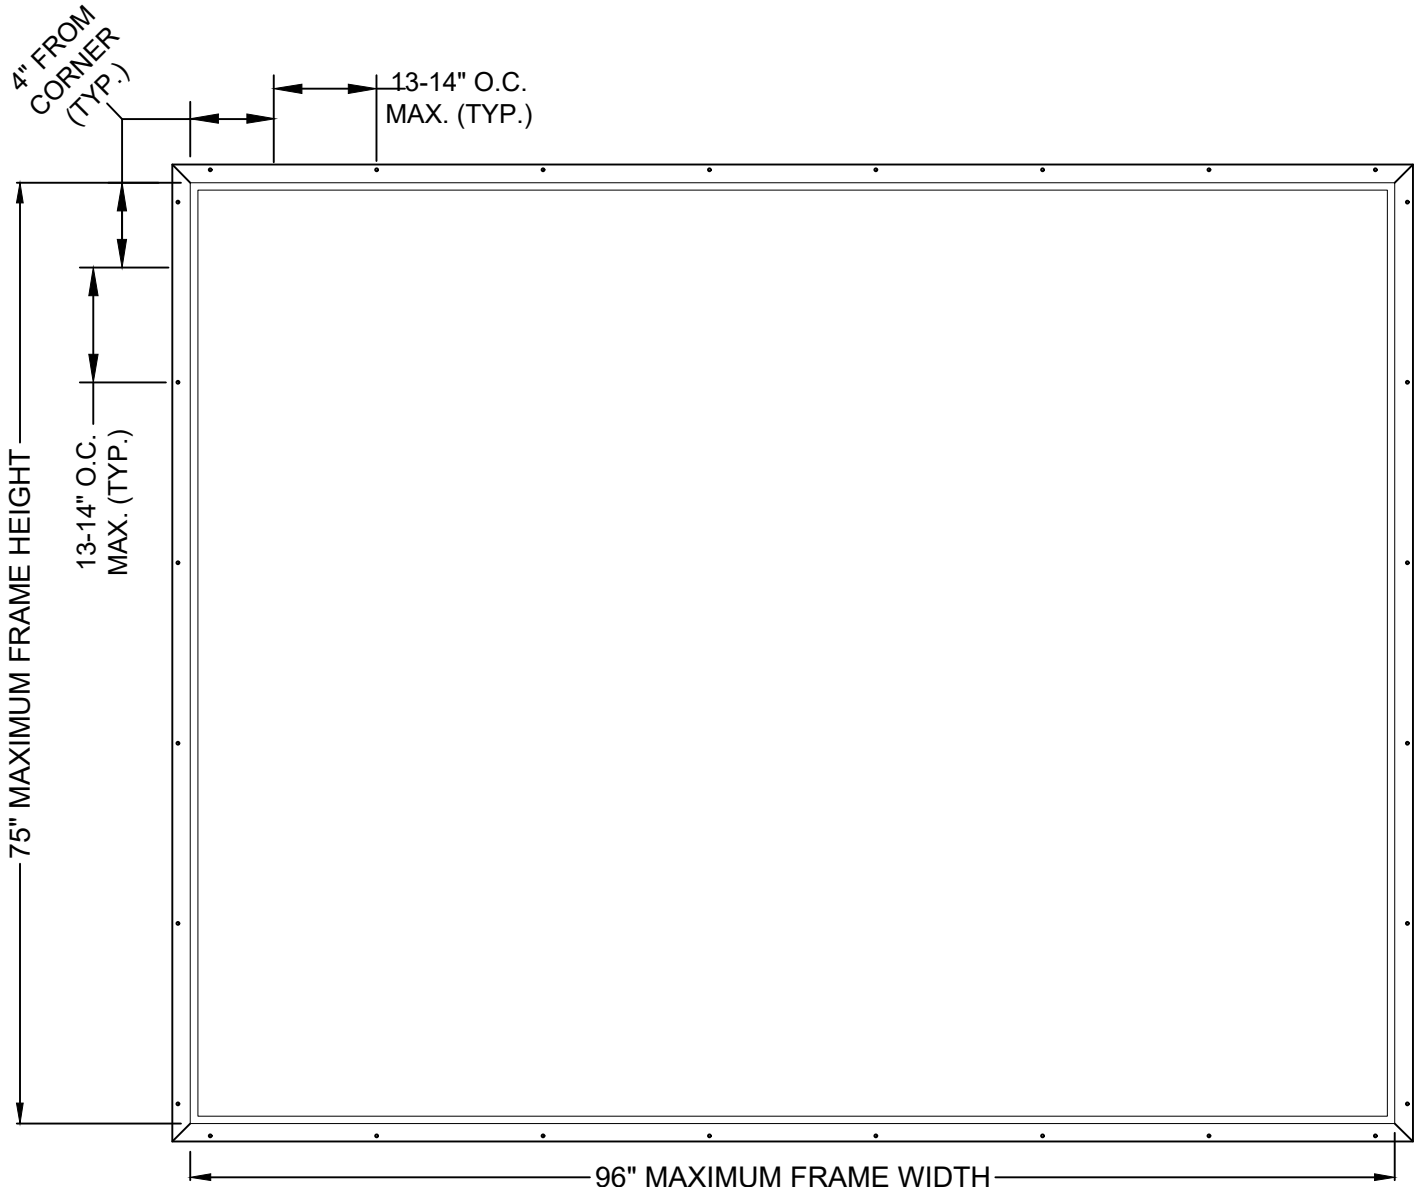

MAX. WINDOW SIZE
BASIC UNIT FRAME =
96" (2438mm) x 75" (1905mm)

Installation requirements may vary in particular locations and in other types of construction. Proper installation is essential, and Sierra Pacific Windows, recommends consultation with an AAMA Certified Installer, or other qualified, registered building professional before installation of any Sierra Pacific product. Proper installation of Sierra Pacific products is the responsibility of the installer. Sierra Pacific is not responsible for proper installation. Sierra Pacific is not responsible for the design of, conditions in, or performance of building construction beyond the perimeters of the Sierra Pacific units. Sierra Pacific is not responsible for proper integration of the Sierra Pacific units with the weather-repellent systems of the building.