

**Corbin
Russwin**

Lever Release
PATENTED LEVER DESIGN
PATENT NO.
4920773

B Install Lockbody → (3)

C Install Inside Trim
→ (4) → (5) → (6) → (7)

A

B

C

Line-up Notches

Latch Ears Must Slide Into Housing

Corbin Russwin

In U.S.: Corbin Russwin, Inc.
225 Episcopal Road
Berlin, CT 06037-4004
www.corbin-russwin.com

**Corbin
Russwin** 

In U.S.: Corbin Russwin, Inc.
225 Episcopal Road
Berlin, CT 06037-4004
www.corbin-russwin.com

Phone: 888-607-5703
Fax: 800-659-7293

In Canada: Yale-Corbin Canada LTD.,
6940 Edwards Boulevard,
Mississauga, ONT L5T 2W2
www.yalecorbin.on.ca




If lockset does not operate properly, remove lockset from door and check door preparation.

Door & Frame Preparation

Mark door

Locate and mark horizontal center line at desired height above floor. Fold template over edge of door, centering on horizontal line. Mark centers of holes at proper backset. Mark both sides of the door.

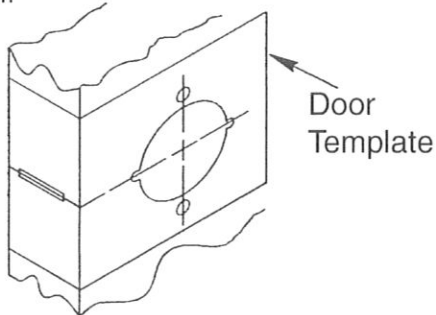


Note:

Be sure to verify backset before marking & drilling door.

Drill door


- 2-1/8" (54mm) hole thru door.** Cut ANSI tab notches as shown on template (except CL3350 and CL3370).
- Drill 1" (25mm) hole in edge of door.** Cut out for latch front 5/32" (4mm) deep. 1-1/8" (29mm) wide x 2-1/4" (57mm) high. Check latch unit for proper width front and square or round corners (except CL3350 and CL3370).
- Drill two (2) 11/32" (8mm) Dia. holes through door for all functions.**

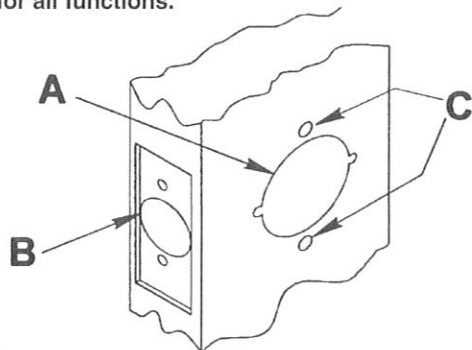

Caution:

To avoid splintering wood doors, drill holes from both sides.

Install Strike


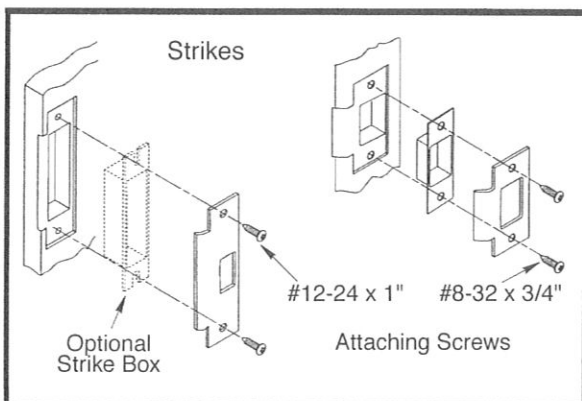


Adjust Lock for Door Thickness

Adjust lock to door thickness if other than 1-3/4" (44mm) doors*. (Lock pre-set from factory for 1-3/4" door).

- Remove outside lever (see page 4)
- Slide off outside cassette assembly.
- Rotate rose liner to adjust lock to fit door thickness, so that the distance (Dim. "A") from the inside of the liner to the centerline of the retractor is one half of the thickness of the door (see chart).
- Re-assemble outside cassette assembly onto chassis assembly (except CL3380 and CL3381 functions).

***Note: For doors more than 2", verify lock package is labeled with "D214" option.**

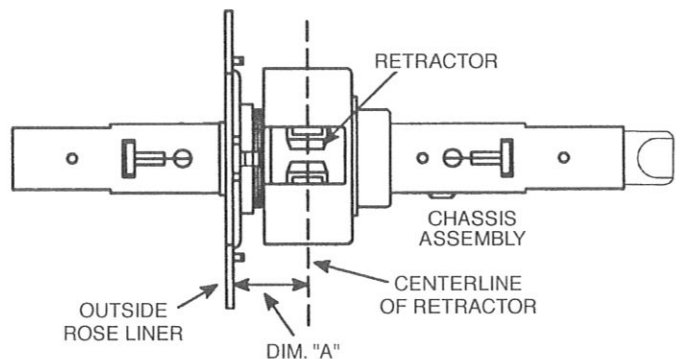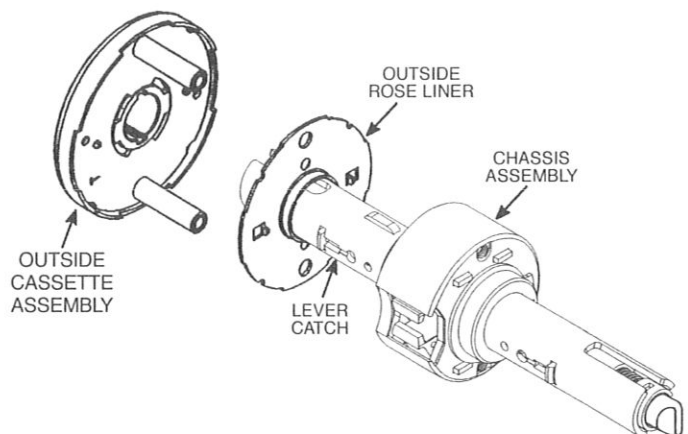


Door Thickness*	"A"
1-3/4"	7/8"
2"	1"
2-1/4"	1-1/8"

Cylinder Installation

To Install Interchangeable Core (With lever already installed on lock)

A. Install Tailpiece

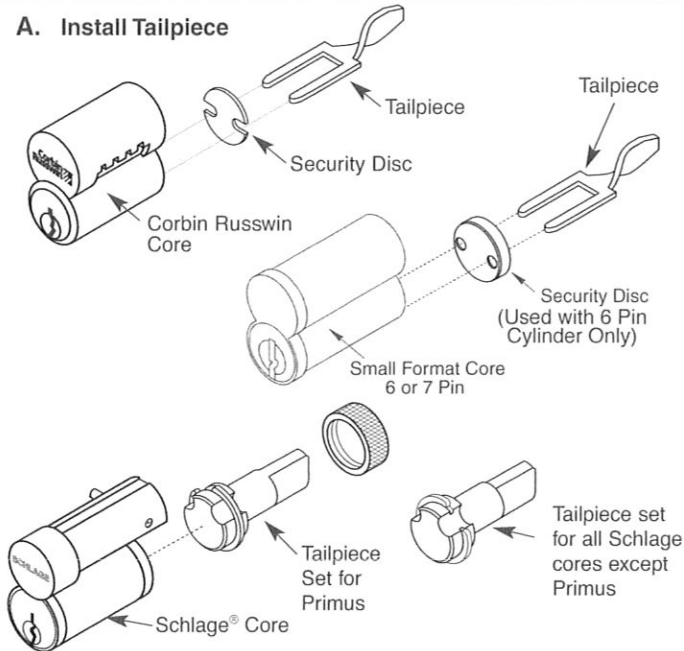

- B. Insert key marked CONTROL and turn clockwise approximately 15 degrees. See Figure 2.

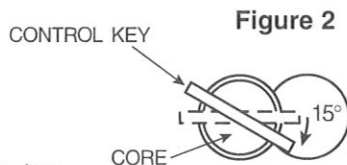


Figure 2

- C. Insert core into lever and return key to its original horizontal position locking core in place. See Figure 3.

INTERCHANGEABLE CORE
LEVER ASSEMBLY

- D. Withdraw key. Test lockset for correct function with operating key.
- E. Control key has no further use in lockset installation and must be safeguarded for return to Security personnel when installation is complete.


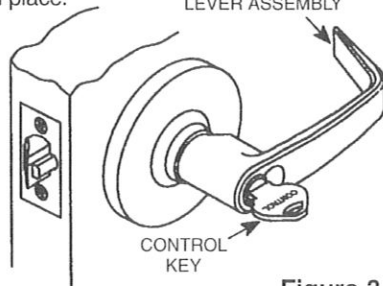


Figure 3

CL3355 Classroom Function Timing Before installing cylinder:

- Turn Cam so points are up and down, 6 o'clock and 12 o'clock (See Below)

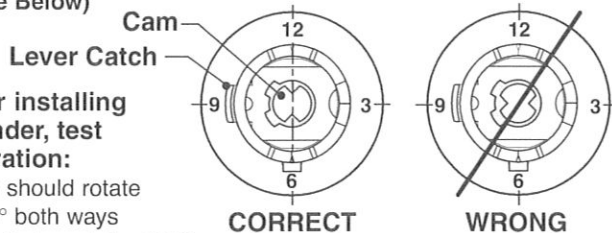

After installing cylinder, test operation:

- Key should rotate 180° both ways
- If cylinder rotates 360°, remove cylinder and check cam orientation.

To Remove Interchangeable Core

- A. Insert key marked CONTROL and turn clockwise approximately 15 degrees. See Figure 4.
- B. Pull core and tailpiece completely out of lever.


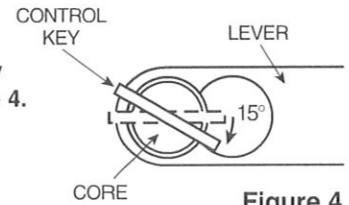


Figure 4


Install Standard Cylinder

Make sure lock is unlocked.

- A. Make sure cylinder tailpiece is aligned in same direction as cylinder bible. Slide cylinder all the way into lever.
- For 6-pin cylinder: Fold retainer at hinge and press fit retainer halves together as shown.
 - For 7-pin cylinder: Break retainer at hinge and discard spacer section. Also remove black cylinder spacer from inside of chassis rollback for clearance.

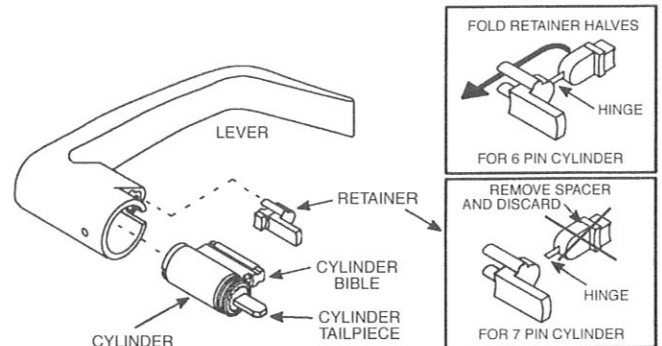


Standard Cylinder Tailpieces

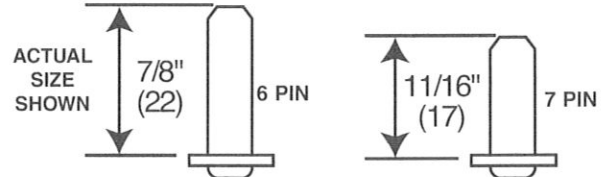

Dimensions are given in inches (mm).






Corbin Russwin conversion kit for Schlage® cylinders with CL3300 lockset.

- Remove threaded collar and Schlage® tailpiece.

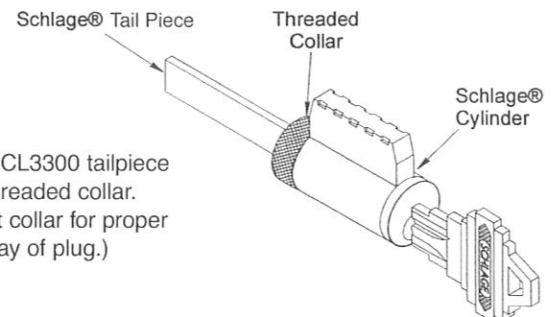

- Install CL3300 tailpiece with threaded collar. (adjust collar for proper end play of plug.)

Lever Removal and Installation

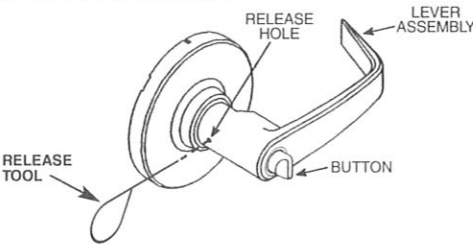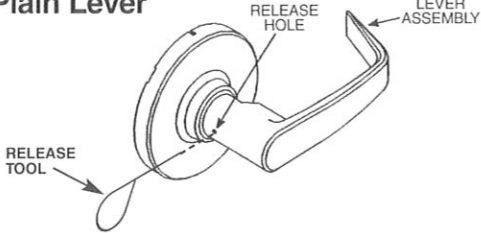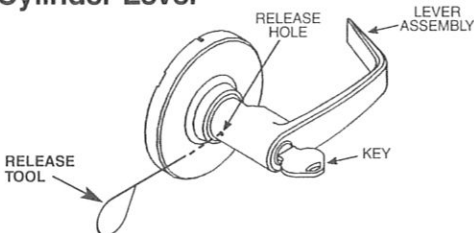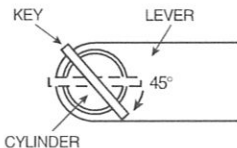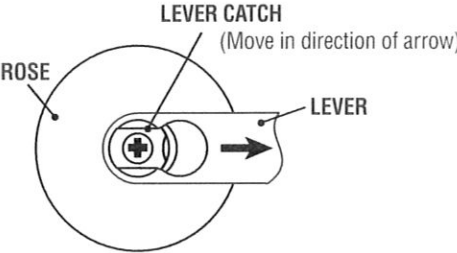LEVER STYLE	REMOVAL	INSTALL
Push / Turn Button 	Hold in button, push release tool into release hole, remove lever	Push button in, slide lever on. <i>Make sure lever will not pull off</i>
Plain Lever 	Push release tool into release hole, remove lever	Slide lever over lever catch pull on lever. <i>Make sure lever will not pull off</i>
Cylinder Lever 	Rotate key 45° clockwise (from shed position), Push in release tool into release hole, remove lever 	Insert key and rotate 45° (from shed position), slide lever on. <i>Make sure lever will not pull off</i>
Interchangeable Core Lever 	Remove cylinder and tailpiece, (see page 3) Use flat blade screwdriver to pull back lever catch, remove lever	Slide lever over lever catch <i>Make sure lever will not pull off</i>

Optional Installations

For CL3380 & CL3381 Function Only.

For CL3390 & CL3391 Function Only.

