


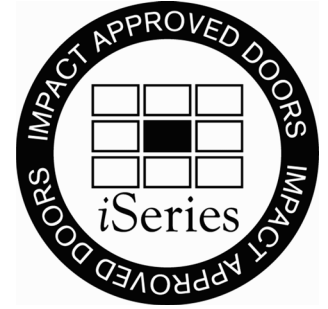

Supplemental Instructions


Overlay Carriage House Doors

 CAUTION	Higher wind pressures and larger doors require additional reinforcement. Premature failure of door system may result from improper application. See chart in lower left corner of drawing sheet one for the approved wind pressures and door sizes.
 WARNING	These supplemental instructions do not contain basic door installation steps and related safety information. Failure to follow basic installation steps and related safety information may result in injury or death. Door installers must follow a primary instruction manual for basic door installation steps and related safety information.

The correct selection of door and framing materials in adherence with local building code directives is the responsibility of the building owner/designer. Use of a reinforced garage door does not constitute automatic compliance with any building code. Local building code officials determine compliance criteria.

A locking system must be installed if the door is not electrically operated.

See drawing for stop molding requirements, when door is not more than 1" wider than opening. When using stop molding, secure molding with minimum 8d nails or 2-1/2" long screws.

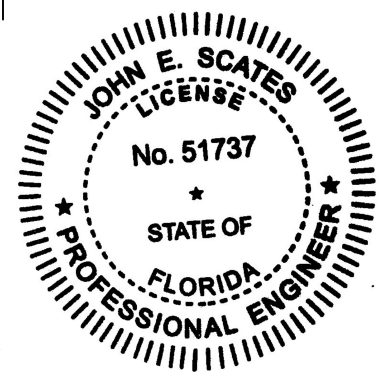

John E. Scates, P.E.
2560 King Arthur, Ste 124-54
Lewisville, Texas 75056
TXPE 56308, F-2203
Florida P.E. # 51737

Professional Engineer's seal
provided only for verification of
windload construction details

Printed Copies of this document are not
considered signed and sealed and the signature
must be verified on any electronic copies

Digitally signed by John E Scates
Date: 2023.10.06 16:05:42 -05'00'

Copyright 2020 C.H.I. Overhead Doors

For Use With Drawing Number Z10i-10-04507


Strut Placement

Section Number	Door Height						
	6'-0" to 8'-0"	8'-3" to 10'-0"	10'-3" to 12'-0"	12'-3" to 14'-0"	14'-3" to 16'-0"	16'-3" to 18'-0"	18'-3" to 20'-0"
10	N/A	N/A	N/A	N/A	N/A	N/A	1 at Detail A 1 at Detail B
9	N/A	N/A	N/A	N/A	N/A	1 at Detail A 1 at Detail B	1 at Detail B
8	N/A	N/A	N/A	N/A	1 at Detail A 1 at Detail B	1 at Detail C 1 at Detail B	1 at Detail C 1 at Detail B
7	N/A	N/A	N/A	1 at Detail A 1 at Detail B	1 at Detail B	1 at Detail B	1 at Detail B
6	N/A	N/A	1 at Detail A 1 at Detail B	1 at Detail B	1 at Detail C	1 at Detail C	1 at Detail C
5	N/A	1 at Detail A 1 at Detail B	1 at Detail B	1 at Detail C 1 at Detail B	1 at Detail C 1 at Detail B	1 at Detail C 1 at Detail B	1 at Detail C 1 at Detail B
4	1 at Detail A 1 at Detail B	1 at Detail B	1 at Detail C 1 at Detail B	1 at Detail B	1 at Detail C 1 at Detail B	1 at Detail C 1 at Detail B	1 at Detail C 1 at Detail B
3	1 at Detail B	1 at Detail C 1 at Detail B	1 at Detail B	1 at Detail C 1 at Detail B	1 at Detail B	1 at Detail B	1 at Detail B
2	1 at Detail C	1 at Detail C	1 at Detail C	1 at Detail C	1 at Detail C	1 at Detail C	1 at Detail C
1	1 at Detail C 1 at Detail A	1 at Detail C 1 at Detail A	1 at Detail C 1 at Detail A	1 at Detail C 1 at Detail A	1 at Detail C 1 at Detail A	1 at Detail C 1 at Detail A	1 at Detail C 1 at Detail A

Push Nut Detail (use on all rollers)

use 3/8" I. D. on bottom fixture roller stem

use 7/16" I. D. on end hinge and top fixture roller stems

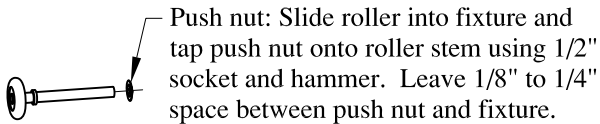


Track Bracket Spacing

Track bracket spacing shown for doors up to four sections high. Additional door sections may be added for maximum door height depicted on line drawing. Track brackets must be added (per track) for each section and spaced at a distance not greater than the corresponding section height (see line drawing for required quantities).


	Nominal Spacing
F	16"
E	14"
D	24"
C	24"
B	6-1/2"
A	3-1/2"

+/- 3" tolerance

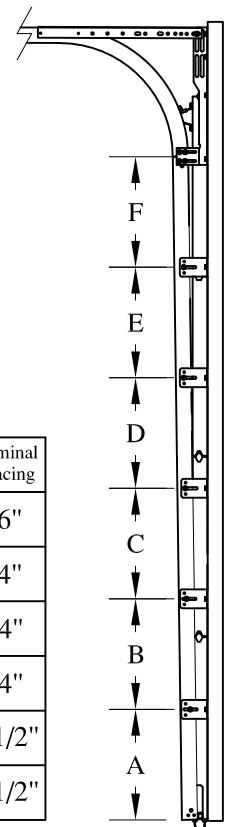


For Use With Drawing Number
Z10i-10-04507


Strut Placement Detail

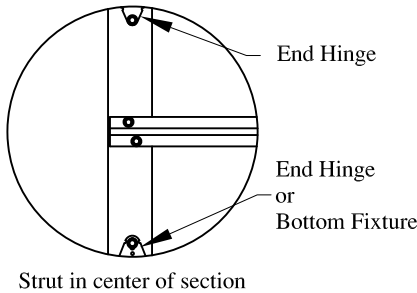


Detail A

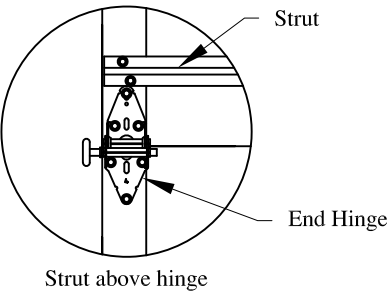

Detail B


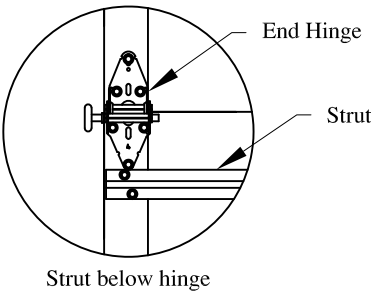


Detail C

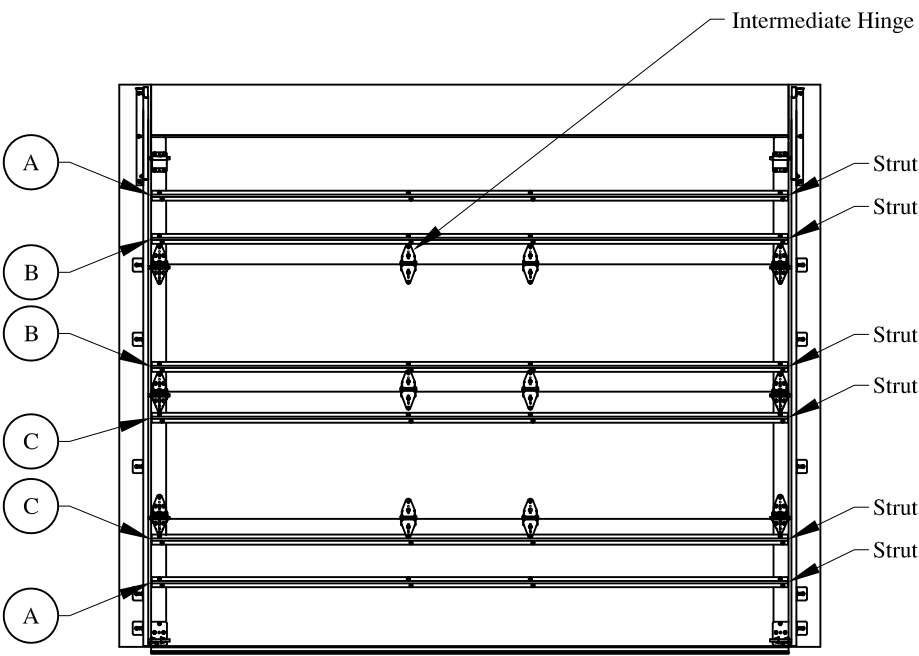

6 Struts


Glazing Options: No Glazing Options are available.

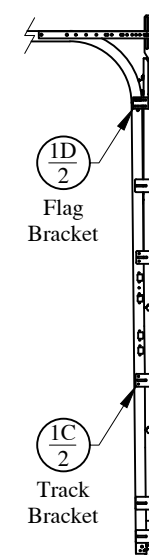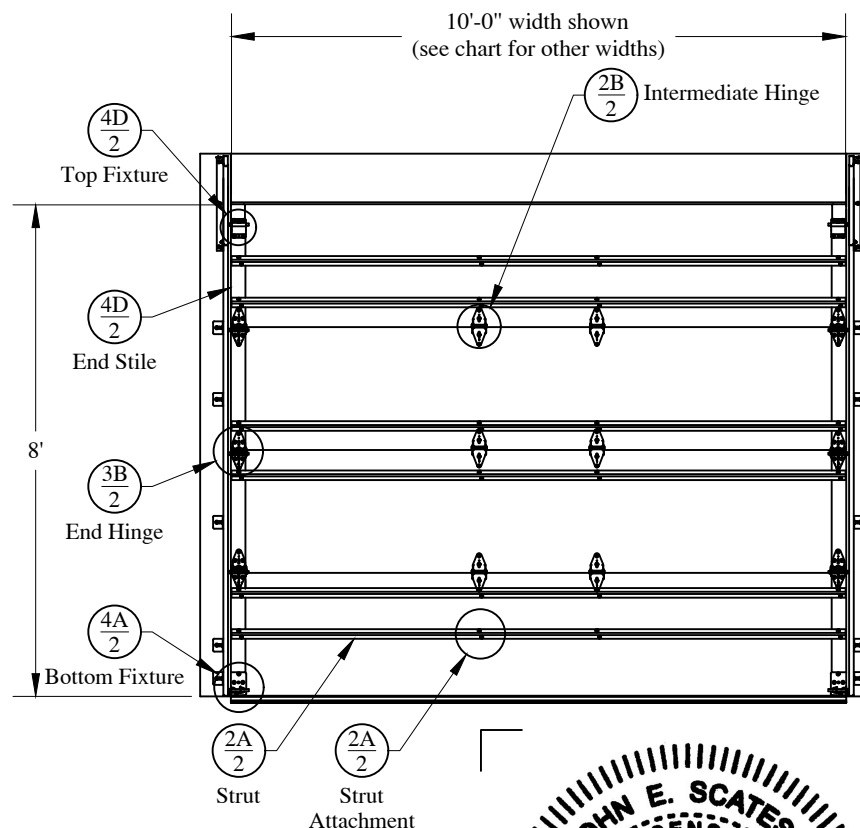

Door Height	Section Quantity	Strut Quantity	Trk Brkt Per Side
6'-0" to 8'-0"	4	6	5
8'-3" to 10'-0"	5	8	6
10'-3" to 12'-0"	6	9	7
12'-3" to 14'-0"	7	11	8
14'-3" to 16'-0"	8	12	9
16'-3" to 18'-0"	9	14	11
18'-3" to 20'-0"	10	15	12

Track bracket quantities shown are for use with grade 2 or better Southern Yellow Pine. Refer to Jamb Attachment Detail supplemental instructions for usage of alternate jamb materials.

Supporting structural elements shall be designed by a registered professional engineer for wind loads shown on this drawing. If door is not electrically operated, a lock must be installed.

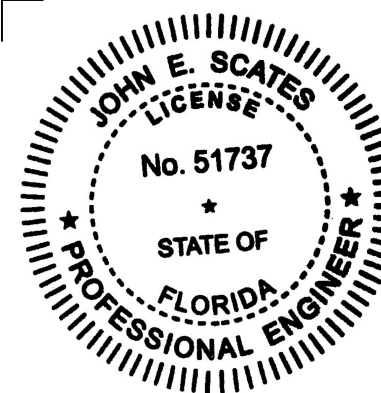

Professional Engineer's seal provided only for verification of windload construction details

Printed copies of this document are not considered signed and sealed and the signature must be verified on any electronic copies.

John E. Scates, P.E.
2560 King Arthur, Ste 124-54
Lewisville, TX 75056
TXPE 56308, F-2203
Florida P.E. # 51737

Complies with IBC/IRC 2018. Tested per ANSI/DASMA 108 and 115











Maximum door height: 20'-00"

Door has been tested for windborne debris.

Width	Design Pressure (PSF)	Stile Qty.
10'-00"	+49.9 / -56.7	2

C.H.I. OVERHEAD DOORS	SCALE	nts
	DATE	10-05-2023
Models Series: Overlay Carriage House		
C.H.I. Drawing: Z10i-10-04507		

Details on some views may have been omitted for clarity.

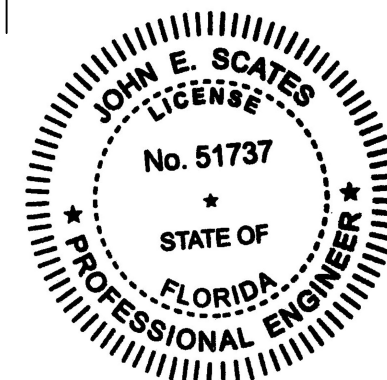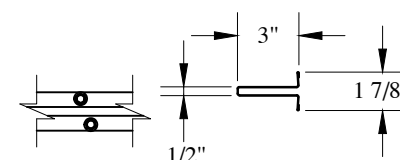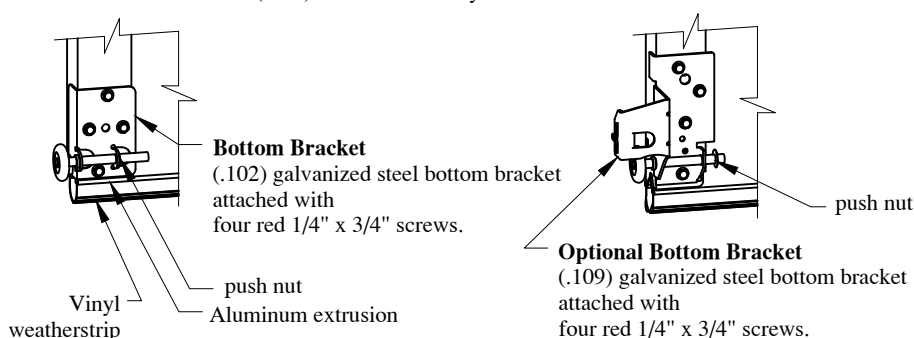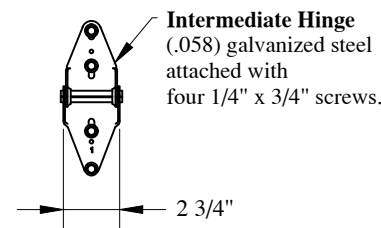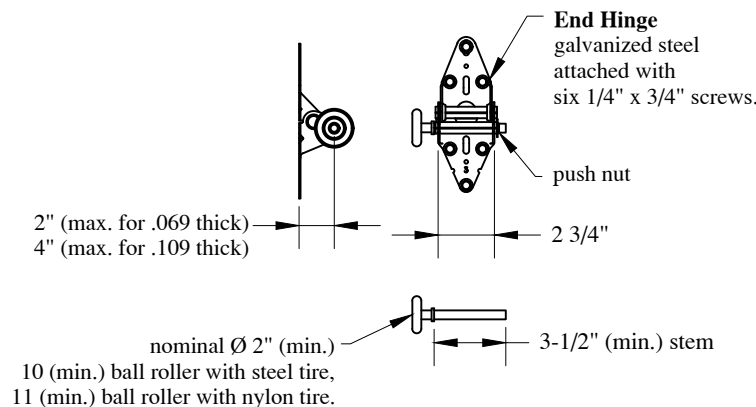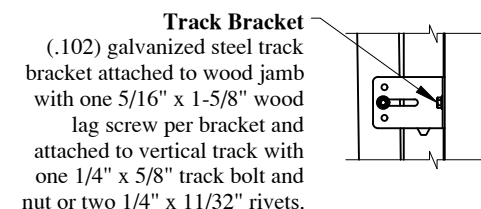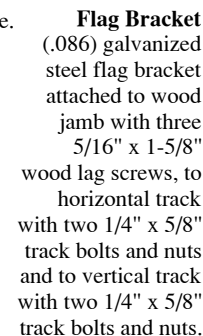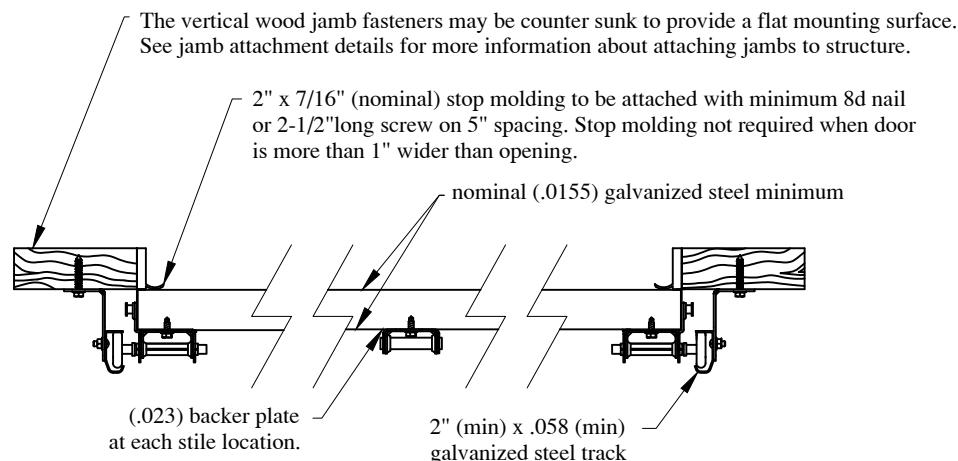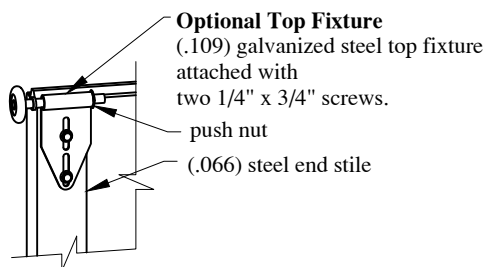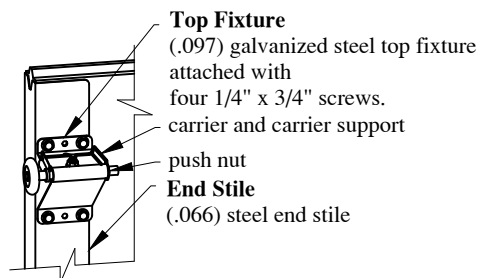

Professional Engineer's seal provided only for verification of windload construction details

John E. Scates, P.E.
2560 King Arthur, Ste 124-54
Lewisville, TX 75056
TXPE 56308, F-2203
Florida P.E. # 51737

C.H.I. Drawing	SCALE	nts
	DATE	10-05-2023
Models Series: Overlay Carriage House		
C.H.I. Drawing: Z10i-10-04507		
page 5 of 5		