

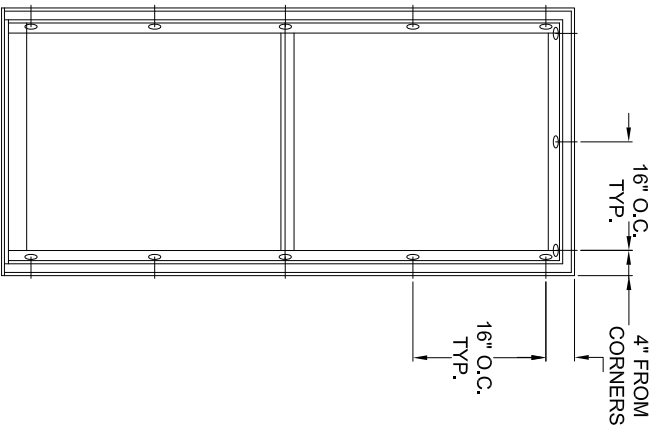


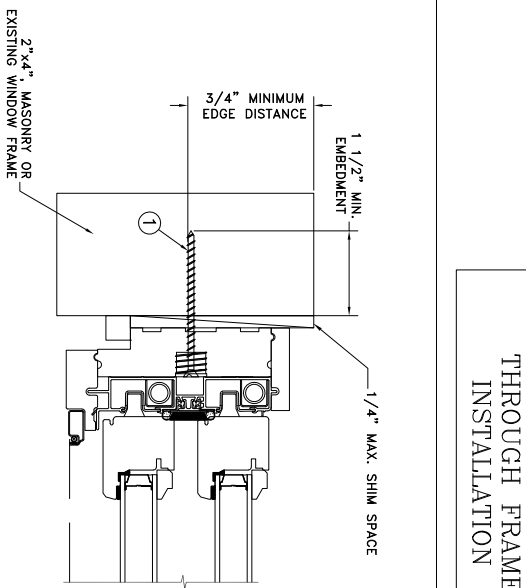

TYPICAL ELEVATION WITH FASTENER SPACING

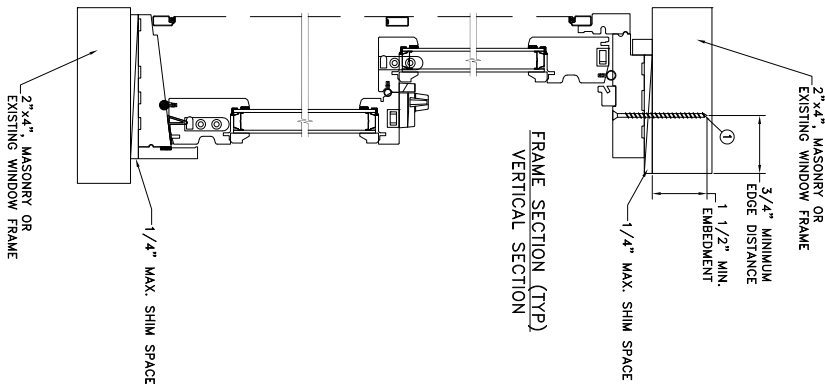

MAXIMUM FRAME	DP	IMPACT
37 3/8 x 80	+35/-40	NO

- Installed Fastener Schedule:**
- All windows: install corrosion resistant #8 fasteners no more than 4" from each corner and 16" o.c. through pre-drilled holes in the head and side jambs of the window. Fasteners must be long enough to penetrate at least 1-1/2" into framing members.

- General Notes:**
- The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
 - All glazing shall conform to ASTM E1300.
 - Use structural or composite shims where required.

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.

DISCLAIMER:
This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.

"AS TESTED"

DATE: 10/15/2019	DRAWN BY: J.HAWKINS	SCALE: NTS	TITLE: W2500 Wood Pocket Double Hung Window
CHECKED BY: S.PIEPER	APPROVED BY: D.STOKES	RECORD No.: D004803	
REPORT No.:	CAD DWG. No.: W2500WDPMDH C&T	REV.: A	SHEET 1 of 1

JELD-WEN 3737 LAKEPORT BLVD.
KLAMATH FALLS OR, 97601
PHONE: (800) 535-3936