


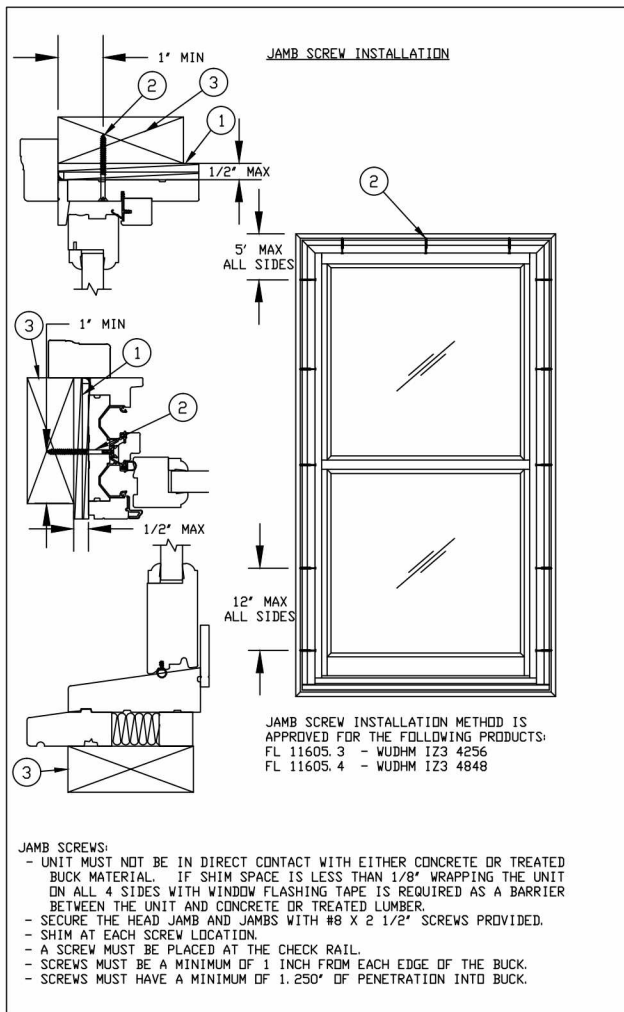

NOTES:

1. THIS PRINT IS FOR STRUCTURAL PERFORMANCE ONLY. FOR FLASHING & SEALING REQUIREMENTS, REFER TO THE INSTALLATION INSTRUCTIONS.
2. SHIMS:
- A SHIM MUST BE PLACED AT THE CHECK RAILS AND 4-6" FROM EACH CORNER.
 - ALL OTHERS MUST BE PLACED A MAX OF 12 INCHES APART.
3. HOLES FOR JAMB SCREWS ARE PREDRILLED AT SPECIFIED LOCATIONS. UNITS ARE SHIPPED WITH #8 X 2 1/2" GALVANIZED DECK SCREWS.
4. IF CHEMICALLY TREATED LUMBER IS USED FOR BUCK MATERIAL, FASTENERS INTO THE BUCK MUST BE A MINIMUM OF 0.90 OZ/FT² ZINC HOT DIPPED GALVANIZED OR STAINLESS STEEL TYPE 304 OR 316.

3	-----	2X WOOD BUCK BY OTHERS
2	-----	#8 X 2 1/2" DECK SCREW
1	-----	SHIM
ITEM NO	REF NO	DESCRIPTION

CHECKED:		WOOD TREATMENT SPEC:		 RESEARCH AND DEVELOPMENT BOX 100, WARROAD, MN 56763 WINDOWS&DOORS (218) 386-1430 FAX 386-4205	
APPROVED:		☐ TREAT ☐ DO NOT			
DWG CLASS: MISC		PRODUCT LINE:		WOOD ULTIMATE MAGNUM	
UNSPECIFIED TOLERANCES:		PRODUCT:		OPERATOR	
DECIMALS: .XX = ±.03 .XXX = ±.012		ANGLE: °.5 °		INSTALLATION FL 11605.3, 4	
FAB LINEALS: + .125 - .000		MATERIAL: N/A		SIZE: DRAWING NO: 00059325	
				SCALE: 1:4 DATE: 12/30/2011 DRAWN BY: Skip Borneman	
				SHEET: 1 OF 1	