



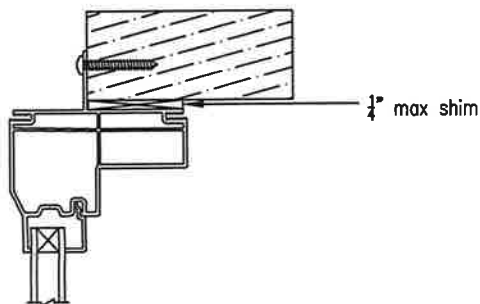



Fasten in 2 By Wood Frame with #8 x 1 1/4" Screw or Larger, 2" from Each Tip of Fin and Spaced Every 12"(Max) Between Fasteners. Apply Silicone Between Frame Nail Fin and 2 By Wood Around Full Perimeter Before Installation. Make Sure that the Sill is Level and that Jambes are Plumb.

Note: Fasteners require minimum of 1" embedment into framing members. Fasteners must be a minimum of 1/2" from edge of rough opening.

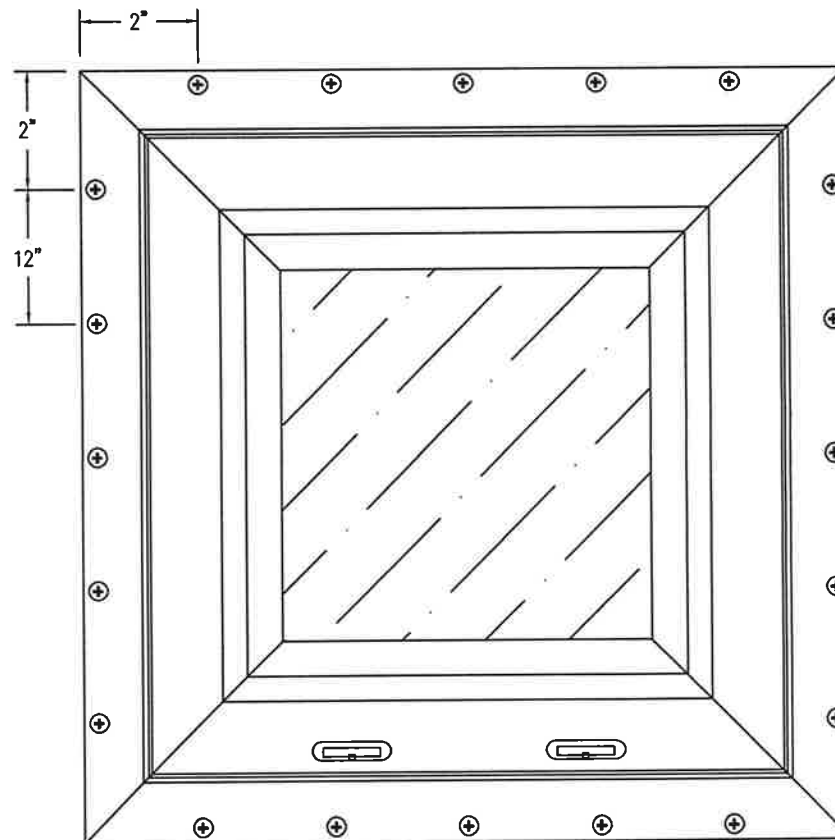

MAXIMUM SIZE: 48" X 84" DP +/- 80

Apply Silicone Between Frame Nail Fin and 2 By Wood Around Full Perimeter

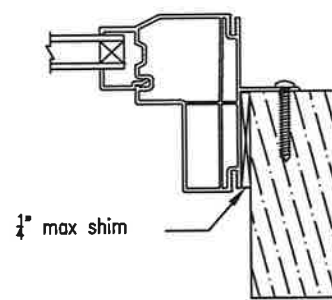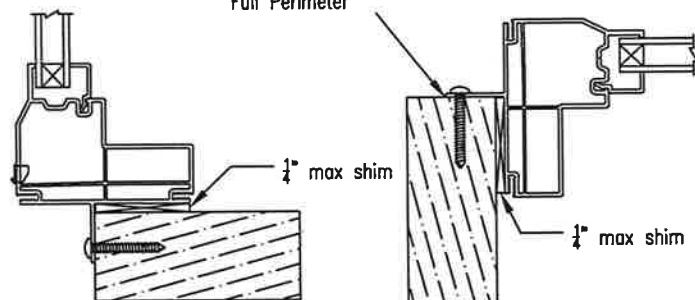

Krestmark Ind. L.P.
3950 Bastille Rd. Suite 100
Dallas, Texas 75212

200/275 Series P. W.
Installation Instructions