



Fasten in 2x Wood Frame with #8 x 1 1/4" Screw or Larger, 2" from Each Tip of Fin and Spaced Every 12"(Max) Between Fasteners. Silicone Between Frame Nail Fin and 2x Wood.



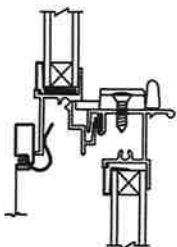


Make Sure that Window is in the Closed and Locked Position During Installation. Make Sure that the Sill is Level and that Jambs are Plumb.

NOTE: Installation screws should be long enough for a 1" embedment into framing members and be located a minimum of 3/8" from edge of rough opening.

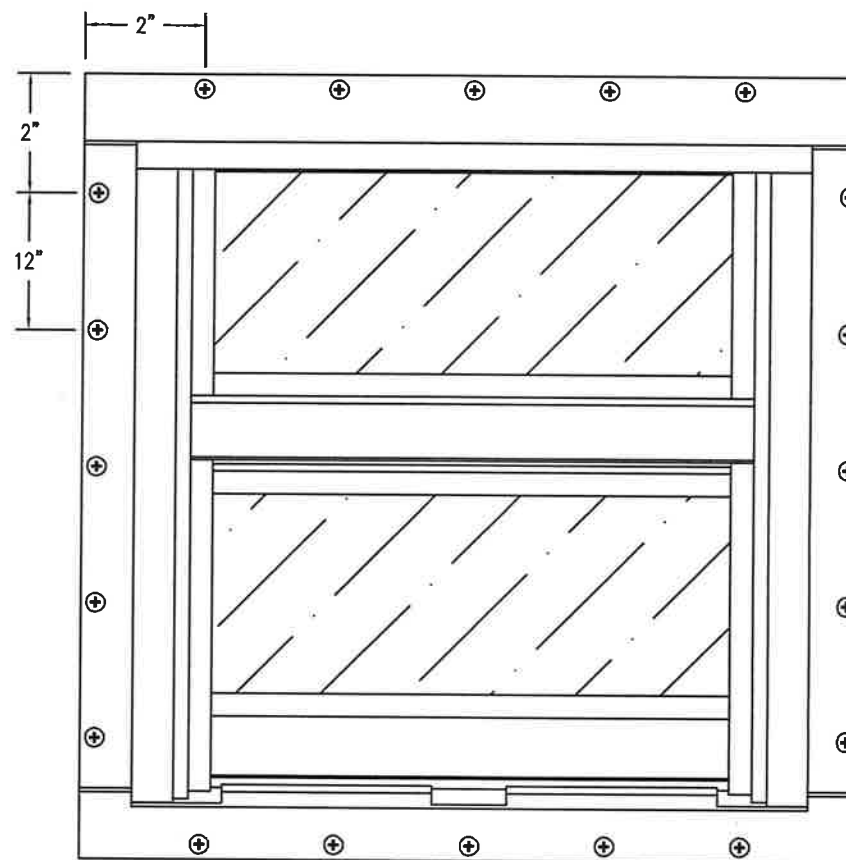

MAXIMUM SIZE: 48" X 72" DP +/- 40

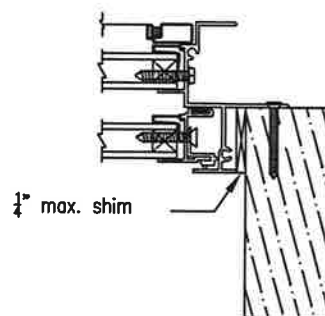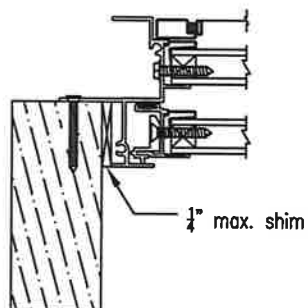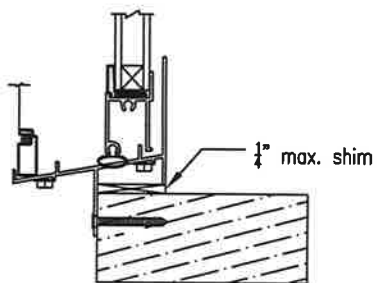

Krestmark Ind. L.P.
3950 Bastille Rd. Suite 100
Dallas, Texas 75212

100 Series S. H.
Installation Instructions