


Weather Shield

Windows & Doors


8211 Awning Twin
NAILING FIN INSTALLATION

#6 X (1-5/8") NON-CORROSIVE SCREW
1-1/2" MIN PENETRATION INTO FRAMING MEMBER
8-10" ON CENTER THROUGH NAILING FIN
AROUND THE UNITS ENTIRE PERIMETER TYP

USE SILICONE SEALANT
AROUND ENTIRE PERIMETER
BETWEEN NAILING FIN &
WOOD BUCK BY OTHERS TYP

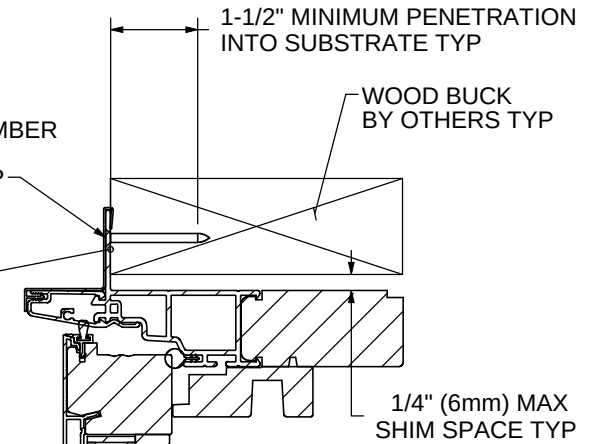

SECTION A-A
SCALE 1 : 3

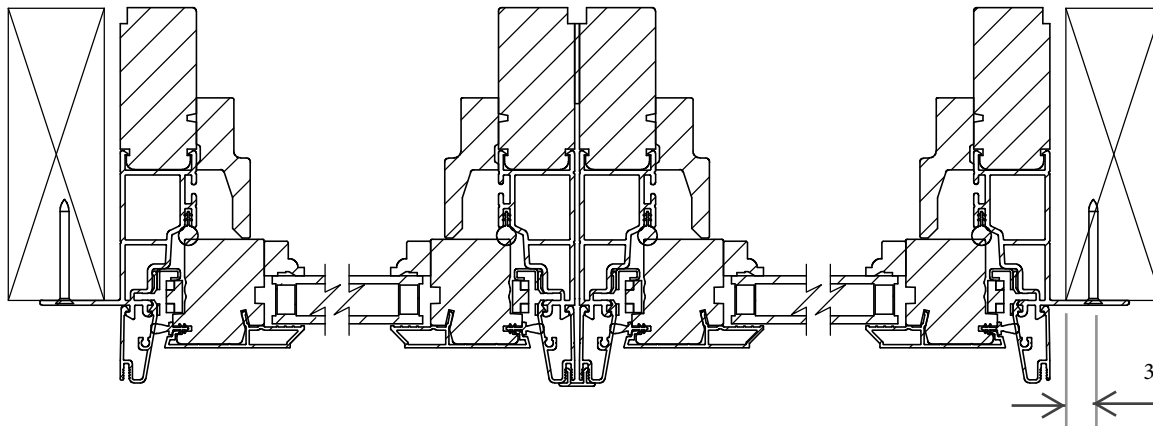

SECTION B-B
SCALE 1 : 3

THIS SCHEDULE ADDRESSES ONLY THE FASTENERS REQUIRED TO ANCHOR THE WINDOW(S) TO ACHIEVE THE RATED DESIGN PRESSURE. THOROUGHLY READ AND FOLLOW MANUFACTURERS INSTALLATION INSTRUCTIONS RECEIVED WITH UNIT. THIS GUIDE DOES NOT ADDRESS THE SEALING CONSIDERATIONS THAT MAY ARISE IN DIFFERENT WALL CONDITIONS.

DIE #,X-REF #,COMPARATOR #: TYP. WALL THICKNESS: AREA: WT./FT.: FILE PATH:		MATERIAL:		Weather Shield <i>Windows & Doors</i> PRODUCTS: 8211 AWNING TWIN TITLE: INSTALLATION INSTRUCTIONS DWG. NO. 85-7808-07 SCALE: 1:16 SHEET NAME: Sheet1 SHEET 1 OF 1	
		DIV./ORDER #:			
		DATE ORDERED:			
		Q.C. COMPARATOR CHECK: ☐			
FINISH:		CUT STOCK SIZE:		ECO OR W.S. #:	
DO NOT SCALE DRAWING		DRAWN BY: JK/DT		DATE: 4-9-14	

REVISION	DATE	DESCRIPTION	WHITE SLIP NUMBER	ENG.