




THROUGH FRAME INSTALLATION

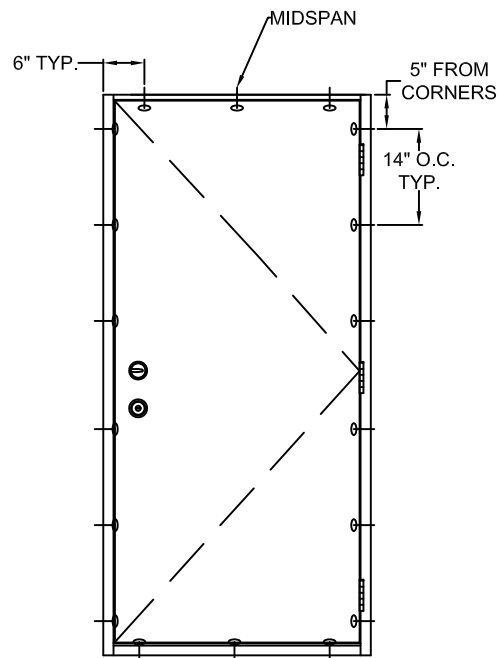

TYPICAL ELEVATION WITH FASTENER SPACING

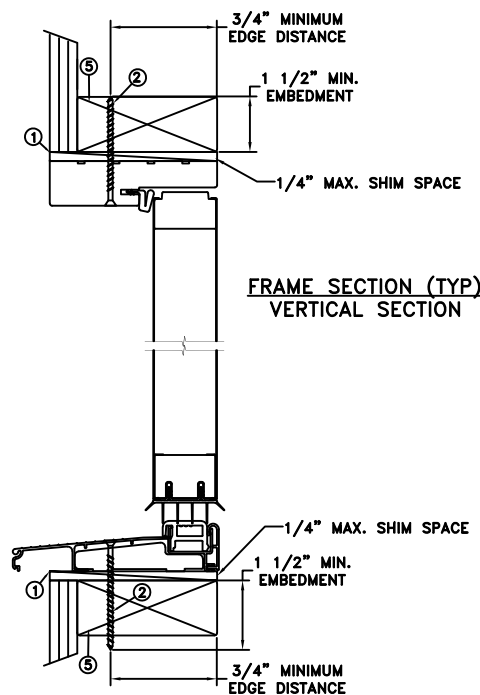

FRAME SECTION (TYP)
VERTICAL SECTION

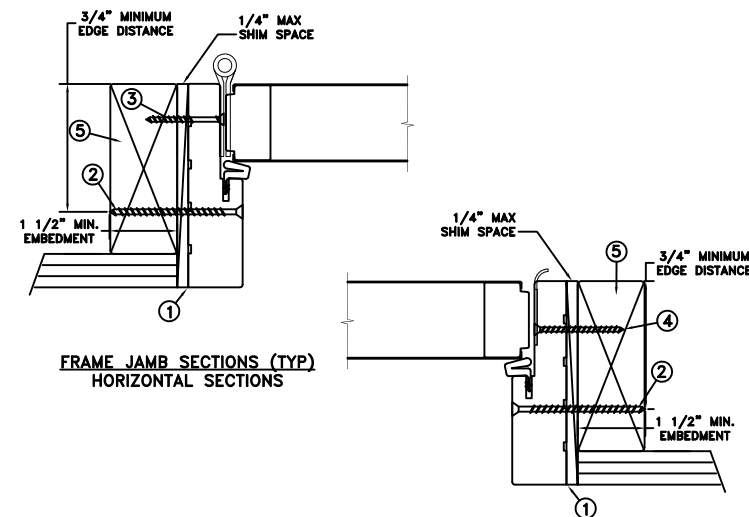

FRAME JAMB SECTIONS (TYP)
HORIZONTAL SECTIONS

MAXIMUM FRAME	DP	IMPACT
37.50 x 81.75	+55/-55	YES

Installation Notes:

1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
2. Use #10 PH or greater fastener through the head & side jambs with sufficient length to penetrate a minimum of 1 - 1/2" into the wood framing. For 2x wood frame substrate (min. S.G. = 0.42)
3. Use (2) - #10 screws through each hinge at the side jamb with sufficient length to penetrate a minimum of 1 - 1/2" into the wood framing.
4. Use (2) - #8 screws through each strike plate at the side jamb with sufficient length to penetrate a minimum of 1 - 1/2" into the wood framing.
5. Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.

General Notes:

1. The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
2. All glazing shall conform to ASTM E1300.
3. Use structural or composite shims where required.

This item has been digitally signed and sealed by Micah Swartz, P.E. on the date adjacent to the seal.


Printed copies of this document are not considered signed and sealed and the signature must be verified on any electronic copies

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.

DISCLAIMER:

This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.

Micah Swartz

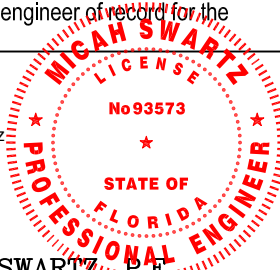


MICAH SWARTZ, P.E.
PE No. 93573
5134 Cambridge Ct.
Klamath Falls, OR. 97603
(541) 363-8075

08/22/24



DRAWN BY: M.HAM	DATE: 08/20/2024	JELD-WEN 3737 LAKEPORT BLVD. KLAMATH FALLS OR, 97601 PHONE: (800) 535-3936
CHECKED BY: D.VEZO	SCALE: NTS	
APPROVED BY: D.VEZO	TITLE:	
RECORD No.: D1000364		
REPORT No.: SJW2009-199	CAD DWG. No.: —	REV: C
		SHEET 1 of 10

Contours Steel Wood Swinging Door
Inswing 1 Panel

MASONRY STRAP
INSTALLATION

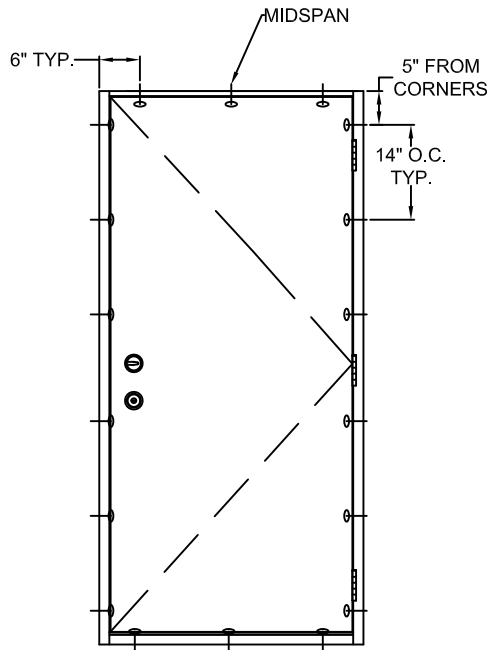

TYPICAL ELEVATION WITH FASTENER SPACING

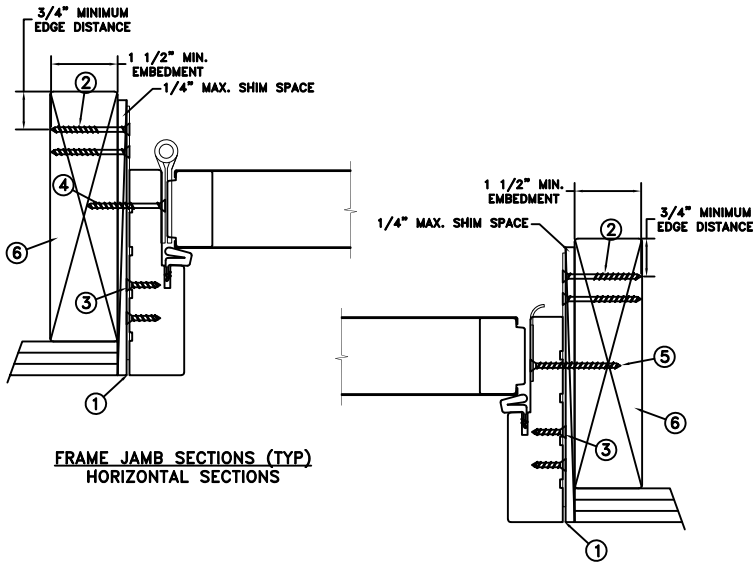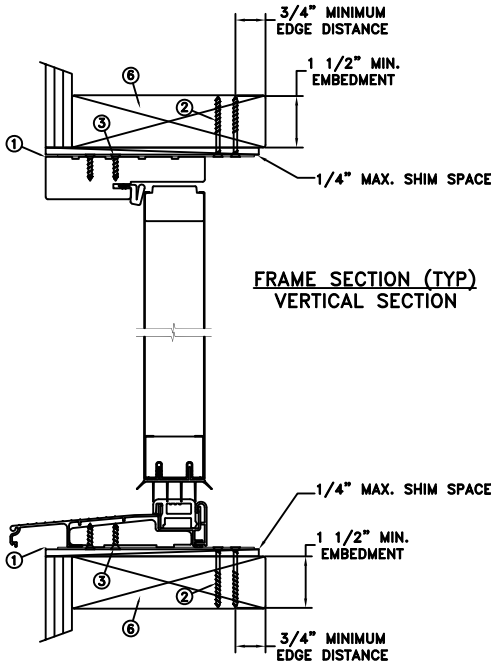

MAXIMUM FRAME	DP	IMPACT
37.50 x 81.75	+55/-55	YES

Installation Notes:

- Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
- Use (2) - #8 PFH or larger fasteners through masonry strap with sufficient length to penetrate a minimum of 1 - 1/2" into the buck. For 2x wood frame substrate (min. S.G. = 0.42).
- Use (2) - #8 PFH or larger fasteners through masonry strap into jamb without penetrating through the jamb into product causing visibility or collateral damage to product.
- Use (2) - #10 screws through each hinge at the side jamb with sufficient length to penetrate a minimum of 1 - 1/2" into the wood framing.
- Use (2) - #8 screws through each strike plate at the side jamb with sufficient length to penetrate a minimum of 1 - 1/2" into the wood framing.
- Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.


DISCLAIMER:
This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.

General Notes:

- The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
- All glazing shall conform to ASTM E1300.
- Use structural or composite shims where required.
- Masonry strap specifications: 20 Ga. galvanized steel, .036" min. thickness x 1.5" min. width.

This item has been digitally signed and sealed by Micah Swartz, P.E. on the date adjacent to the seal.


Printed copies of this document are not considered signed and sealed and the signature must be verified on any electronic copies

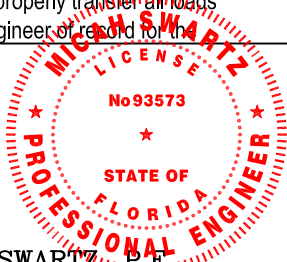


MICAH SWARTZ, P.E.
PE No. 93573
5134 Cambridge Ct.
Klamath Falls, OR. 97603
(541) 363-8075
08/22/24

DATE: 08/20/2024	JELD-WEN 3737 LAKEPORT BLVD. KLAMATH FALLS OR, 97601 PHONE: (800) 535-3936		
SCALE: NTS			
DRAWN BY: M.HAM	Contours Steel Wood Swinging Door Inswing 1 Panel		
CHECKED BY: D.Vezo			
APPROVED BY: D.Vezo			
RECORD No.: D1000364			
REPORT No.: SJW2009-199	CAD DWG. No.: —	REV: C	SHEET 2 of 10


CONCRETE/MASONRY
INSTALLATION

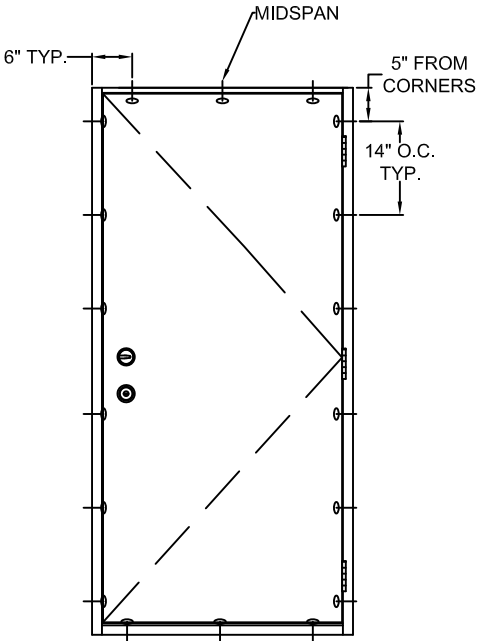

TYPICAL ELEVATION WITH FASTENER SPACING

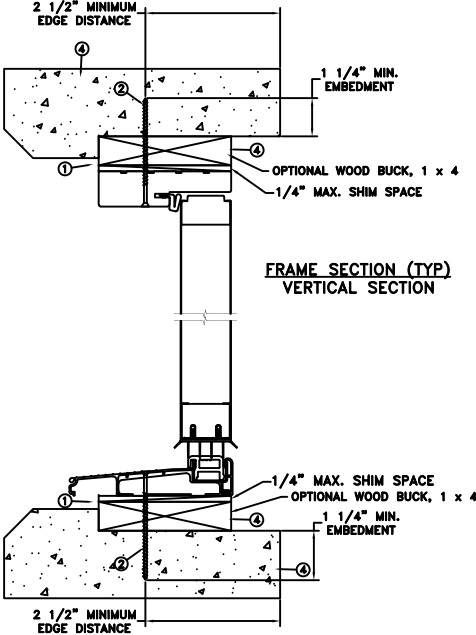

FRAME SECTION (TYP)
VERTICAL SECTION

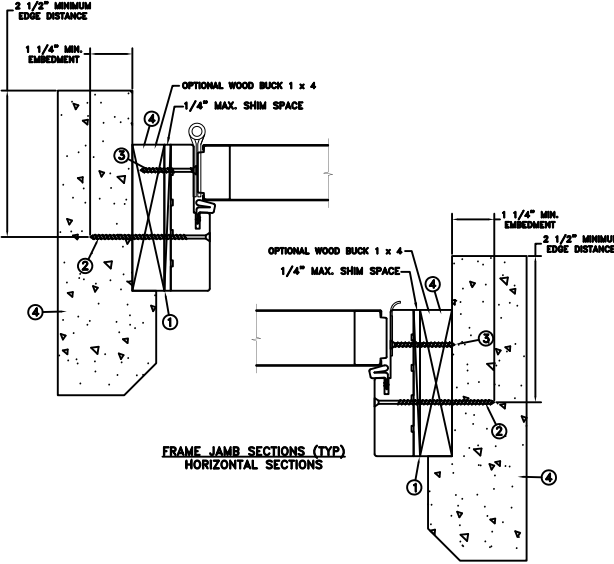

FRAME JAMB SECTIONS (TYP)
HORIZONTAL SECTIONS

MAXIMUM FRAME	DP	IMPACT
37.50 x 81.75	+55/-55	YES

Installation Notes:

1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
2. Use 3/16" tapcon or equivalent fasteners through frame with sufficient length to penetrate a minimum of 1 - 1/4" into concrete or masonry at each location with a 2 - 1/2" min. from edge distance. For concrete (min. $f_c = 3000$ psi) or masonry substrate (CMU shall adhere to ASTM C90).
3. Use (2) - 3/16" tapcon screws through each hinge and strike plate into rough opening with a minimum of 1 - 1/4" embedment, and minimum distance of 2 - 1/2" from edge.
4. Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.

General Notes:


1. The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
2. All glazing shall conform to ASTM E1300.
3. Use structural or composite shims where required.

This item has been digitally signed and sealed by Micah Swartz, P.E. on the date adjacent to the seal.

Printed copies of this document are not considered signed and sealed and the signature must be verified on any electronic copies

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.


DISCLAIMER:
This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.

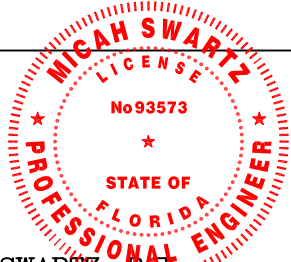


MICAH SWARTZ, P.E.
PE No. 93573
5134 Cambridge Ct.
Klamath Falls, OR. 97603
(541) 363-8075
08/22/24

DATE: 08/20/2024	3737 LAKEPORT BLVD. KLAMATH FALLS OR, 97601 PHONE: (800) 535-3936
DRAWN BY: M.HAM	SCALE: NTS
CHECKED BY: D.VEZO	TITLE: Contours Steel Wood Swinging Door Inswing 1 Panel
APPROVED BY: D.VEZO	
RECORD No.: D1000364	
REPORT No.: SJW2009-199	CAD DWG. No.: —
	REV: C
	SHEET 3 of 10


CONCRETE/MASONRY INSTALLATION

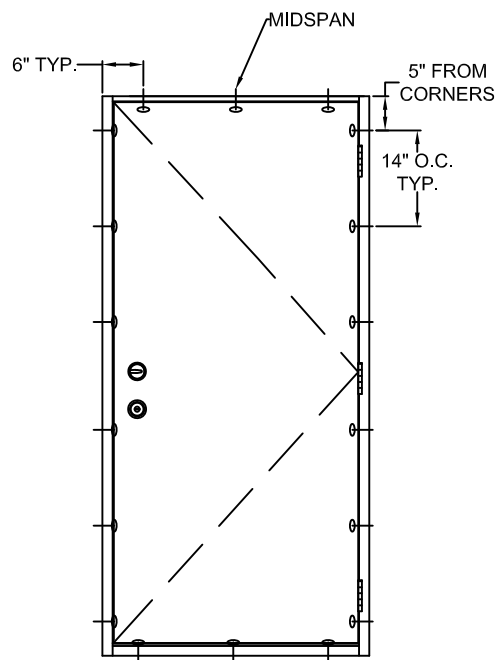

TYPICAL ELEVATION WITH FASTENER SPACING

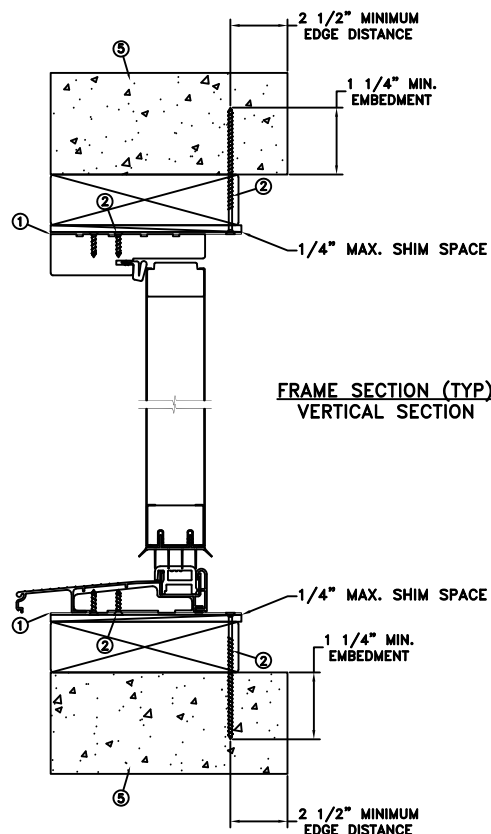

**FRAME SECTION (TYP)
VERTICAL SECTION**

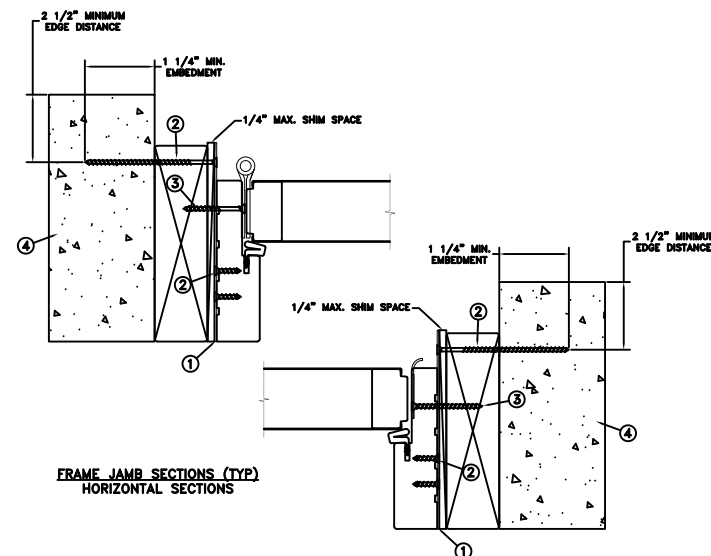

**FRAME JAMB SECTIONS (TYP)
HORIZONTAL SECTIONS**

MAXIMUM FRAME	DP	IMPACT
37.50 x 81.75	+55/-55	YES

Installation Notes:

1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
2. Use 3/16" tapcon or equivalent fasteners through the head & side jambs with sufficient length to penetrate a minimum of 1 - 1/4" into concrete or masonry at each location with a 2 - 1/2" min. from edge distance. For concrete (min. $f_c = 3000$ psi) or masonry substrate (CMU shall adhere to ASTM C90).
3. Use (2) - 3/16" corrosion resistant tapcon screws through each hinge and strike plate into rough opening with a minimum of 1 - 1/4" embedment, and minimum distance of 2 - 1/2" from edge.
4. Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.

General Notes:

1. The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
2. All glazing shall conform to ASTM E1300.
3. Use structural or composite shims where required.
4. Masonry strap specifications: 20 Ga. galvanized steel, .036" min. thickness x 1.5" min. width.


This item has been digitally signed and sealed by Micah Swartz, P.E. on the date adjacent to the seal.

Printed copies of this document are not considered signed and sealed and the signature must be verified on any electronic copies

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.

DISCLAIMER:


This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.

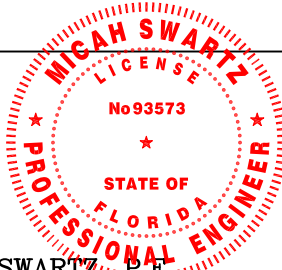


MICAH SWARTZ, P.E.
PE No. 93573
5134 Cambridge Ct.
Klamath Falls, OR. 97603
(541) 363-8075
08/22/24

	DATE: 08/20/2024	 3737 LAKEPORT BLVD. KLAMATH FALLS OR, 97601 PHONE: (800) 535-3936			
DRAWN BY: M.HAM	SCALE: NTS				
CHECKED BY: D.Vezo	TITLE: Contours Steel Wood Swinging Door Inswing 1 Panel				
APPROVED BY: D.Vezo					
RECORD No.: D1000364					
REPORT No.: SJW2009-199		CAD DWG. No.: —	REV: C	SHEET 4 of 10	


MASONRY STRAP INSTALLATION

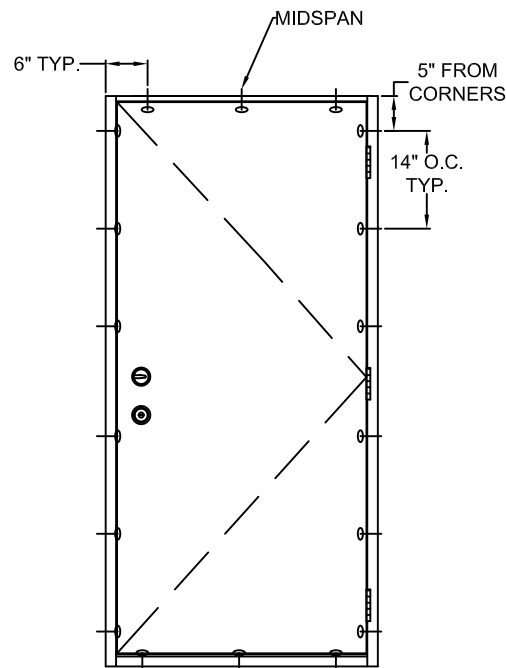

TYPICAL ELEVATION WITH FASTENER SPACING

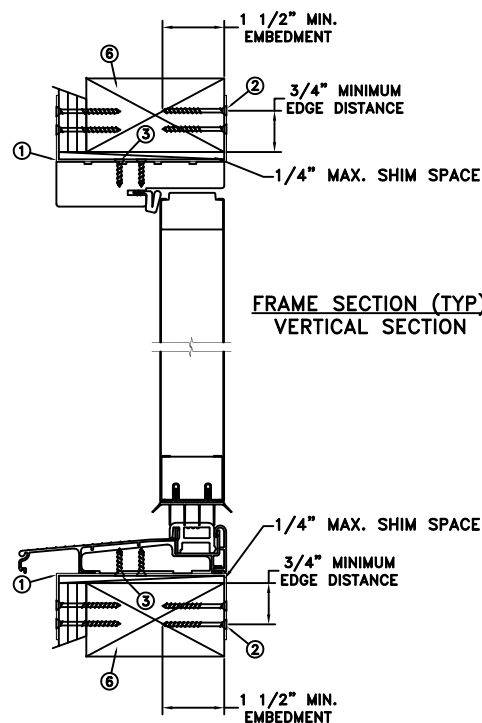

**FRAME SECTION (TYP)
VERTICAL SECTION**

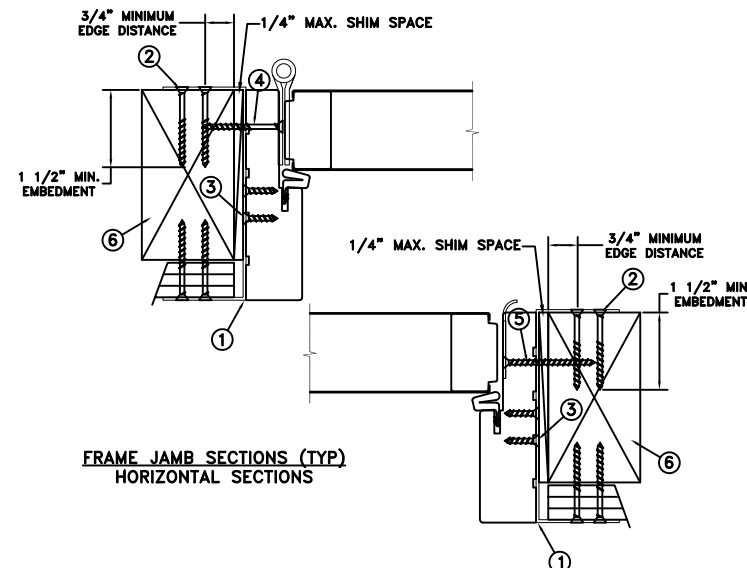

**FRAME JAMB SECTIONS (TYP)
HORIZONTAL SECTIONS**

MAXIMUM FRAME	DP	IMPACT
37.50 x 81.75	+55/-55	YES

Installation Notes:

1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
2. Use (2) - #8 PFH or larger fasteners through masonry strap with sufficient length to penetrate a minimum of 1 - 1/2" into the buck. Bend straps around buck. For 2x wood frame substrate (min. S.G. = 0.42).
3. Use (2) - #8 PFH or larger fasteners through masonry strap into jamb without penetrating through the jamb into product causing visibility or collateral damage to product.
4. Use (2) - #10 screws through each hinge at the side jamb with sufficient length to penetrate a minimum of 1 - 1/2" into the wood framing.
5. Use (2) - #8 screws through each strike plate at the side jamb with sufficient length to penetrate a minimum of 1 - 1/2" into the wood framing.
6. Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.

DISCLAIMER:


This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.

General Notes:

1. The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
2. All glazing shall conform to ASTM E1300.
3. Use structural or composite shims where required.
4. Masonry strap specifications: 20 Ga. galvanized steel, .036" min. thickness x 1.5" min. width.

This item has been digitally signed and sealed by Micah Swartz, P.E. on the date adjacent to the seal.


Printed copies of this document are not considered signed and sealed and the signature must be verified on any electronic copies

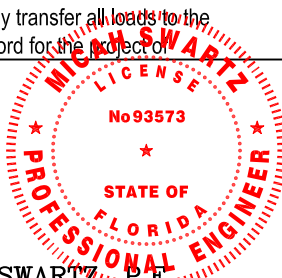


MICAH SWARTZ, P.E.
PE No. 93573
5134 Cambridge Ct.
Klamath Falls, OR. 97603
(541) 363-8075
08/22/24

DATE: 08/20/2024	JELD-WEN 3737 LAKEPORT BLVD. KLAMATH FALLS OR, 97601 PHONE: (800) 535-3936
DRAWN BY: M.HAM	
CHECKED BY: D.VEZO	Contours Steel Wood Swinging Door Inswing 1 Panel
APPROVED BY: D.VEZO	
RECORD No.: D1000364	
REPORT No.: SJW2009-199	CAD DWG. No.: —
	REV: C
	SHEET 5 of 10


THROUGH FRAME INSTALLATION

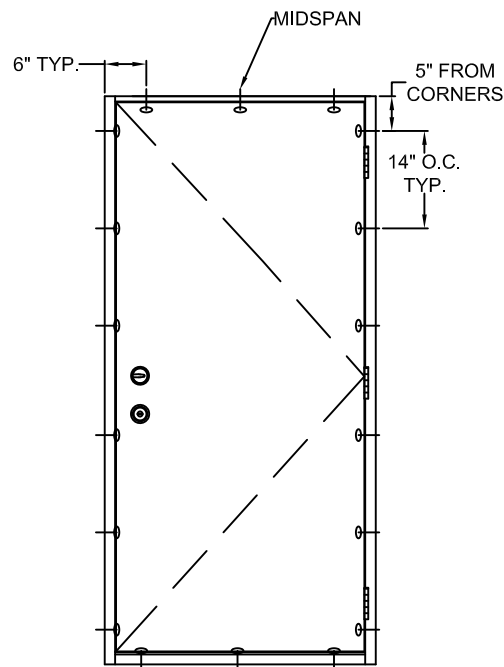

TYPICAL ELEVATION WITH FASTENER SPACING

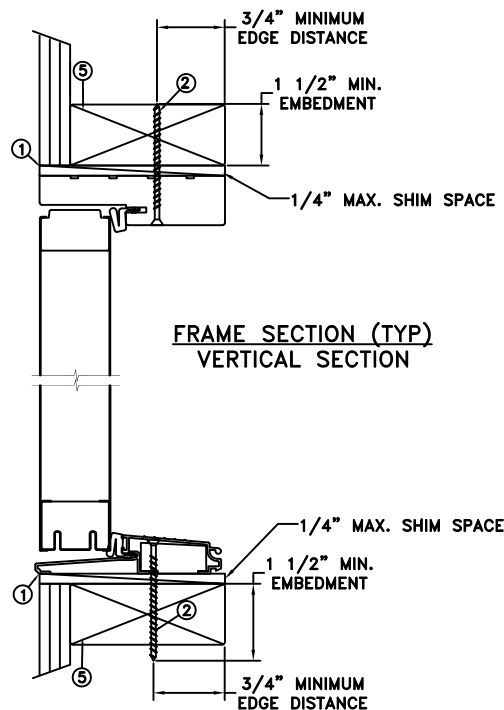

**FRAME SECTION (TYP)
VERTICAL SECTION**

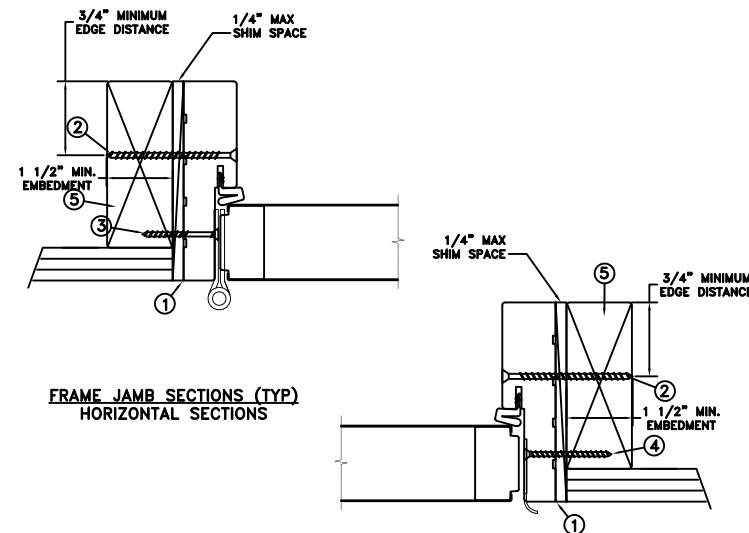

**FRAME JAMB SECTIONS (TYP)
HORIZONTAL SECTIONS**

MAXIMUM FRAME	DP	IMPACT
37.50 x 81.50	+55/-55	YES

Installation Notes:

1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
2. Use #10 PH or greater fastener through the head & side jambs with sufficient length to penetrate a minimum of 1 - 1/2" into the wood framing. For 2x wood frame substrate (min. S.G. = 0.42)
3. Use (2) - #10 screws through each hinge at the side jamb with sufficient length to penetrate a minimum of 1 - 1/2" into the wood framing.
4. Use (2) - #8 screws through each strike plate at the side jamb with sufficient length to penetrate a minimum of 1 - 1/2" into the wood framing.
5. Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.

General Notes:

1. The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
2. All glazing shall conform to ASTM E1300.
3. Use structural or composite shims where required.


This item has been digitally signed and sealed by Micah Swartz, P.E. on the date adjacent to the seal.

Printed copies of this document are not considered signed and sealed and the signature must be verified on any electronic copies

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.

DISCLAIMER:

This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.

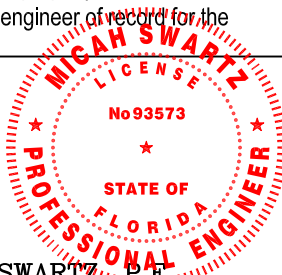


MICAH SWARTZ, P.E.
PE No. 93573
5134 Cambridge Ct.
Klamath Falls, OR. 97603
(541) 363-8075



08/22/24

	DATE: 08/20/2024	 3737 LAKEPORT BLVD. KLAMATH FALLS OR, 97601 PHONE: (800) 535-3936			
DRAWN BY: M.HAM	SCALE: NTS				
CHECKED BY: D.VEZO	TITLE: Contours Steel Wood Swinging Door Outswing 1 Panel				
APPROVED BY: D.VEZO					
RECORD No.: D1000364					
REPORT No.: SJW2009-199					
		CAD DWG. No.: —	REV: C	SHEET 6 of 10	

MASONRY STRAP
INSTALLATION

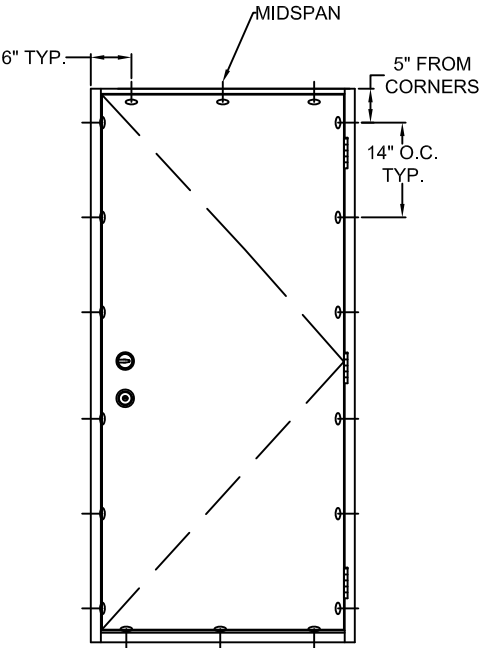

TYPICAL ELEVATION WITH FASTENER SPACING

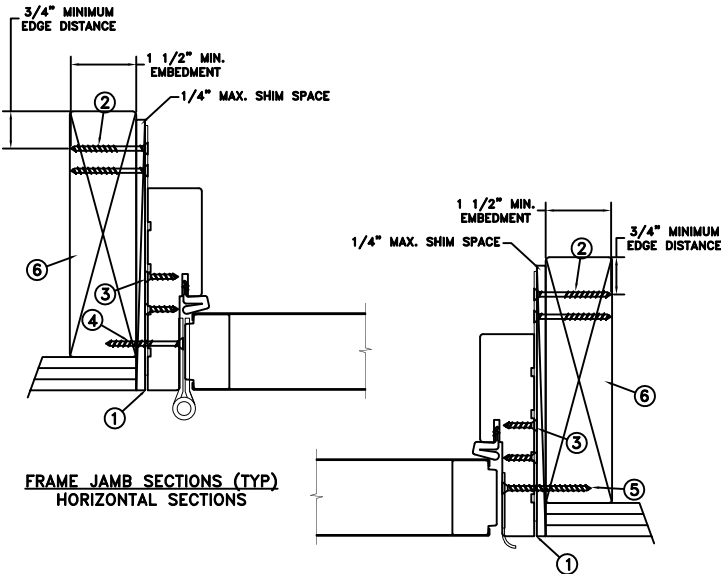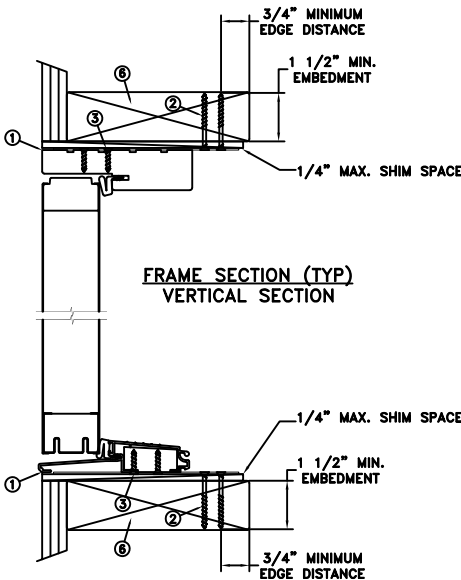

MAXIMUM FRAME	DP	IMPACT
37.50 x 81.50	+55/-55	YES

Installation Notes:

- Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
- Use (2) - #8 PFH or larger fasteners through masonry strap with sufficient length to penetrate a minimum of 1 - 1/2" into the buck. For 2x wood frame substrate (min. S.G. = 0.42).
- Use (2) - #8 PFH or larger fasteners through masonry strap into jamb without penetrating through the jamb into product causing visibility or collateral damage to product.
- Use (2) - #10 screws through each hinge at the side jamb with sufficient length to penetrate a minimum of 1 - 1/2" into the wood framing.
- Use (2) - #8 screws through each strike plate at the side jamb with sufficient length to penetrate a minimum of 1 - 1/2" into the wood framing.
- Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.


DISCLAIMER:
This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.

General Notes:

- The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
- All glazing shall conform to ASTM E1300.
- Use structural or composite shims where required.
- Masonry strap specifications: 20 Ga. galvanized steel, .036" min. thickness x 1.5" min. width.

This item has been digitally signed and sealed by Micah Swartz, P.E. on the date adjacent to the seal.


Printed copies of this document are not considered signed and sealed and the signature must be verified on any electronic copies

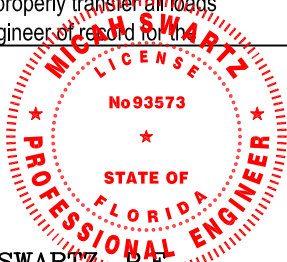


MICAH SWARTZ, P.E.
PE No. 93573
5134 Cambridge Ct.
Klamath Falls, OR. 97603
(541) 363-8075
08/22/24

	DATE: 08/20/2024	JELD-WEN 3737 LAKEPORT BLVD. KLAMATH FALLS OR, 97601 PHONE: (800) 535-3936		
DRAWN BY: M.HAM	SCALE: NTS			
CHECKED BY: D.VEZO	TITLE: Contours Steel Wood Swinging Door Outswing 1 Panel			
APPROVED BY: D.VEZO				
RECORD No.: D1000364				
REPORT No.: SJW2009-199		CAD DWG. No.: —	REV: C	SHEET 7 of 10


CONCRETE/MASONRY INSTALLATION

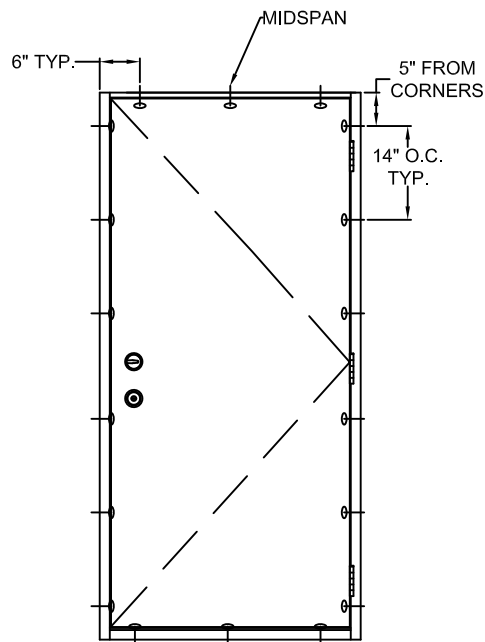

TYPICAL ELEVATION WITH FASTENER SPACING

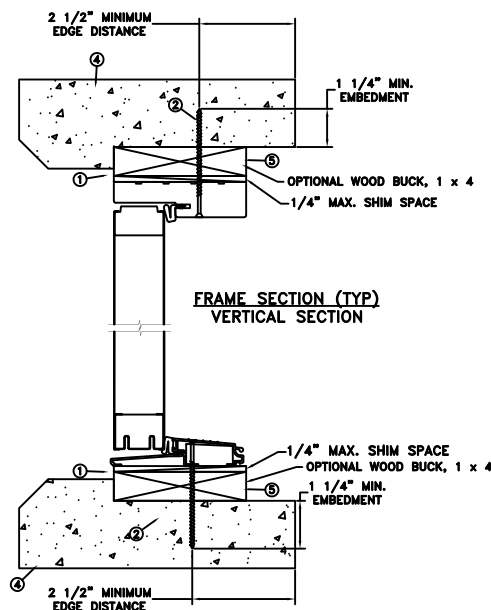

FRAME SECTION (TYP)
VERTICAL SECTION

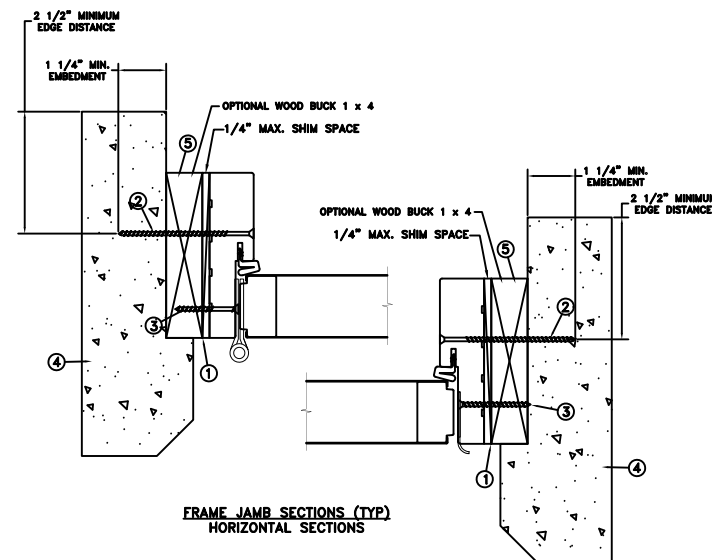

FRAME JAMB SECTIONS (TYP)
HORIZONTAL SECTIONS

MAXIMUM FRAME	DP	IMPACT
37.50 x 81.50	+55/-55	YES

Installation Notes:

1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
2. Use 3/16" tapcon or equivalent fasteners through frame with sufficient length to penetrate a minimum of 1 - 1/4" into concrete or masonry at each location with a 2 - 1/2" min. from edge distance. For concrete (min. $f_c = 3000$ psi) or masonry substrate (CMU shall adhere to ASTM C90).
3. Use (2) - 3/16" tapcon screws through each hinge and strike plate into rough opening with a minimum of 1 - 1/4" embedment, and minimum distance of 2 - 1/2" from edge.
4. Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.

General Notes:

1. The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
2. All glazing shall conform to ASTM E1300.
3. Use structural or composite shims where required.


This item has been digitally signed and sealed by Micah Swartz, P.E. on the date adjacent to the seal.

Printed copies of this document are not considered signed and sealed and the signature must be verified on any electronic copies

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.

DISCLAIMER:


This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.

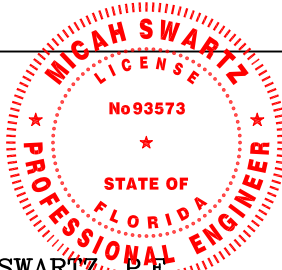



MICAH SWARTZ, P.E.
PE No. 93573
5134 Cambridge Ct.
Klamath Falls, OR. 97603
(541) 363-8075

08/22/24

	DATE: 08/20/2024	JELD-WEN 3737 LAKEPORT BLVD. KLAMATH FALLS OR, 97601 PHONE: (800) 535-3936	
DRAWN BY: M.HAM	SCALE: NTS		
CHECKED BY: D.Vezo	TITLE: Contours Steel Wood Swinging Door Outswing 1 Panel		
APPROVED BY: D.Vezo			
RECORD No.: D1000364			
REPORT No.: SJW2009-199		CAD DWG. No.: —	REV: C SHEET 8 of 10

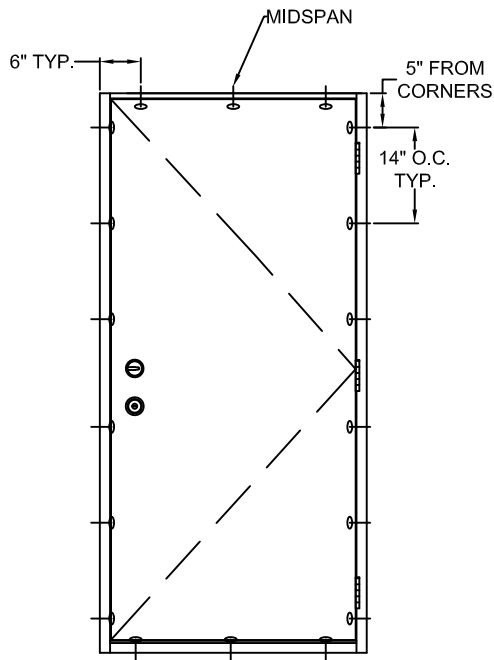

TYPICAL ELEVATION WITH FASTENER SPACING

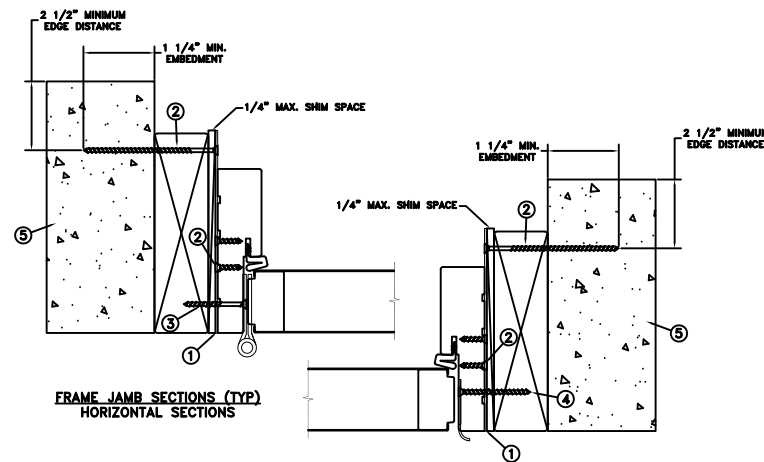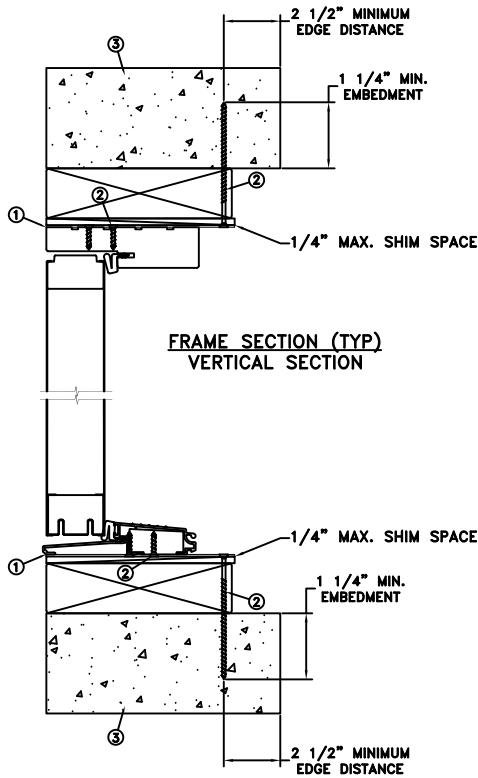

MAXIMUM FRAME	DP	IMPACT
37.50 x 81.50	+55/-55	YES

Installation Notes:

1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
2. Use 3/16" tapcon or equivalent fasteners through the head & side jambs with sufficient length to penetrate a minimum of 1 - 1/4" into concrete or masonry at each location with a 2 - 1/2" min. from edge distance. For concrete (min. $f_c = 3000$ psi) or masonry substrate (CMU shall adhere to ASTM C90).
3. Use (2) - 3/16" corrosion resistant tapcon screws through each hinge and strike plate into rough opening with a minimum of 1 - 1/4" embedment, and minimum distance of 2 - 1/2" from edge.
4. Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.

General Notes:


1. The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
2. All glazing shall conform to ASTM E1300.
3. Use structural or composite shims where required.
4. Masonry strap specifications: 20 Ga. galvanized steel, .036" min. thickness x 1.5" min. width.

This item has been digitally signed and sealed by Micah Swartz, P.E. on the date adjacent to the seal.

Printed copies of this document are not considered signed and sealed and the signature must be verified on any electronic copies

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.


DISCLAIMER:
This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.

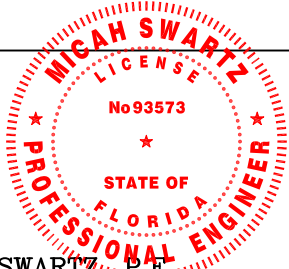


MICAH SWARTZ, P.E.
PE No. 93573
5134 Cambridge Ct.
Klamath Falls, OR. 97603
(541) 363-8075
08/22/24

DATE: 08/20/2024	3737 LAKEPORT BLVD. KLAMATH FALLS OR, 97601 PHONE: (800) 535-3936
DRAWN BY: M.HAM	SCALE: NTS
CHECKED BY: D.VEZO	TITLE: Contours Steel Wood Swinging Door Outswing 1 Panel
APPROVED BY: D.VEZO	RECORD No.: D1000364
REPORT No.: SJW2009-199	CAD DWG. No.: —
REV: C	SHEET 9 of 10


MASONRY STRAP INSTALLATION

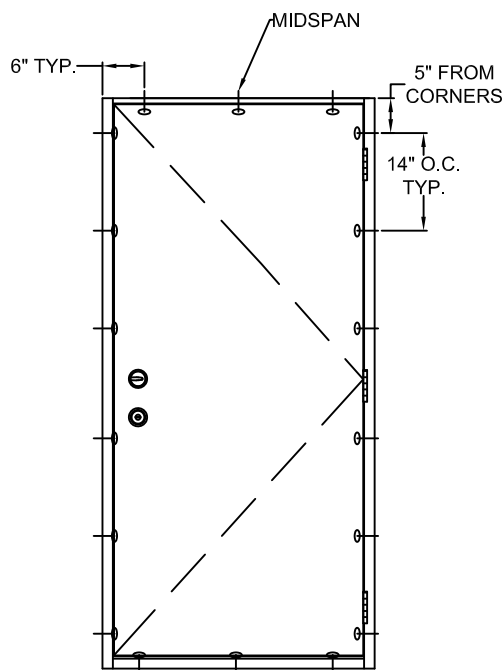

TYPICAL ELEVATION WITH FASTENER SPACING

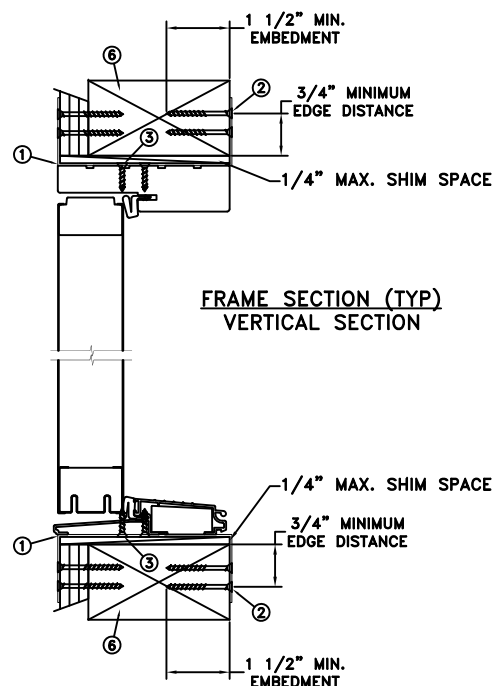

**FRAME SECTION (TYP)
VERTICAL SECTION**

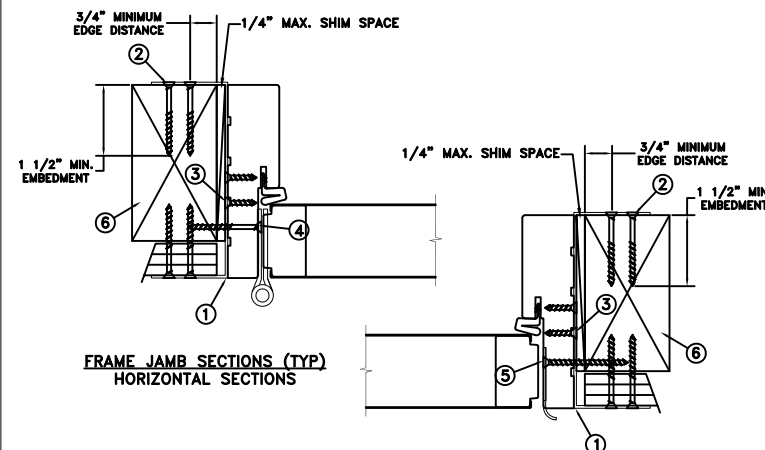

**FRAME JAMB SECTIONS (TYP)
HORIZONTAL SECTIONS**

MAXIMUM FRAME	DP	IMPACT
37.50 x 81.50	+55/-55	YES

Installation Notes:

1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
2. Use (2) - #8 PFH or larger fasteners through masonry strap with sufficient length to penetrate a minimum of 1 - 1/2" into the buck. Bend straps around buck. For 2x wood frame substrate (min. S.G. = 0.42).
3. Use (2) - #8 PFH or larger fasteners through masonry strap into jamb without penetrating through the jamb into product causing visibility or collateral damage to product.
4. Use (2) - #10 screws through each hinge at the side jamb with sufficient length to penetrate a minimum of 1 - 1/2" into the wood framing.
5. Use (2) - #8 screws through each strike plate at the side jamb with sufficient length to penetrate a minimum of 1 - 1/2" into the wood framing.
6. Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.

DISCLAIMER:


This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.

General Notes:

1. The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
2. All glazing shall conform to ASTM E1300.
3. Use structural or composite shims where required.
4. Masonry strap specifications: 20 Ga. galvanized steel, .036" min. thickness x 1.5" min. width.

This item has been digitally signed and sealed by Micah Swartz, P.E. on the date adjacent to the seal.

Printed copies of this document are not considered signed and sealed and the signature must be verified on any electronic copies

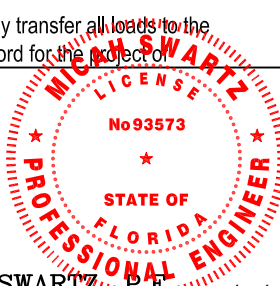

MICAH SWARTZ, P.E.
08/22/24
PE No. 93573
5134 Cambridge Ct.
Klamath Falls, OR. 97603
(541) 363-8075

DATE: 08/20/2024	JELD-WEN 3737 LAKEPORT BLVD. KLAMATH FALLS OR, 97601 PHONE: (800) 535-3936
DRAWN BY: M.HAM	
CHECKED BY: D.VEZO	Contours Steel Wood Swinging Door Outswing 1 Panel
APPROVED BY: D.VEZO	
RECORD No.: D1000364	
REPORT No.: SJW2009-199	CAD DWG. No.: —
	REV: C
	SHEET 10 of 10