




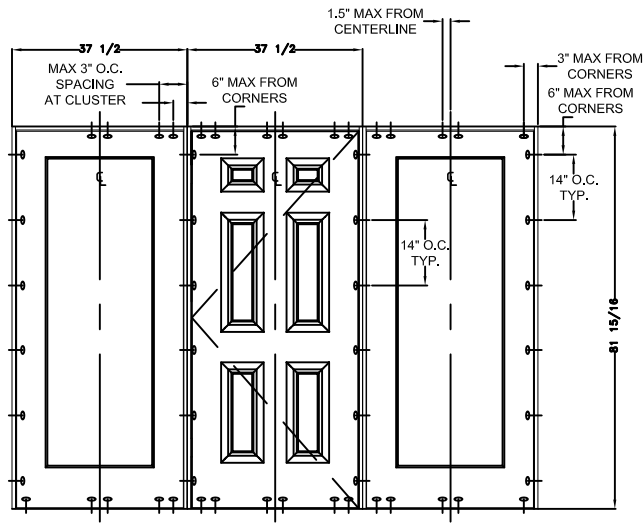

TYPICAL ELEVATION WITH FASTENER SPACING

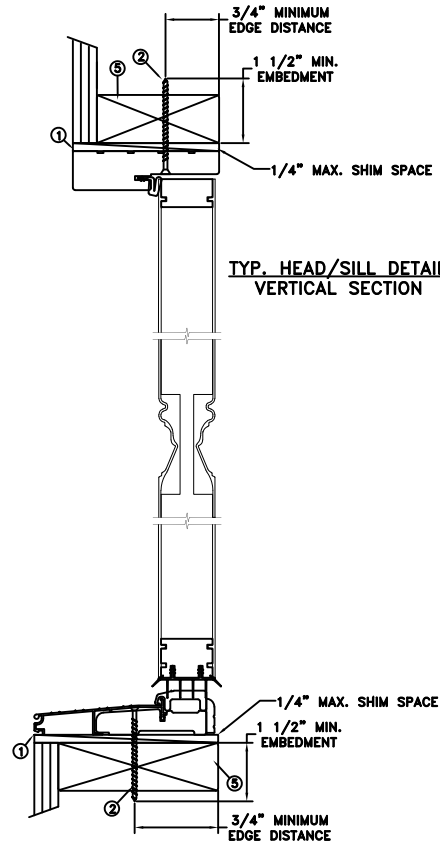

TYP. HEAD/SILL DETAIL
VERTICAL SECTION

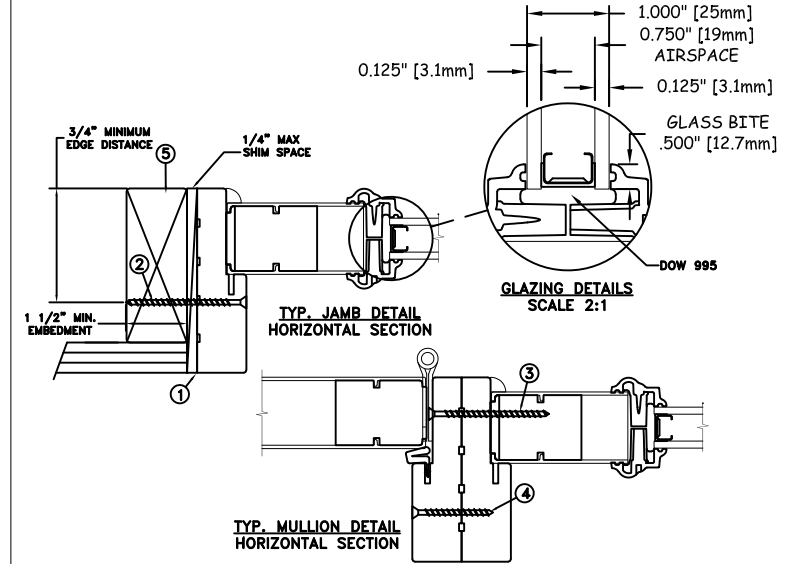

THROUGH FRAME INSTALLATION

MAXIMUM FRAME	DP	IMPACT
112.125 x 81.9375	+50/-50	NO

Installation Notes:

1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
2. Use #10 PH or greater fastener through the head & side jambs with sufficient length to penetrate a minimum of 1-1/2" into the wood framing. For 2x wood frame substrate (min. S.G. = 0.55).
3. Install one (1) - #9 x 2-1/2" PH fastener through each hinge plate into rough opening.
4. Install #10 x 2" fastener through jamb into sidelite frame.
5. Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.

General Notes:


1. The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
2. All glazing shall conform to ASTM E1300.
3. Glazing is 3.1mm tempered - 19.0mm airspace - 3.1mm tempered glass.
4. Use structural or composite shims where required.

This item has been digitally signed and sealed by Micah Swartz, P.E. on the date adjacent to the seal. Printed copies of this document are not considered signed and sealed and the signature must be verified on any electronic copies

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.

DISCLAIMER:


This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.

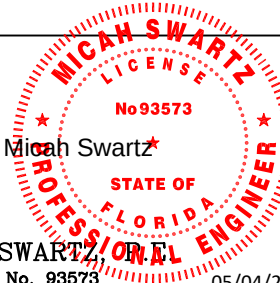


MICAH SWARTZ, P.E.
PE No. 93573
5134 Cambridge Ct.
Klamath Falls, OR. 97603
(541) 363-8075

05/04/25


	DATE: 04/02/2025	JELD-WEN	3737 LAKEPORT BLVD.	
DRAWN BY: M.HAM	SCALE: NTS		KLAMATH FALLS OR, 97601 PHONE: (800) 535-3936	
CHECKED BY: D.Vezo	TITLE: Design Pro/Smooth Pro (F-3500) Fiberglass Swinging Door Inswing 3 Panel OXO			
APPROVED BY: D.Vezo				
RECORD No.: D1000184				
REPORT No. NCTL-210-3916-01		CAD DWG. No.: D015690	REV: B	SHEET 1 of 20

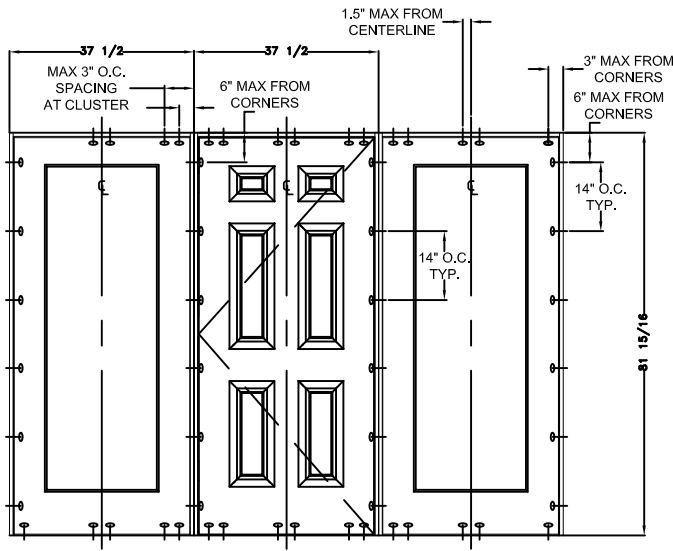

TYPICAL ELEVATION WITH FASTENER SPACING

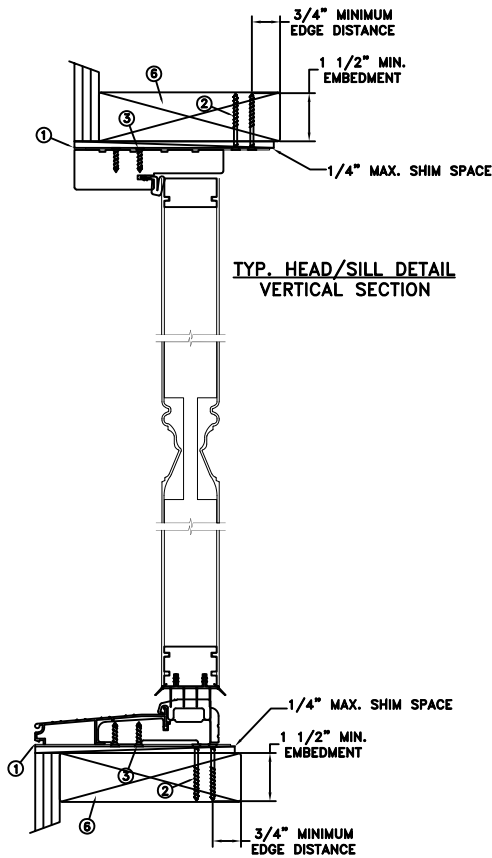

TYP. HEAD/SILL DETAIL
VERTICAL SECTION

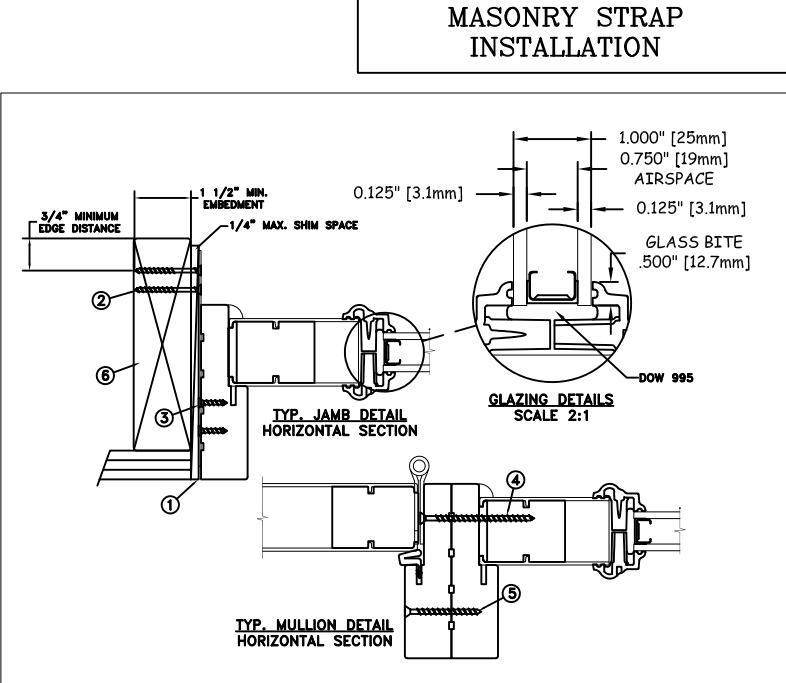

MASONRY STRAP INSTALLATION

MAXIMUM FRAME	DP	IMPACT
112.125 x 81.9375	+50/-50	NO

Installation Notes:

1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
2. Use two (2) - #10 PFH or larger fasteners through masonry strap with sufficient length to penetrate a minimum of 1-1/2" into the buck. For 2x wood frame substrate (min. S.G. = 0.55).
3. Use two (2) - #10 PFH or larger fasteners through masonry strap into jamb without penetrating through the jamb into product causing visibility or collateral damage to product.
4. Install one (1) - #9 x 2-1/2" PH fastener through each hinge plate into rough opening.
5. Install #10 x 2" fastener through jamb into sidelite frame.
6. Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.

General Notes:

1. The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
2. All glazing shall conform to ASTM E1300.
3. Glazing is 3.1mm tempered - 19mm airspace - 3.1mm tempered glass.
4. Use structural or composite shims where required.
5. Masonry strap specifications: 20 Ga. galvanized steel, .036" min. thickness x 1.5" min. width.


This item has been digitally signed and sealed by Micah Swartz, P.E. on the date adjacent to the seal. Printed copies of this document are not considered signed and sealed and the signature must be verified on any electronic copies

MICAH SWARTZ
PE No. 93573
5134 Cambridge Ct.
Klamath Falls, OR. 97603
(541) 363-8075
05/04/25


DATE: 04/02/2025	JELD-WEN 3737 LAKEPORT BLVD. KLAMATH FALLS OR, 97601 PHONE: (800) 535-3936		
SCALE: NTS			
DRAWN BY: M.HAM	Design Pro/Smooth Pro (F-3500) Fiberglass Swinging Door Inswing 3 Panel OXO		
CHECKED BY: D.VEZO			
APPROVED BY: D.VEZO			
RECORD No.: D1000184			
REPORT No. NCTL-210-3916-01	CAD DWG. No.: D015690	REV: B	SHEET 2 of 20

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.


DISCLAIMER:
This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.

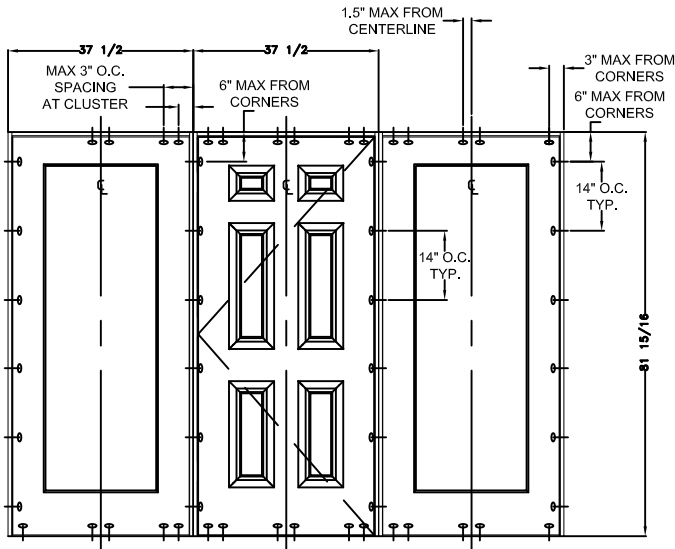

TYPICAL ELEVATION WITH FASTENER SPACING

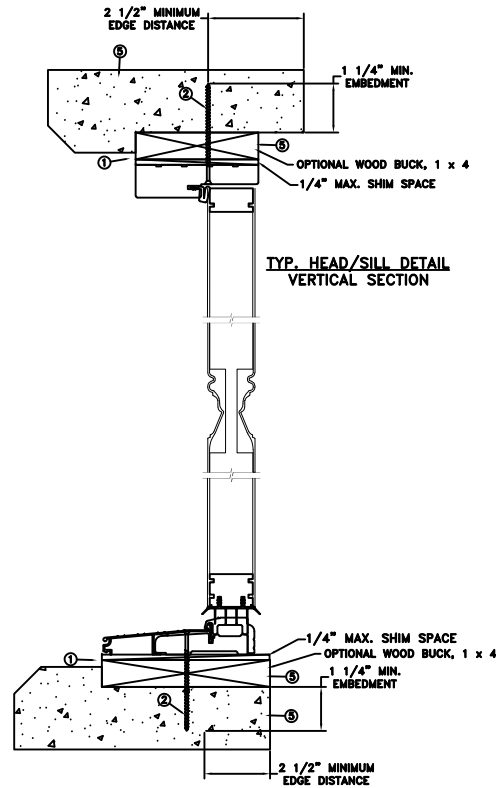

TYP. HEAD/SILL DETAIL
VERTICAL SECTION

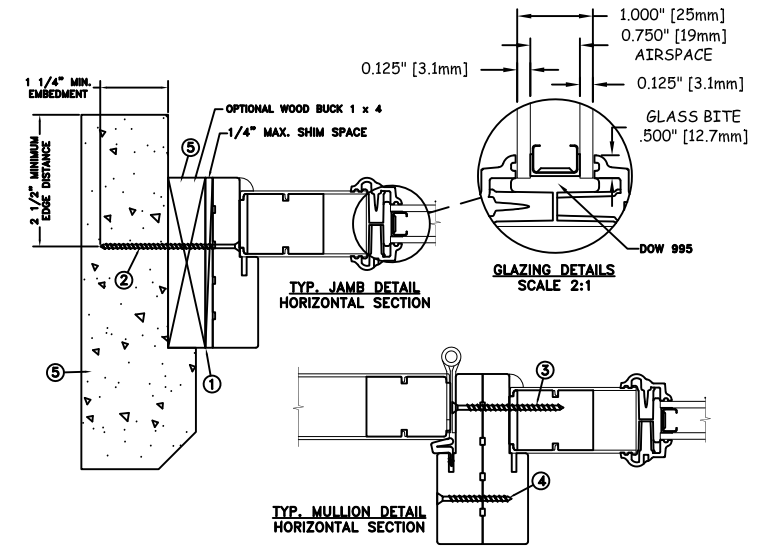

TYP. JAMB DETAIL
HORIZONTAL SECTION

TYP. MULLION DETAIL
HORIZONTAL SECTION

GLAZING DETAILS
SCALE 2:1

MAXIMUM FRAME	DP	IMPACT
112.125 x 81.9375	+50/-50	NO


Installation Notes:

1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
2. Use 1/4" tapcon or equivalent fasteners through frame with sufficient length to penetrate a minimum of 1-1/4" into concrete or masonry at each location with a 2-1/2" min. from edge distance. For concrete (min. fc = 3000 psi) or masonry substrate (CMU shall adhere to ASTM C90).
3. Install one (1) - 1/4" tapcon through each hinge plate with 1-1/4" min. embedment into concrete or masonry.
4. Install #10 x 2" fastener through jamb into sidelite frame.
5. Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.

General Notes:

1. The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
2. All glazing shall conform to ASTM E1300.
3. Glazing is 3.1mm tempered - 19.0mm airspace - 3.1mm tempered glass.
4. Use structural or composite shims where required.

This item has been digitally signed and sealed by Micah Swartz, P.E. on the date adjacent to the seal. Printed copies of this document are not considered signed and sealed and the signature must be verified on any electronic copies

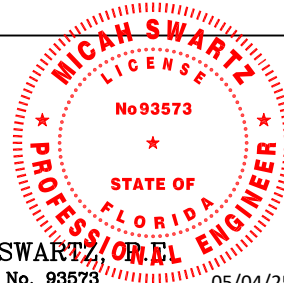


MICAH SWARTZ, P.E.
PE No. 93573
5134 Cambridge Ct.
Klamath Falls, OR. 97603
(541) 363-8075

05/04/25


DATE: 04/02/2025		JELD-WEN 3737 LAKEPORT BLVD. KLAMATH FALLS OR, 97601 PHONE: (800) 535-3936	
SCALE: NTS			
DRAWN BY: M.HAM	TITLE: Design Pro/Smooth Pro (F-3500) Fiberglass Swinging Door Inswing 3 Panel OXO		
CHECKED BY: D.VEZO	REPORT No.: D1000184		
APPROVED BY: D.VEZO			
REPORT No.: NCTL-210-3916-01	CAD DWG. No.: D015690	REV: B	SHEET 3 of 20

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.


DISCLAIMER:
This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.

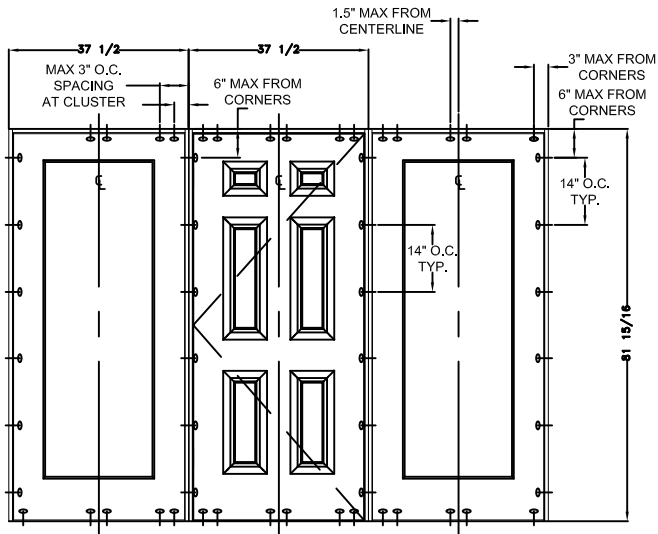

TYPICAL ELEVATION WITH FASTENER SPACING

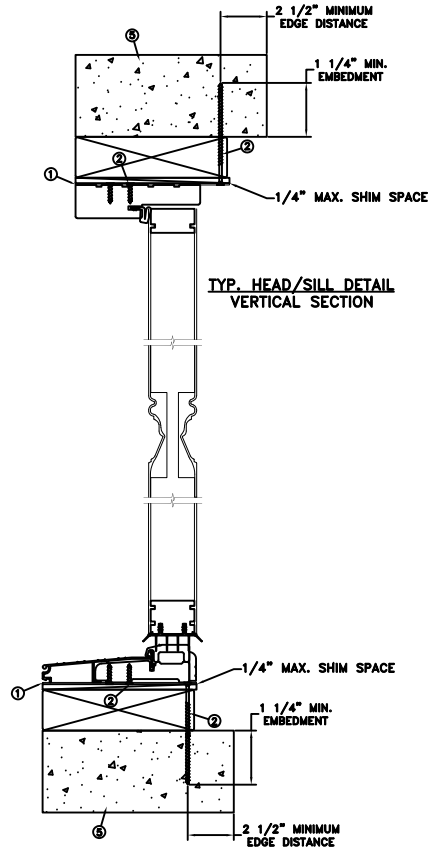

TYP. HEAD/SILL DETAIL
VERTICAL SECTION

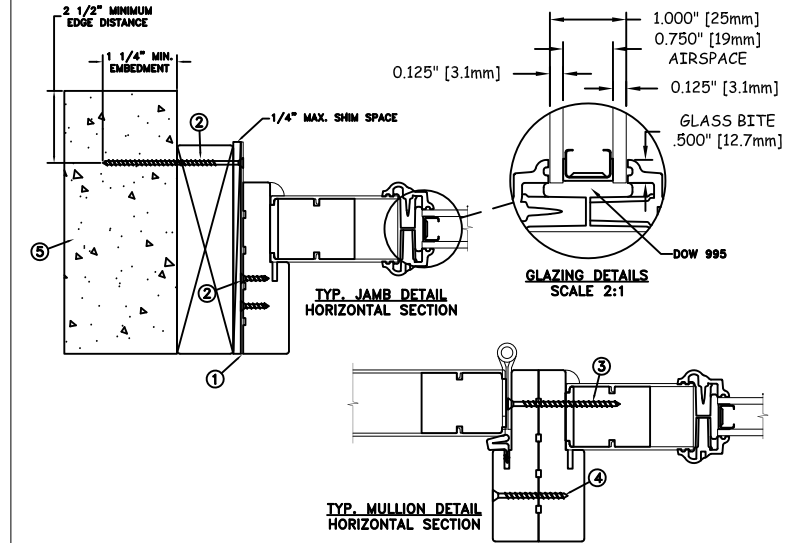

TYP. JAMB DETAIL
HORIZONTAL SECTION

TYP. MULLION DETAIL
HORIZONTAL SECTION

MASONRY STRAP INSTALLATION

MAXIMUM FRAME	DP	IMPACT
112.125 x 81.9375	+50/-50	NO


Installation Notes:

- Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
- Use one (1) - 1/4" Tapcon or equivalent fasteners through strap with sufficient length to penetrate a minimum of 1-1/4" into concrete or masonry at each location with a 2-1/2" min. from edge distance. Use two (2) - #10 PFH fasteners through masonry strap into frame. For concrete (min. fc = 3000 psi) or masonry substrate (CMU shall adhere to ASTM C90).
- Install one (1) - 1/4" tapcon through each hinge plate with 1-1/4" min. embedment into concrete masonry.
- Install #10 x 2" fastener through jamb into sidelite frame.
- Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.

General Notes:

- The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
- All glazing shall conform to ASTM E1300.
- Glazing is 3.1mm tempered - 19mm airspace - 3.1mm tempered glass.
- Use structural or composite shims where required.
- Masonry strap specifications: 20 Ga. galvanized steel, .036" min. thickness x 1.5" min. width.

This item has been digitally signed and sealed by Micah Swartz, P.E. on the date adjacent to the seal. Printed copies of this document are not considered signed and sealed and the signature must be verified on any electronic copies

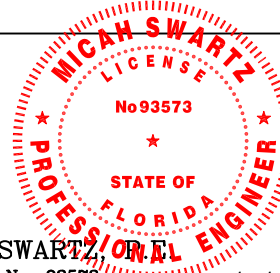


MICAH SWARTZ, P.E.
PE No. 93573
5134 Cambridge Ct.
Klamath Falls, OR. 97603
(541) 363-8075

05/04/25


DATE: 04/02/2025	JELD-WEN 3737 LAKEPORT BLVD. KLAMATH FALLS OR, 97601 PHONE: (800) 535-3936		
SCALE: NTS			
DRAWN BY: M.HAM	Design Pro/Smooth Pro (F-3500) Fiberglass Swinging Door Inswing 3 Panel OXO		
CHECKED BY: D.VEZO			
APPROVED BY: D.VEZO			
RECORD No.: D1000184			
REPORT No. NCTL-210-3916-01	CAD DWG. No.: D015690	REV: B	SHEET 4 of 20

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.


DISCLAIMER:
This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.

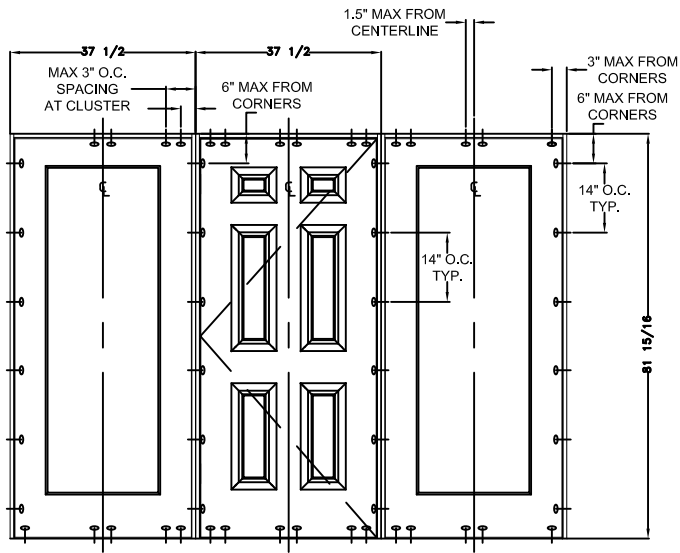

TYPICAL ELEVATION WITH FASTENER SPACING

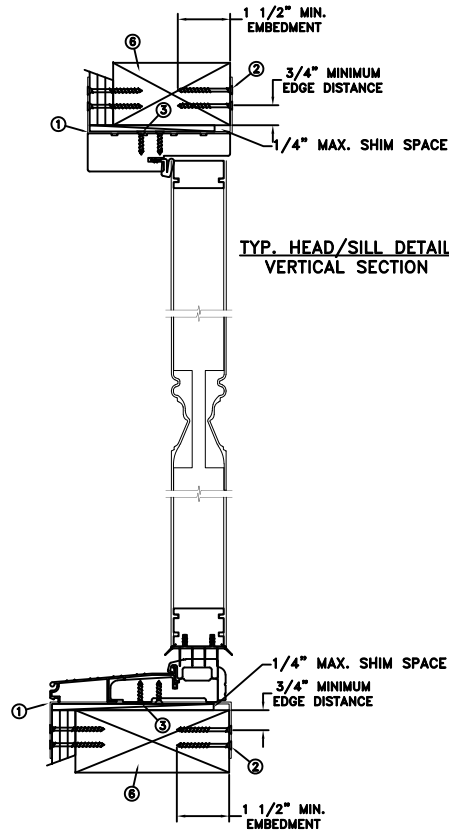

TYP. HEAD/SILL DETAIL
VERTICAL SECTION

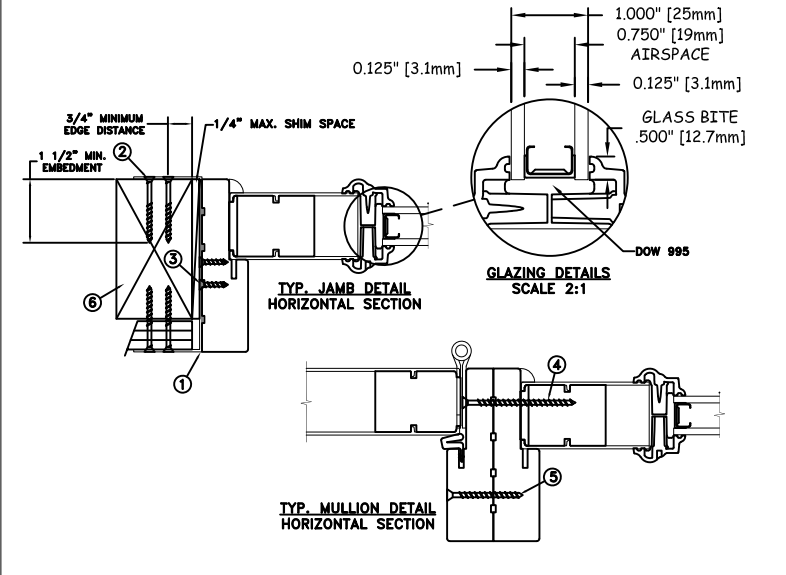

MASONRY STRAP INSTALLATION

MAXIMUM FRAME	DP	IMPACT
112.125 x 81.9375	+50/-50	NO


Installation Notes:

- Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
- Use min. two (2) - #10 PFH or larger fasteners through masonry strap with sufficient length to penetrate a minimum of 1 1/2" into the buck. Bend straps around both sides of the buck. For 2x wood frame substrate (min. S.G. = 0.55).
- Use min. two (2) - #10 PFH or larger fasteners through masonry strap into jamb without penetrating through the jamb into product causing visibility or collateral damage to product.
- Install one (1) - #9 x 2-1/2" PH fastener through each hinge plate into rough opening.
- Install #10 x 2" fastener through jamb into sidelite frame.
- Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.

General Notes:

- The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
- All glazing shall conform to ASTM E1300.
- Glazing is 3.1mm tempered - 19mm airspace - 3.1mm tempered glass.
- Use structural or composite shims where required.
- Masonry strap specifications: 20 Ga. galvanized steel, .036" min. thickness x 1.5" min. width.

This item has been digitally signed and sealed by Micah Swartz, P.E. on the date adjacent to the seal. Printed copies of this document are not considered signed and sealed and the signature must be verified on any electronic copies

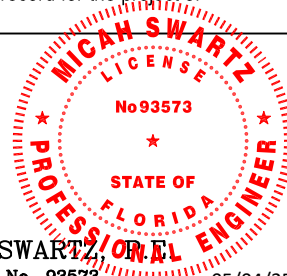


MICAH SWARTZ, P.E.
5134 Cambridge Ct.
Klamath Falls, OR. 97603
(541) 363-8075

05/04/25


DATE: 04/02/2025		JELD-WEN 3737 LAKEPORT BLVD. KLAMATH FALLS OR, 97601 PHONE: (800) 535-3936		
SCALE: NTS				
DRAWN BY: M.HAM		TITLE: Design Pro/Smooth Pro (F-3500) Fiberglass Swinging Door Inswing 3 Panel OXO		
CHECKED BY: D.VEZO				
APPROVED BY: D.VEZO				
RECORD No.: D1000184				
REPORT No. NCTL-210-3916-01		CAD DWG. No.: D015690	REV: B	SHEET 5 of 20

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.


DISCLAIMER:
This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.

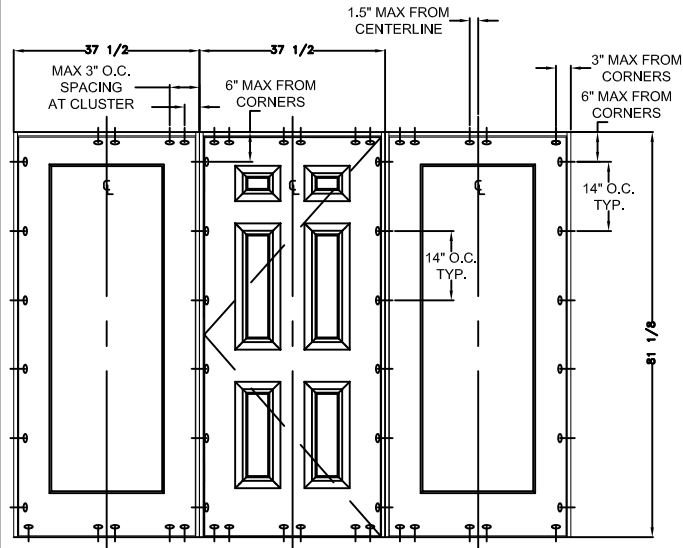

TYPICAL ELEVATION WITH FASTENER SPACING

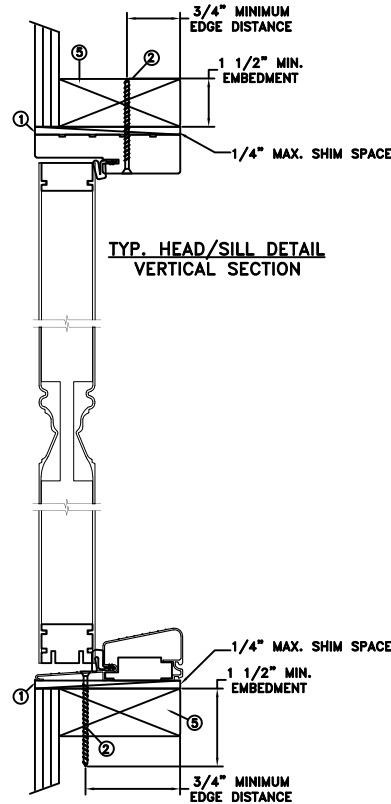

TYP. HEAD/SILL DETAIL
VERTICAL SECTION

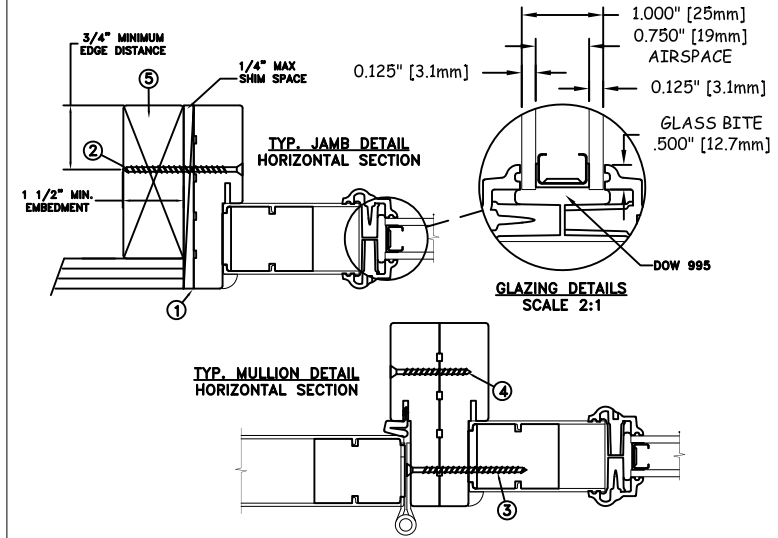

TYP. MULLION DETAIL
HORIZONTAL SECTION

MAXIMUM FRAME	DP	IMPACT
112.125 x 81.125	+50/-50	NO

Installation Notes:

1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
2. Use #10 PH or greater fastener through the head & side jambs with sufficient length to penetrate a minimum of 1-1/2" into the wood framing. For 2x wood frame substrate (min. S.G. = 0.55).
3. Install one (1) - #9 x 2-1/2" PH fastener through each hinge plate into rough opening.
4. Install #10 x 2" fastener through jamb into sidelite frame.
5. Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.

General Notes:


1. The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
2. All glazing shall conform to ASTM E1300.
3. Glazing is 3.1mm tempered - 19.0mm airspace - 3.1mm tempered glass.
4. Use structural or composite shims where required.

This item has been digitally signed and sealed by Micah Swartz, P.E. on the date adjacent to the seal. Printed copies of this document are not considered signed and sealed and the signature must be verified on any electronic copies

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.

DISCLAIMER:

This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.

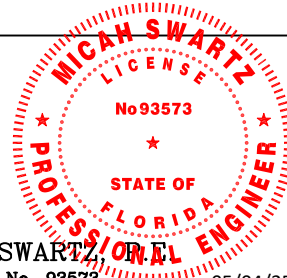


MICAH SWARTZ, P.E.
PE No. 93573
5134 Cambridge Ct.
Klamath Falls, OR. 97603
(541) 363-8075



05/04/25

DATE: 04/02/2025		JELD-WEN 3737 LAKEPORT BLVD. KLAMATH FALLS OR, 97601 PHONE: (800) 535-3936	
SCALE: NTS			
DRAWN BY: M.HAM	CHECKED BY: D.VEZO	TITLE: Design Pro/Smooth Pro (F-3500) Fiberglass Swinging Door Outswing 3 Panel OXO	
APPROVED BY: D.VEZO	RECORD No.:		
D1000184			
REPORT No. NCTL-210-3916-01	CAD DWG. No.: D015690	REV: B	SHEET 6 of 20

MASONRY STRAP INSTALLATION

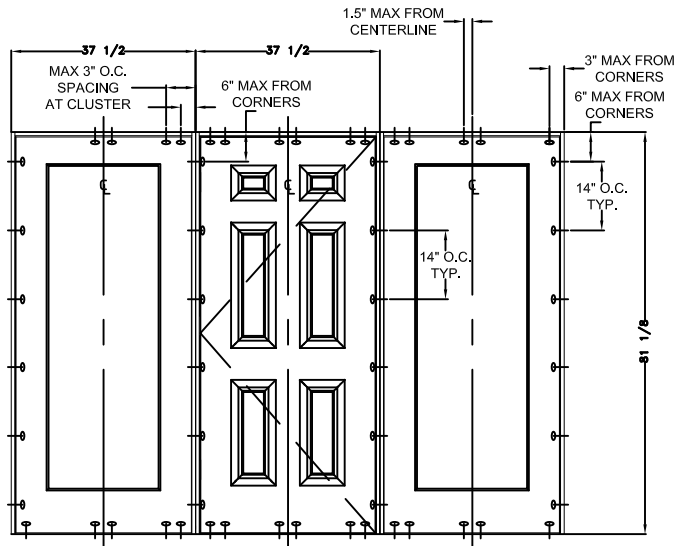

TYPICAL ELEVATION WITH FASTENER SPACING

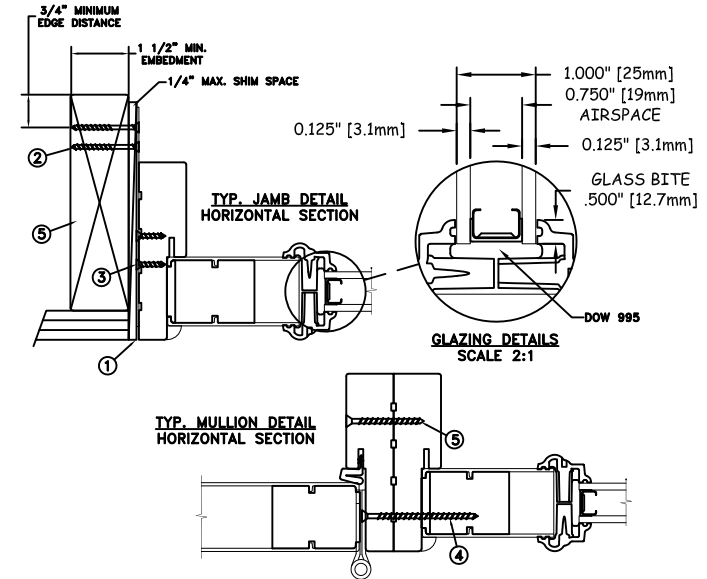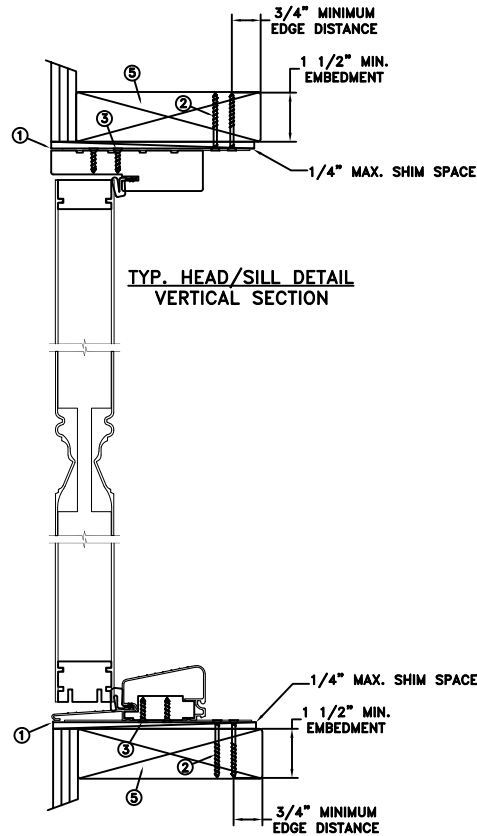

MAXIMUM FRAME	DP	IMPACT
112.125 x 81.125	+50/-50	NO


Installation Notes:

1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
2. Use two (2) - #10 PFH or larger fasteners through masonry strap with sufficient length to penetrate a minimum of 1-1/2" into the buck. For 2x wood frame substrate (min. S.G. = 0.55).
3. Use two (2) - #10 PFH or larger fasteners through masonry strap into jamb without penetrating through the jamb into product causing visibility or collateral damage to product.
4. Install one (1) - #9 x 2-1/2" PH fastener through each hinge plate into rough opening.
5. Install #10 x 2" fastener through jamb into sidelite frame.
6. Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.

General Notes:

1. The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
2. All glazing shall conform to ASTM E1300.
3. Glazing is 3.1mm tempered - 19mm airspace - 3.1mm tempered glass.
4. Use structural or composite shims where required.
5. Masonry strap specifications: 20 Ga. galvanized steel, .036" min. thickness x 1.5" min. width.

This item has been digitally signed and sealed by Micah Swartz, P.E. on the date adjacent to the seal. Printed copies of this document are not considered signed and sealed and the signature must be verified on any electronic copies

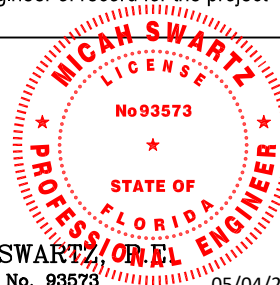


MICAH SWARTZ, P.E.
5134 Cambridge Ct.
Klamath Falls, OR. 97603
(541) 363-8075

05/04/25


DATE: 04/02/2025		JELD-WEN 3737 LAKEPORT BLVD. KLAMATH FALLS OR, 97601 PHONE: (800) 535-3936		
SCALE: NTS				
DRAWN BY: M.HAM		TITLE: Design Pro/Smooth Pro (F-3500) Fiberglass Swinging Door Outswing 3 Panel OXO		
CHECKED BY: D.VEZO				
APPROVED BY: D.VEZO				
RECORD No.: D1000184				
REPORT No. NCTL-210-3916-01		CAD DWG. No.: D015690	REV: B	SHEET 7 of 20

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.


DISCLAIMER:
This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.

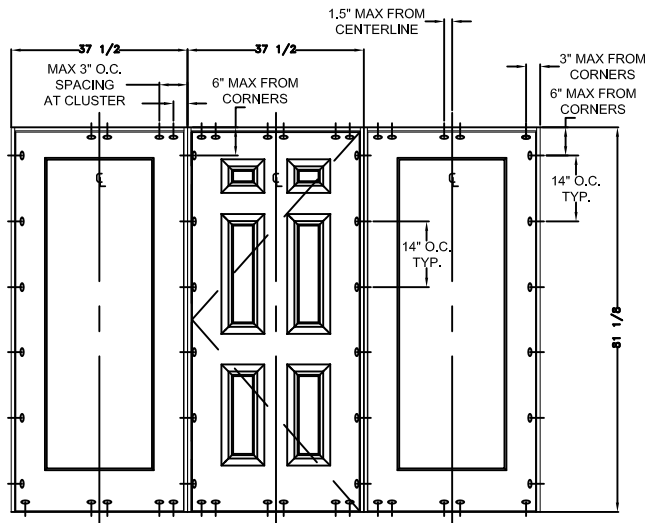

TYPICAL ELEVATION WITH FASTENER SPACING

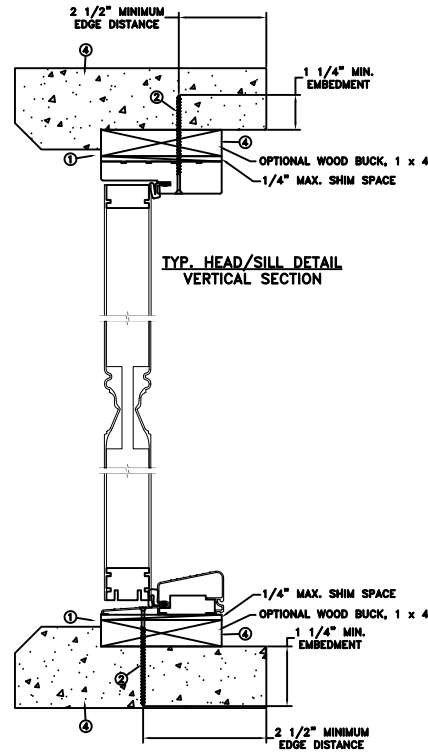

TYP. HEAD/SILL DETAIL
VERTICAL SECTION

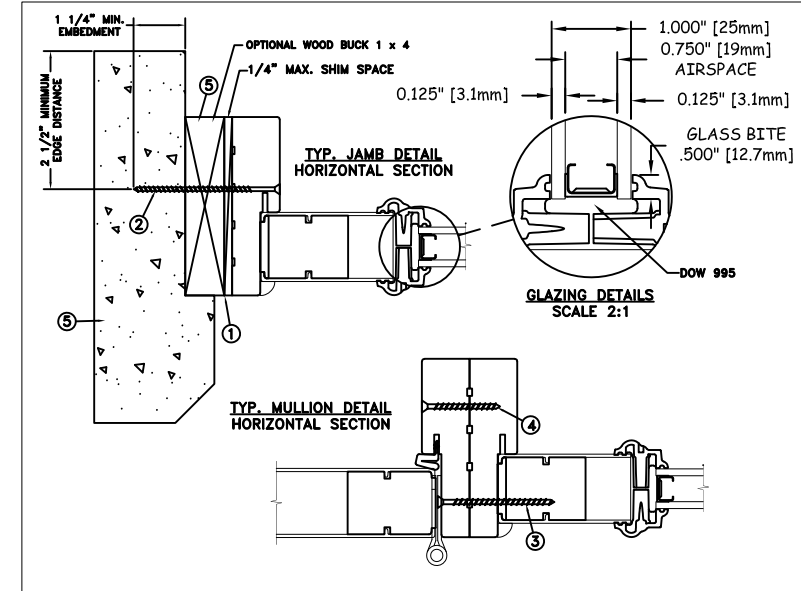

TYP. JAMB DETAIL
HORIZONTAL SECTION

TYP. MULLION DETAIL
HORIZONTAL SECTION

GLAZING DETAILS
SCALE 2:1

MAXIMUM FRAME	DP	IMPACT
112.125 x 81.125	+50/-50	NO


Installation Notes:

1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
2. Use 1/4" tapcon or equivalent fasteners through frame with sufficient length to penetrate a minimum of 1-1/4" into concrete or masonry at each location with a 2-1/2" min. from edge distance. For concrete (min. fc = 3000 psi) or masonry substrate (CMU shall adhere to ASTM C90).
3. Install one (1) - 1/4" tapcon through each hinge plate with 1-1/4" min. embedment into concrete or masonry.
4. Install #10 x 2" fastener through jamb into sidelite frame.
5. Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.

General Notes:

1. The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
2. All glazing shall conform to ASTM E1300.
3. Glazing is 3.1mm tempered - 19.0mm airspace - 3.1mm tempered glass.
4. Use structural or composite shims where required.

This item has been digitally signed and sealed by Micah Swartz, P.E. on the date adjacent to the seal. Printed copies of this document are not considered signed and sealed and the signature must be verified on any electronic copies

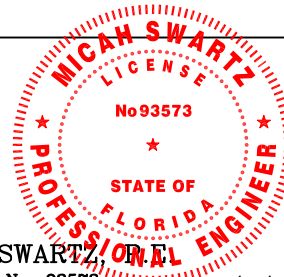


MICAH SWARTZ, P.E.
PE No. 93573
5134 Cambridge Ct.
Klamath Falls, OR. 97603
(541) 363-8075

05/04/25


DATE: 04/02/2025	JELD-WEN 3737 LAKEPORT BLVD. KLAMATH FALLS OR, 97601 PHONE: (800) 535-3936
DRAWN BY: M.HAM	
CHECKED BY: D.VEZO	TITLE: Design Pro/Smooth Pro (F-3500) Fiberglass Swinging Door Outswing 3 Panel OXO
APPROVED BY: D.VEZO	
REPORT No.: NCTL-210-3916-01	RECORD No.: D1000184
CAD DWG. No.: D015690	REV: B
SHEET 8 of 20	

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.



DISCLAIMER:
This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.

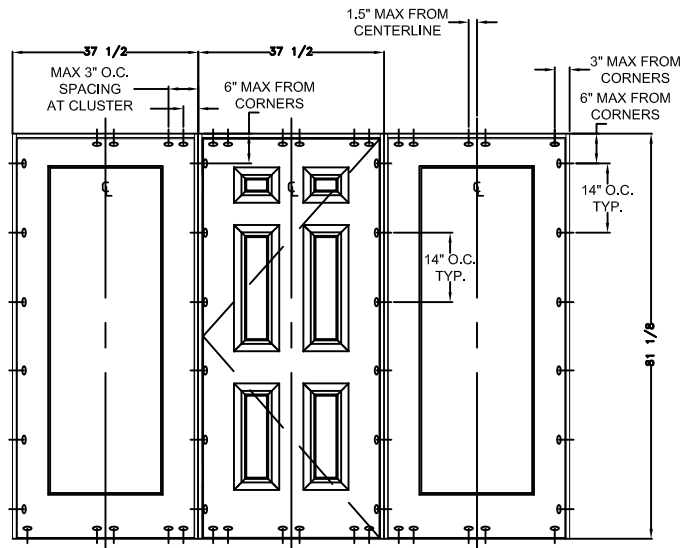

TYPICAL ELEVATION WITH FASTENER SPACING

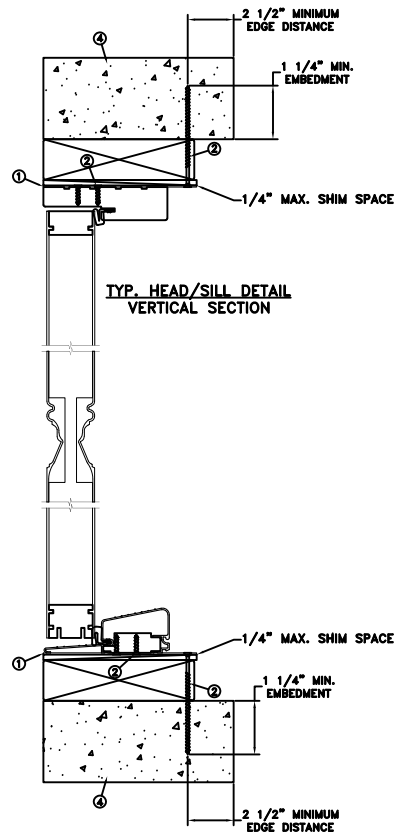

TYP. HEAD/SILL DETAIL
VERTICAL SECTION

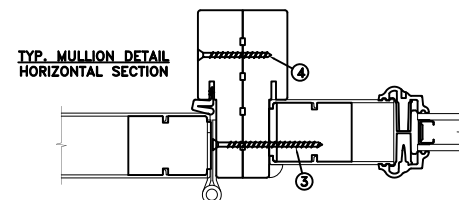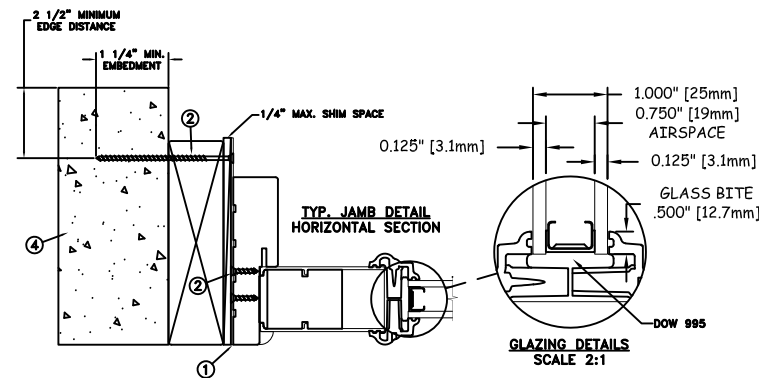

TYP. MULLION DETAIL
HORIZONTAL SECTION

MAXIMUM FRAME	DP	IMPACT
112.125 x 81.125	+50/-50	NO


Installation Notes:

1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
2. Use one (1) - 1/4" Tapcon or equivalent fasteners through strap with sufficient length to penetrate a minimum of 1-1/4" into concrete or masonry at each location with a 2-1/2" min. from edge distance. Use two (2) - #10 PFH fasteners through masonry strap into frame. For concrete (min. fc = 3000 psi) or masonry substrate (CMU shall adhere to ASTM C90).
3. Install one (1) - 1/4" tapcon through each hinge plate with 1-1/4" min. embedment into concrete masonry.
4. Install #10 x 2" fastener through jamb into sidelite frame.
5. Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.

General Notes:

1. The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
2. All glazing shall conform to ASTM E1300.
3. Glazing is 3.1mm tempered - 19mm airspace - 3.1mm tempered glass.
4. Use structural or composite shims where required.
5. Masonry strap specifications: 20 Ga. galvanized steel, .036" min. thickness x 1.5" min. width.

This item has been digitally signed and sealed by Micah Swartz, P.E. on the date adjacent to the seal. Printed copies of this document are not considered signed and sealed and the signature must be verified on any electronic copies

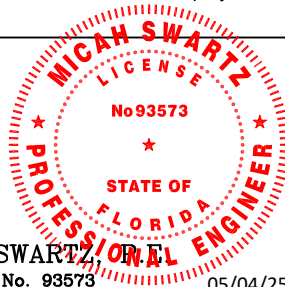


MICAH SWARTZ, P.E.
PE No. 93573
5134 Cambridge Ct.
Klamath Falls, OR. 97603
(541) 363-8075

05/04/25


DATE: 04/02/2025	JELD-WEN 3737 LAKEPORT BLVD. KLAMATH FALLS OR, 97601 PHONE: (800) 535-3936
SCALE: NTS	
DRAWN BY: M.HAM	Design Pro/Smooth Pro (F-3500) Fiberglass Swinging Door Outswing 3 Panel OXO
CHECKED BY: D.VEZO	
APPROVED BY: D.VEZO	
RECORD No.: D1000184	
REPORT No. NCTL-210-3916-01	CAD DWG. No.: D015690
REV: B	SHEET 9 of 20

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.



DISCLAIMER:
This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.

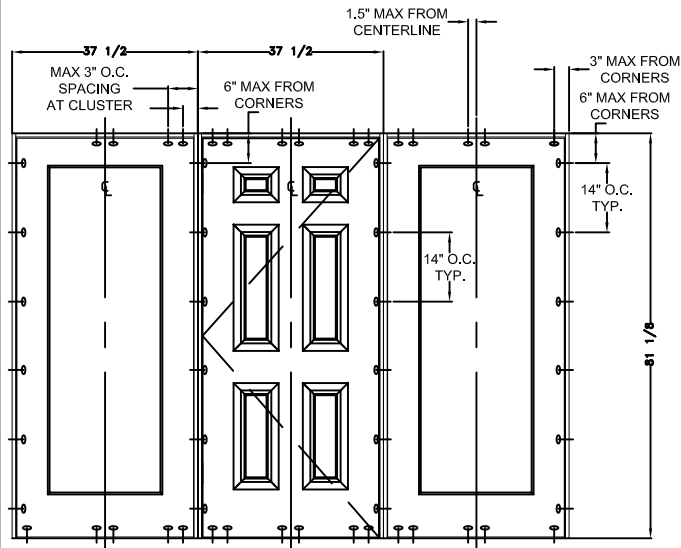

TYPICAL ELEVATION WITH FASTENER SPACING

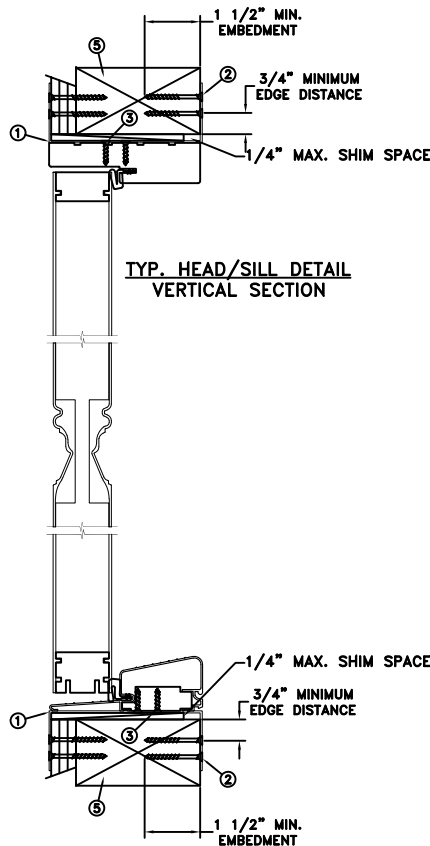

TYP. HEAD/SILL DETAIL VERTICAL SECTION

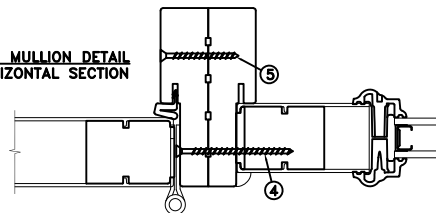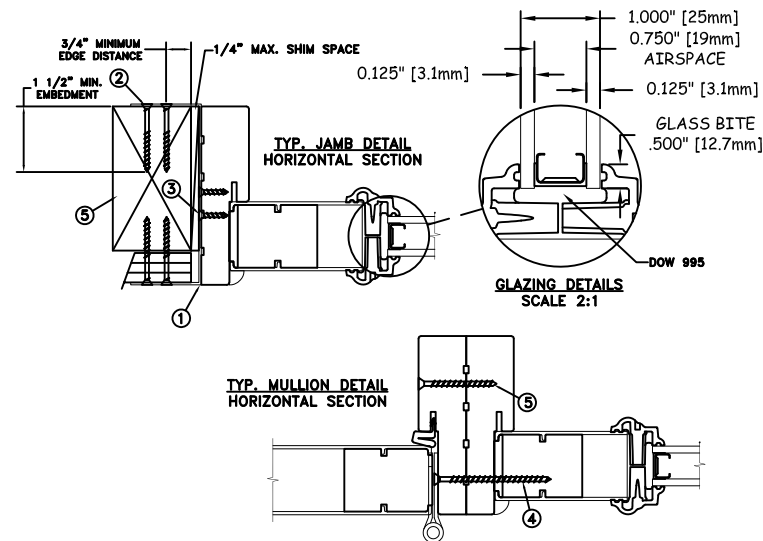

TYP. MULLION DETAIL HORIZONTAL SECTION

MAXIMUM FRAME	DP	IMPACT
112.125 x 81.125	+50/-50	NO


Installation Notes:

1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
2. Use min. two (2) - #10 PFH or larger fasteners through masonry strap with sufficient length to penetrate a minimum of 1 1/2" into the buck. Bend straps around both sides of the buck. For 2x wood frame substrate (min. S.G. = 0.55).
3. Use min. two (2) - #10 PFH or larger fasteners through masonry strap into jamb without penetrating through the jamb into product causing visibility or collateral damage to product.
4. Install one (1) - #9 x 2-1/2" PH fastener through each hinge plate into rough opening.
5. Install #10 x 2" fastener through jamb into sidelite frame.
6. Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.

General Notes:

1. The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
2. All glazing shall conform to ASTM E1300.
3. Glazing is 3.1mm tempered - 19mm airspace - 3.1mm tempered glass.
4. Use structural or composite shims where required.
5. Masonry strap specifications: 20 Ga. galvanized steel, .036" min. thickness x 1.5" min. width.

This item has been digitally signed and sealed by Micah Swartz, P.E. on the date adjacent to the seal. Printed copies of this document are not considered signed and sealed and the signature must be verified on any electronic copies

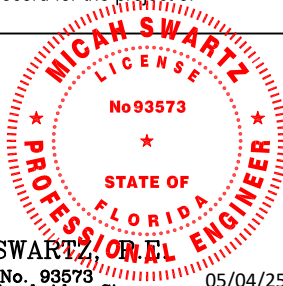


MICAH SWARTZ, P.E.
5134 Cambridge Ct.
Klamath Falls, OR. 97603
(541) 363-8075

05/04/25


DATE: 04/02/2025	JELD-WEN 3737 LAKEPORT BLVD. KLAMATH FALLS OR, 97601 PHONE: (800) 535-3936		
SCALE: NTS			
DRAWN BY: M.HAM	Design Pro/Smooth Pro (F-3500) Fiberglass Swinging Door Outswing 3 Panel OXO		
CHECKED BY: D.VEZO			
APPROVED BY: D.VEZO			
REPORT No. NCTL-210-3916-01			
RECORD No.: D1000184	CAD DWG. No.: D015690	REV: B	SHEET 10 of 20

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.


DISCLAIMER:
This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.

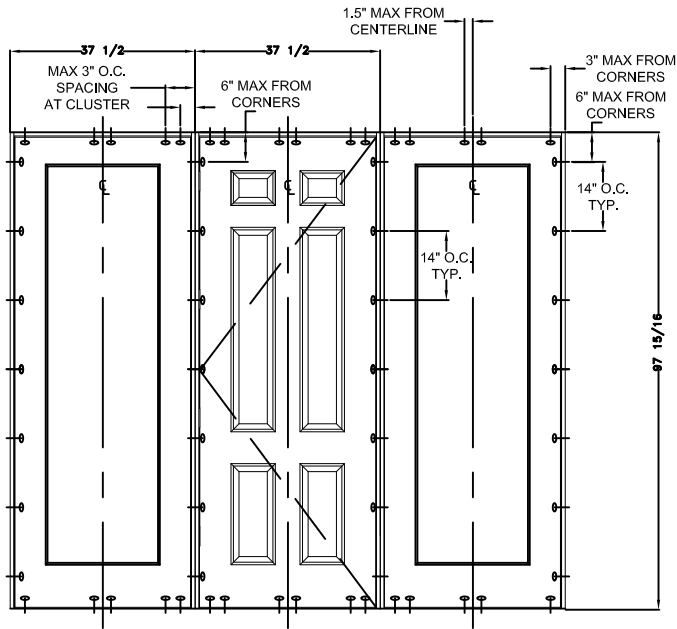

TYPICAL ELEVATION WITH FASTENER SPACING

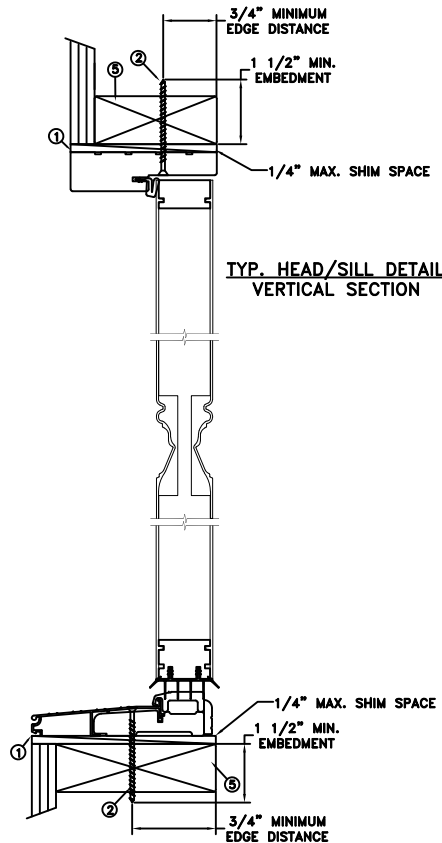

TYP. HEAD/SILL DETAIL
VERTICAL SECTION

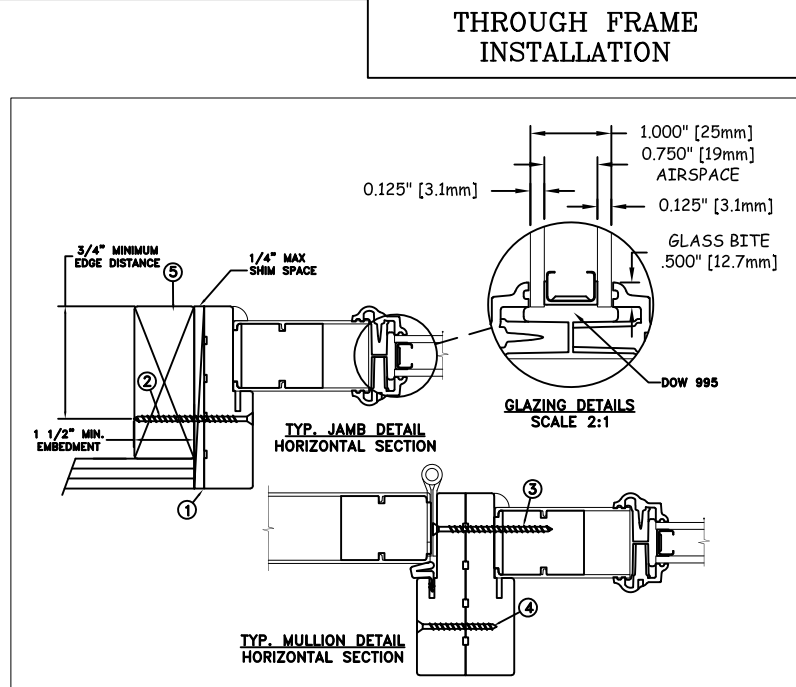

THROUGH FRAME
INSTALLATION

MAXIMUM FRAME	DP	IMPACT
112.125 x 97.9375	+45/-45	NO

Installation Notes:

1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
2. Use #10 PH or greater fastener through the head & side jambs with sufficient length to penetrate a minimum of 1-1/2" into the wood framing. For 2x wood frame substrate (min. S.G. = 0.55).
3. Install one (1) - #9 x 2-1/2" PH fastener through each hinge plate into rough opening.
4. Install #10 x 2" fastener through jamb into sidelite frame.
5. Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.

General Notes:


1. The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
2. All glazing shall conform to ASTM E1300.
3. Glazing is 3.1mm tempered - 19.0mm airspace - 3.1mm tempered glass.
4. Use structural or composite shims where required.

This item has been digitally signed and sealed by Micah Swartz, P.E. on the date adjacent to the seal. Printed copies of this document are not considered signed and sealed and the signature must be verified on any electronic copies

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.

DISCLAIMER:


This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.

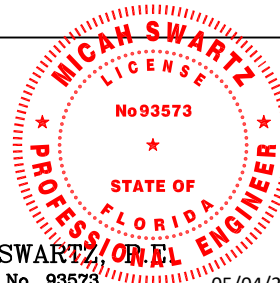


MICAH SWARTZ, P.E.
PE No. 93573
5134 Cambridge Ct.
Klamath Falls, OR. 97603
(541) 363-8075

05/04/25


DATE: 04/02/2025	JELD-WEN 3737 LAKEPORT BLVD. KLAMATH FALLS OR, 97601 PHONE: (800) 535-3936
SCALE: NTS	
DRAWN BY: M.HAM	TITLE: Design Pro/Smooth Pro (F-3500) Fiberglass Swinging Door Inswing 3 Panel OXO
CHECKED BY: D.Vezo	
APPROVED BY: D.Vezo	
RECORD No.: D1000184	
REPORT No. NCTL-210-3916-01	CAD DWG. No.: D015690
REV: B	SHEET 11 of 20

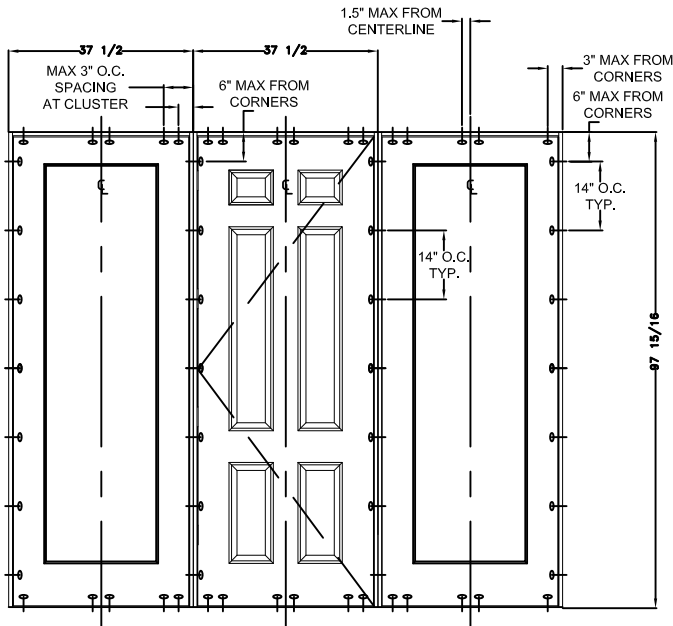

TYPICAL ELEVATION WITH FASTENER SPACING

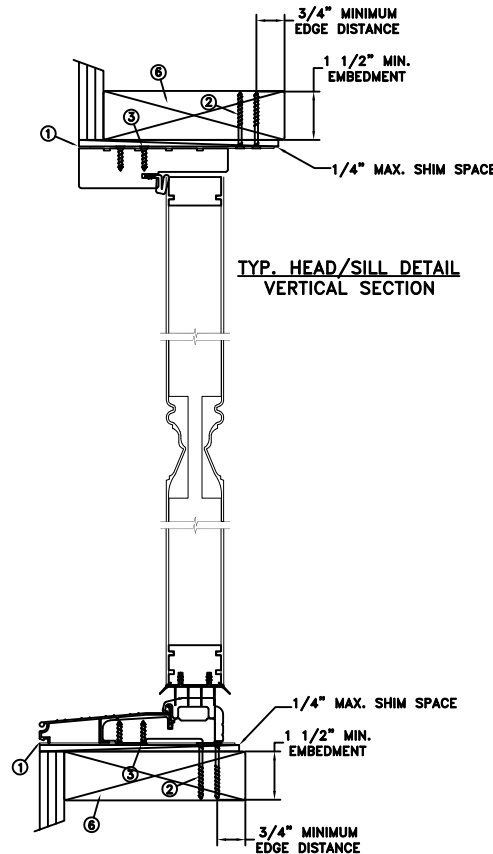

TYP. HEAD/SILL DETAIL
VERTICAL SECTION

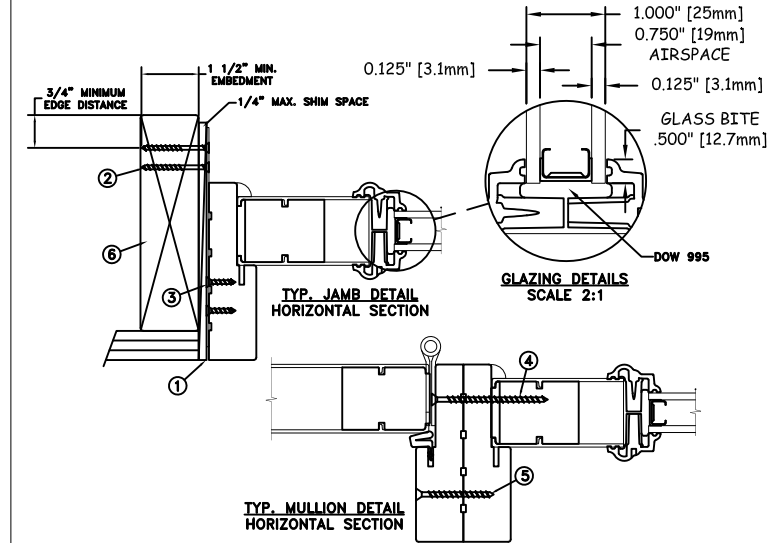

TYP. JAMB DETAIL
HORIZONTAL SECTION

TYP. MULLION DETAIL
HORIZONTAL SECTION

GLAZING DETAILS
SCALE 2:1

MAXIMUM FRAME	DP	IMPACT
112.125 x 97.9375	+45/-45	NO


Installation Notes:

1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
2. Use two (2) - #10 PFH or larger fasteners through masonry strap with sufficient length to penetrate a minimum of 1-1/2" into the buck. For 2x wood frame substrate (min. S.G. = 0.55).
3. Use two (2) - #10 PFH or larger fasteners through masonry strap into jamb without penetrating through the jamb into product causing visibility or collateral damage to product.
4. Install one (1) - #9 x 2-1/2" PH fastener through each hinge plate into rough opening.
5. Install #10 x 2" fastener through jamb into sidelite frame.
6. Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.

General Notes:

1. The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
2. All glazing shall conform to ASTM E1300.
3. Glazing is 3.1mm tempered - 19mm airspace - 3.1mm tempered glass.
4. Use structural or composite shims where required.
5. Masonry strap specifications: 20 Ga. galvanized steel, .036" min. thickness x 1.5" min. width.

This item has been digitally signed and sealed by Micah Swartz, P.E. on the date adjacent to the seal. Printed copies of this document are not considered signed and sealed and the signature must be verified on any electronic copies

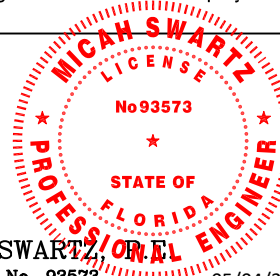


MICAH SWARTZ, P.E.
PE No. 93573
5134 Cambridge Ct.
Klamath Falls, OR. 97603
(541) 363-8075

05/04/25


DATE: 04/02/2025	JELD-WEN 3737 LAKEPORT BLVD. KLAMATH FALLS OR, 97601 PHONE: (800) 535-3936		
SCALE: NTS			
DRAWN BY: M.HAM	Design Pro/Smooth Pro (F-3500) Fiberglass Swinging Door Inswing 3 Panel OXO		
CHECKED BY: D.VEZO			
APPROVED BY: D.VEZO			
RECORD No.: D1000184			
REPORT No. NCTL-210-3916-01	CAD DWG. No.: D015690	REV: B	SHEET 12 of 20

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.


DISCLAIMER:
This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.

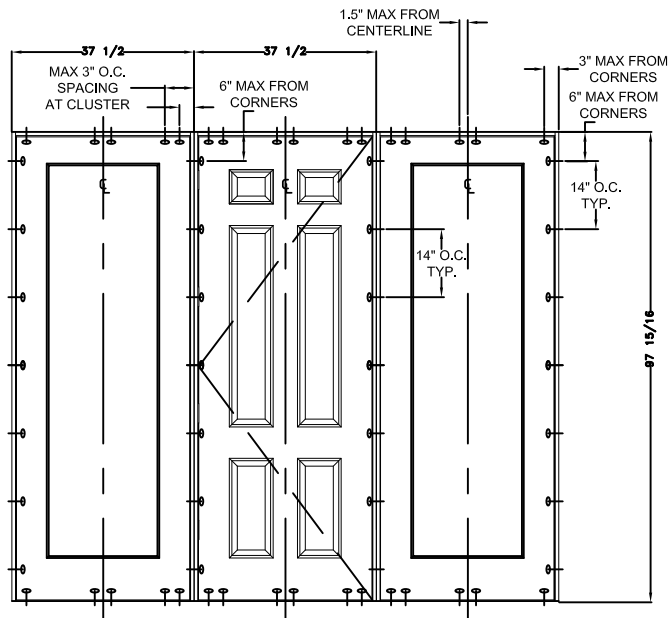

TYPICAL ELEVATION WITH FASTENER SPACING

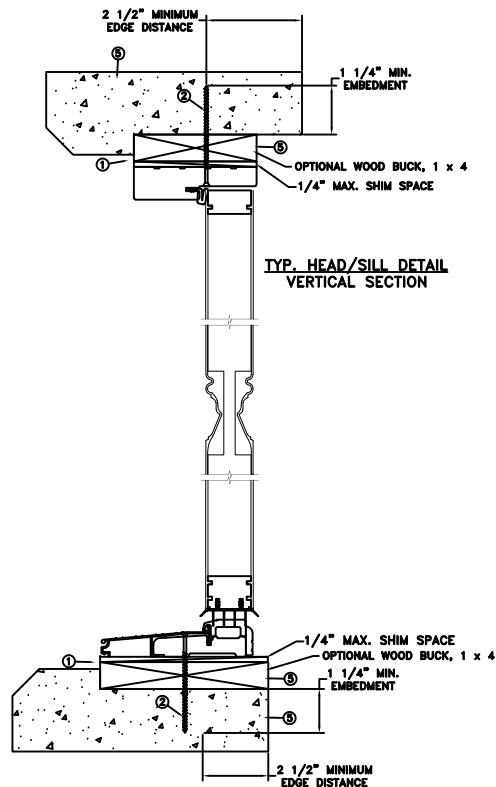

TYP. HEAD/SILL DETAIL
VERTICAL SECTION

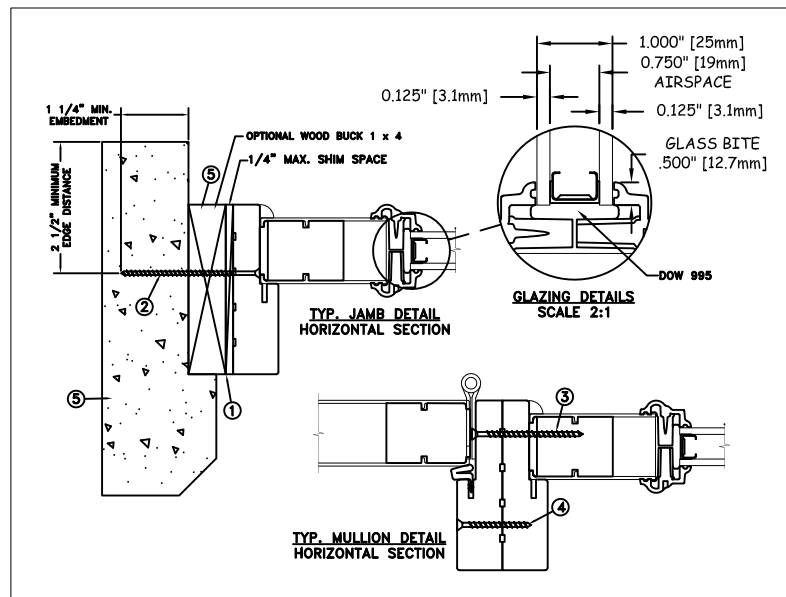

TYP. JAMB DETAIL
HORIZONTAL SECTION

TYP. MULLION DETAIL
HORIZONTAL SECTION

GLAZING DETAILS
SCALE 2:1

MAXIMUM FRAME	DP	IMPACT
112.125 x 97.9375	+45/-45	NO


Installation Notes:

1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
2. Use 1/4" tapcon or equivalent fasteners through frame with sufficient length to penetrate a minimum of 1-1/4" into concrete or masonry at each location with a 2-1/2" min. from edge distance. For concrete (min. fc = 3000 psi) or masonry substrate (CMU shall adhere to ASTM C90).
3. Install one (1) - 1/4" tapcon through each hinge plate with 1-1/4" min. embedment into concrete or masonry.
4. Install #10 x 2" fastener through jamb into sidelite frame.
5. Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.

General Notes:

1. The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
2. All glazing shall conform to ASTM E1300.
3. Glazing is 3.1mm tempered - 19.0mm airspace - 3.1mm tempered glass.
4. Use structural or composite shims where required.

This item has been digitally signed and sealed by Micah Swartz, P.E. on the date adjacent to the seal. Printed copies of this document are not considered signed and sealed and the signature must be verified on any electronic copies

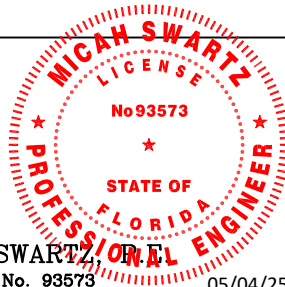


MICAH SWARTZ, P.E.
PE No. 93573
5134 Cambridge Ct.
Klamath Falls, OR. 97603
(541) 363-8075

05/04/25


DATE: 04/02/2025	JELD-WEN 3737 LAKEPORT BLVD. KLAMATH FALLS OR, 97601 PHONE: (800) 535-3936		
SCALE: NTS			
DRAWN BY: M.HAM	Design Pro/Smooth Pro (F-3500) Fiberglass Swinging Door Inswing 3 Panel OXO		
CHECKED BY: D.VEZO			
APPROVED BY: D.VEZO			
RECORD No.: D1000184			
REPORT No. NCTL-210-3916-01	CAD DWG. No.: D015690	REV: B	SHEET 13 of 20

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.


DISCLAIMER:
This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.

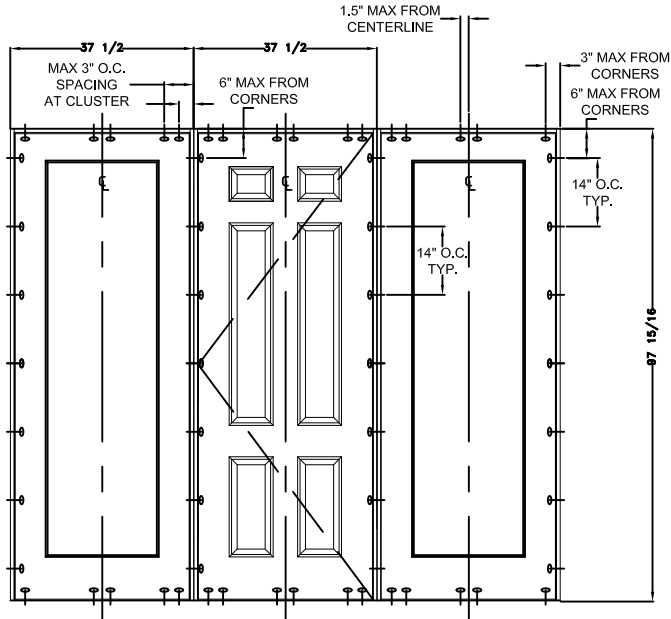

TYPICAL ELEVATION WITH FASTENER SPACING

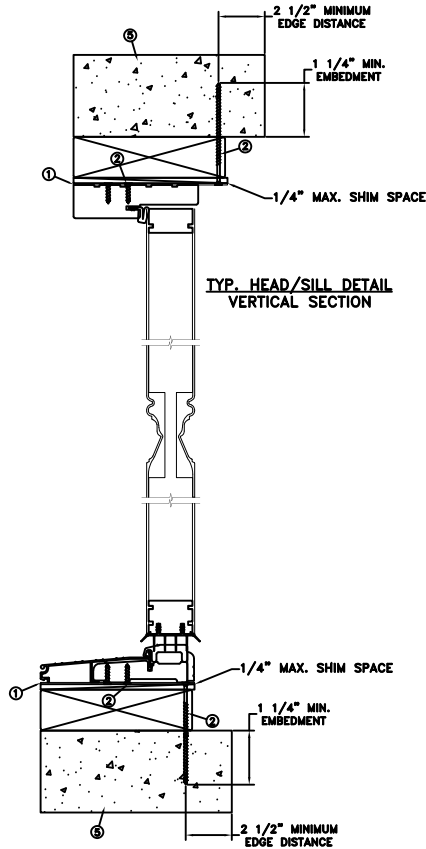

TYP. HEAD/SILL DETAIL
VERTICAL SECTION

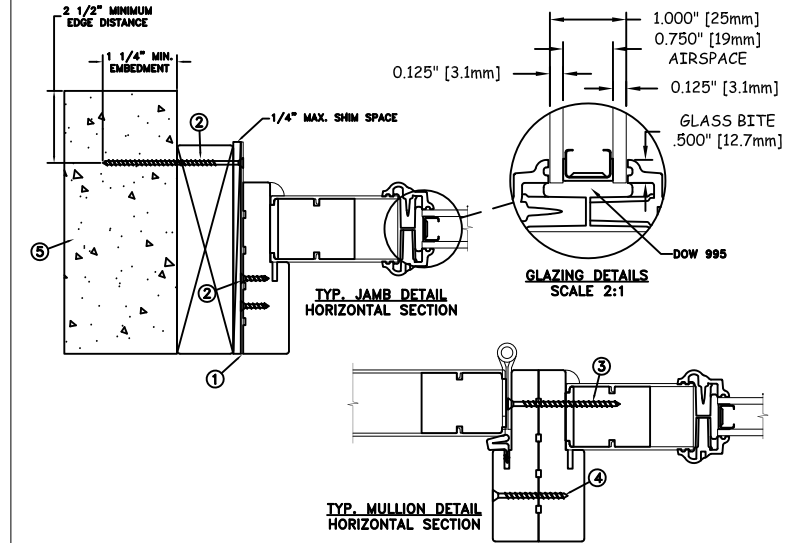

TYP. JAMB DETAIL
HORIZONTAL SECTION

TYP. MULLION DETAIL
HORIZONTAL SECTION

GLAZING DETAILS
SCALE 2:1

MAXIMUM FRAME	DP	IMPACT
112.125 x 97.9375	+45/-45	NO


Installation Notes:

1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
2. Use one (1) - 1/4" Tapcon or equivalent fasteners through strap with sufficient length to penetrate a minimum of 1-1/4" into concrete or masonry at each location with a 2-1/2" min. from edge distance. Use two (2) - #10 PFH fasteners through masonry strap into frame. For concrete (min. fc = 3000 psi) or masonry substrate (CMU shall adhere to ASTM C90).
3. Install one (1) - 1/4" tapcon through each hinge plate with 1-1/4" min. embedment into concrete masonry.
4. Install #10 x 2" fastener through jamb into sidelite frame.
5. Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.

General Notes:

1. The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
2. All glazing shall conform to ASTM E1300.
3. Glazing is 3.1mm tempered - 19mm airspace - 3.1mm tempered glass.
4. Use structural or composite shims where required.
5. Masonry strap specifications: 20 Ga. galvanized steel, .036" min. thickness x 1.5" min. width.

This item has been digitally signed and sealed by Micah Swartz, P.E. on the date adjacent to the seal. Printed copies of this document are not considered signed and sealed and the signature must be verified on any electronic copies

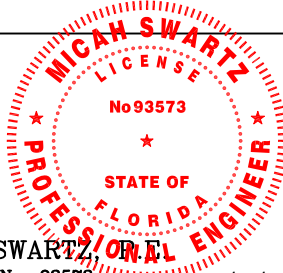


MICAH SWARTZ, P.E.
PE No. 93573
5134 Cambridge Ct.
Klamath Falls, OR. 97603
(541) 363-8075

05/04/25


	DATE: 04/02/2025	 3737 LAKEPORT BLVD. KLAMATH FALLS OR, 97601 PHONE: (800) 535-3936	
DRAWN BY: M.HAM	SCALE: NTS		
CHECKED BY: D.Vezo	TITLE: Design Pro/Smooth Pro (F-3500) Fiberglass Swinging Door Inswing 3 Panel OXO		
APPROVED BY: D.Vezo			
RECORD No.: D1000184			
REPORT No. NCTL-210-3916-01	CAD DWG. No.: D015711	REV: B	SHEET 14 of 20

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.


DISCLAIMER:
This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.

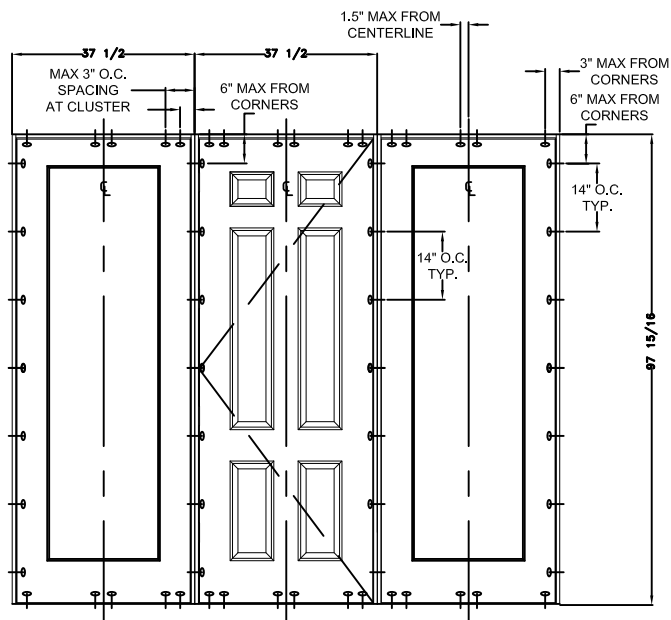

TYPICAL ELEVATION WITH FASTENER SPACING

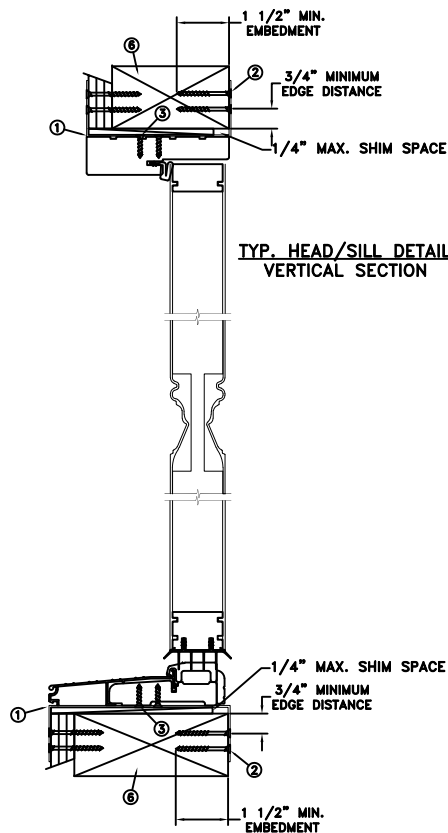

TYP. HEAD/SILL DETAIL
VERTICAL SECTION

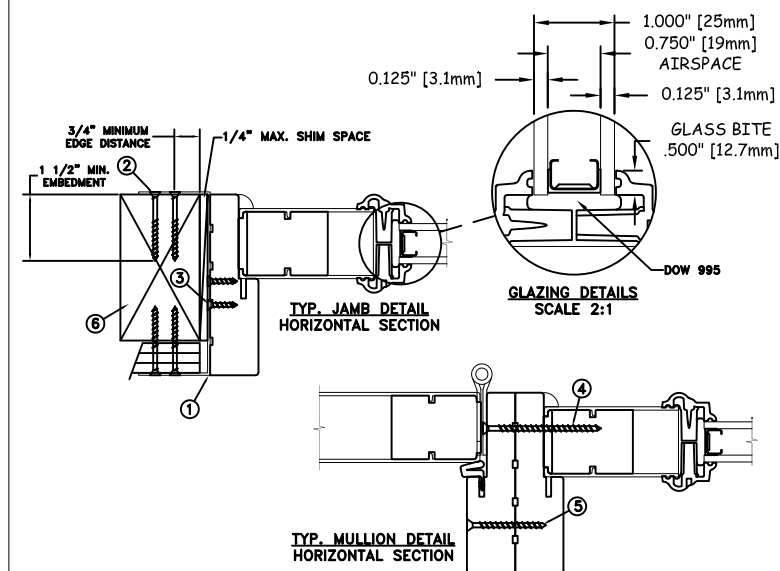

TYP. JAMB DETAIL
HORIZONTAL SECTION

TYP. MULLION DETAIL
HORIZONTAL SECTION

MASONRY STRAP INSTALLATION


Installation Notes:

1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
2. Use min. two (2) - #10 PFH or larger fasteners through masonry strap with sufficient length to penetrate a minimum of 1 1/2" into the buck. Bend straps around both sides of the buck. For 2x wood frame substrate (min. S.G. = 0.55).
3. Use min. two (2) - #10 PFH or larger fasteners through masonry strap into jamb without penetrating through the jamb into product causing visibility or collateral damage to product.
4. Install one (1) - #9 x 2-1/2" PH fastener through each hinge plate into rough opening.
5. Install #10 x 2" fastener through jamb into sidelite frame.
6. Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.

General Notes:

1. The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
2. All glazing shall conform to ASTM E1300.
3. Glazing is 3.1mm tempered - 19mm airspace - 3.1mm tempered glass.
4. Use structural or composite shims where required.
5. Masonry strap specifications: 20 Ga. galvanized steel, .036" min. thickness x 1.5" min. width.

This item has been digitally signed and sealed by Micah Swartz, P.E. on the date adjacent to the seal. Printed copies of this document are not considered signed and sealed and the signature must be verified on any electronic copies

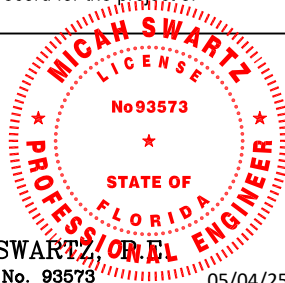

MICAH SWARTZ, P.E.
PE No. 93573
5134 Cambridge Ct.
Klamath Falls, OR. 97603
(541) 363-8075


05/04/25

MAXIMUM FRAME	DP	IMPACT
112.125 x 97.9375	+45/-45	NO


DATE: 04/02/2025	JELD-WEN 3737 LAKEPORT BLVD. KLAMATH FALLS OR, 97601 PHONE: (800) 535-3936
DRAWN BY: M.HAM	
CHECKED BY: D.VEZO	TITLE: Design Pro/Smooth Pro (F-3500) Fiberglass Swinging Door Inswing 3 Panel OXO
APPROVED BY: D.VEZO	
RECORD NO.: D1000184	
REPORT No. NCTL-210-3916-01	CAD DWG. No.: D015690
REV: B	SHEET 15 of 20

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.



DISCLAIMER:
This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.

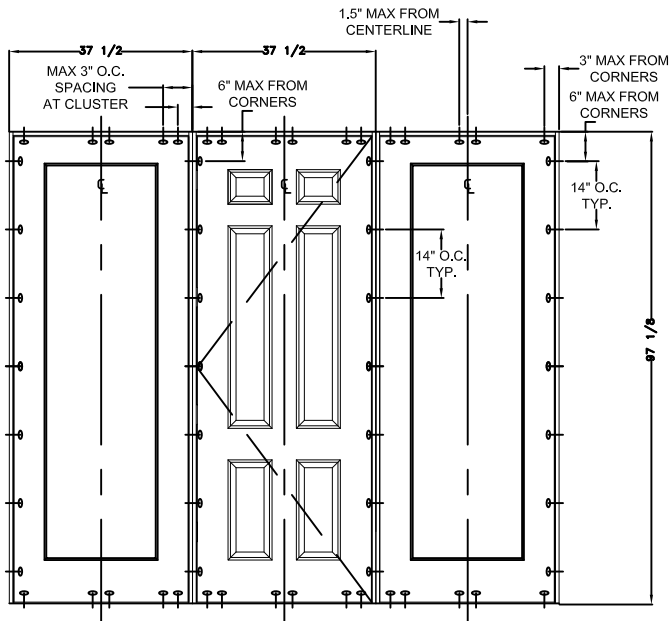

TYPICAL ELEVATION WITH FASTENER SPACING

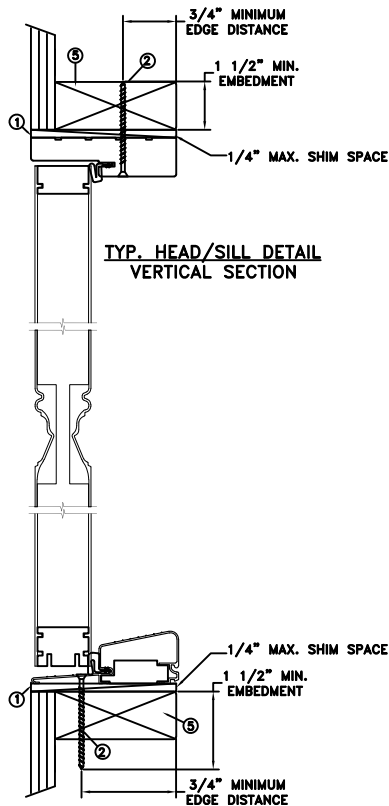

TYP. HEAD/SILL DETAIL
VERTICAL SECTION

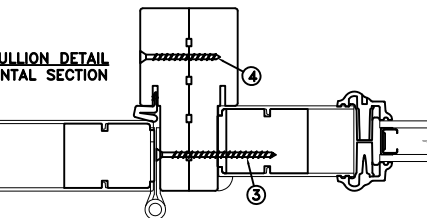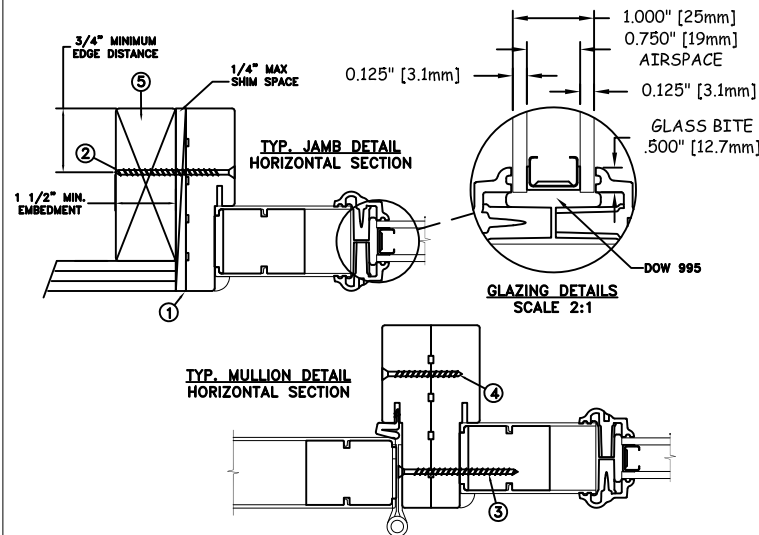

MAXIMUM FRAME	DP	IMPACT
112.125 x 97.125	+45/-45	NO

Installation Notes:

1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
2. Use #10 PH or greater fastener through the head & side jambs with sufficient length to penetrate a minimum of 1-1/2" into the wood framing. For 2x wood frame substrate (min. S.G. = 0.55).
3. Install one (1) - #9 x 2-1/2" PH fastener through each hinge plate into rough opening.
4. Install #10 x 2" fastener through jamb into sidelite frame.
5. Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.

General Notes:


1. The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
2. All glazing shall conform to ASTM E1300.
3. Glazing is 3.1mm tempered - 19.0mm airspace - 3.1mm tempered glass.
4. Use structural or composite shims where required.

This item has been digitally signed and sealed by Micah Swartz, P.E. on the date adjacent to the seal. Printed copies of this document are not considered signed and sealed and the signature must be verified on any electronic copies

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.

DISCLAIMER:


This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.

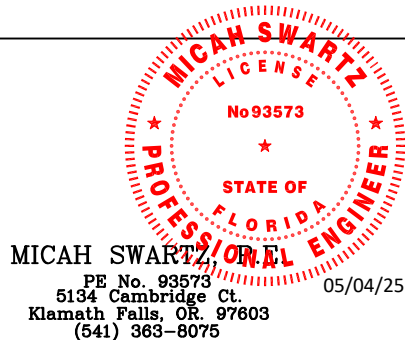


MICAH SWARTZ, P.E.
PE No. 93573
5134 Cambridge Ct.
Klamath Falls, OR. 97603
(541) 363-8075

05/04/25



	DATE: 04/02/2025	JELD-WEN 3737 LAKEPORT BLVD. KLAMATH FALLS OR, 97601 PHONE: (800) 535-3936		
DRAWN BY: M.HAM	SCALE: NTS			
CHECKED BY: D.VEZO	TITLE: Design Pro/Smooth Pro (F-3500) Fiberglass Swinging Door Outswing 3 Panel OXO			
APPROVED BY: D.VEZO				
RECORD No.: D1000184				
REPORT No. NCTL-210-3916-01		CAD DWG. No.: D015690	REV: B	SHEET 16 of 20

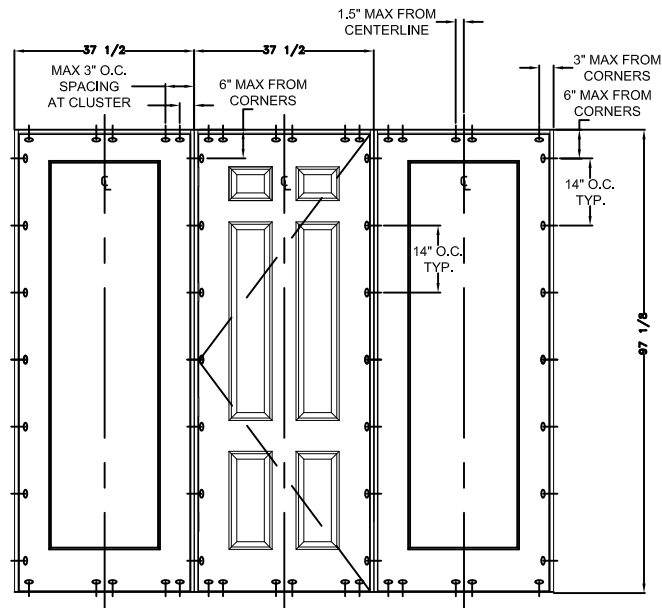

TYPICAL ELEVATION WITH FASTENER SPACING

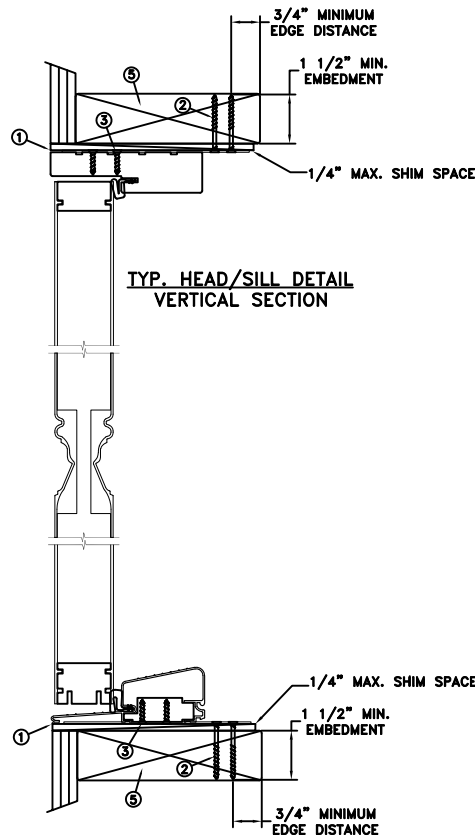

TYP. HEAD/SILL DETAIL
VERTICAL SECTION

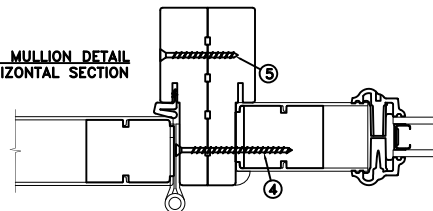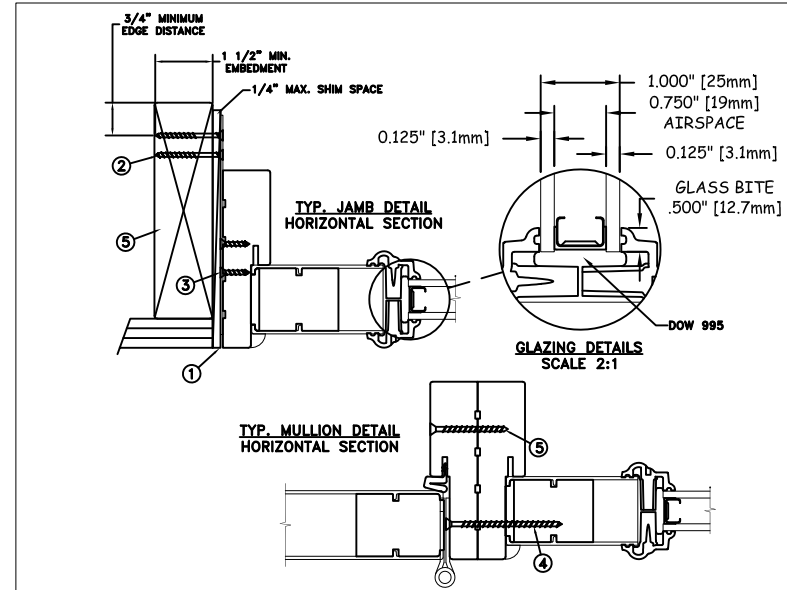

MAXIMUM FRAME	DP	IMPACT
112.125 x 97.125	+45/-45	NO


Installation Notes:

1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
2. Use two (2) - #10 PFH or larger fasteners through masonry strap with sufficient length to penetrate a minimum of 1-1/2" into the buck. For 2x wood frame substrate (min. S.G. = 0.55).
3. Use two (2) - #10 PFH or larger fasteners through masonry strap into jamb without penetrating through the jamb into product causing visibility or collateral damage to product.
4. Install one (1) - #9 x 2-1/2" PH fastener through each hinge plate into rough opening.
5. Install #10 x 2" fastener through jamb into sidelite frame.
6. Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.

General Notes:

1. The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
2. All glazing shall conform to ASTM E1300.
3. Glazing is 3.1mm tempered - 19mm airspace - 3.1mm tempered glass.
4. Use structural or composite shims where required.
5. Masonry strap specifications: 20 Ga. galvanized steel, .036" min. thickness x 1.5" min. width.

This item has been digitally signed and sealed by Micah Swartz, P.E. on the date adjacent to the seal. Printed copies of this document are not considered signed and sealed and the signature must be verified on any electronic copies

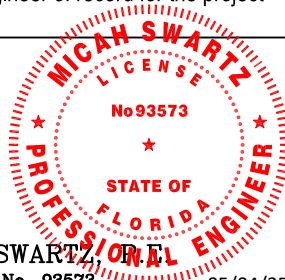

MICAH SWARTZ, P.E.
5134 Cambridge Ct.
Klamath Falls, OR. 97603
(541) 363-8075

05/04/25

DATE: 04/02/2025		3737 LAKEPORT BLVD. KLAMATH FALLS OR, 97601 PHONE: (800) 535-3936	
DRAWN BY: M.HAM		SCALE: NTS	
CHECKED BY: D.VEZO		TITLE: Design Pro/Smooth Pro (F-3500) Fiberglass Swinging Door Outswing 3 Panel OXO	
APPROVED BY: D.VEZO			
RECORD No.: D1000184			
REPORT No. NCTL-210-3916-01		CAD DWG. No.: D015690	REV: B SHEET 17 of 20

JELD-WEN


3737 LAKEPORT BLVD.
KLAMATH FALLS OR, 97601
PHONE: (800) 535-3936

Design Pro/Smooth Pro (F-3500) Fiberglass Swinging Door
Outswing 3 Panel OXO


This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.

DISCLAIMER:
This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.



CONCRETE/MASONRY INSTALLATION

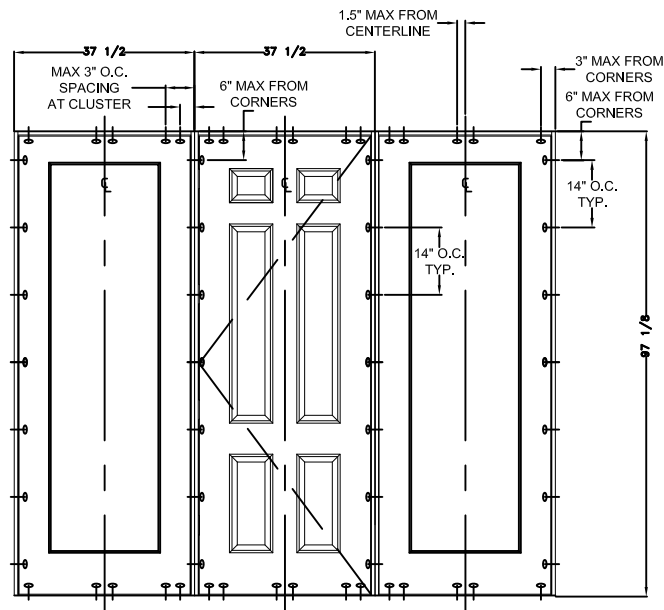

TYPICAL ELEVATION WITH FASTENER SPACING

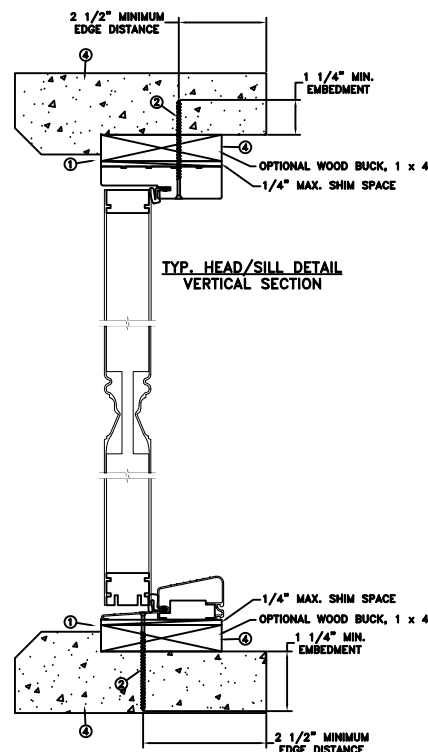

TYP. HEAD/SILL DETAIL
VERTICAL SECTION

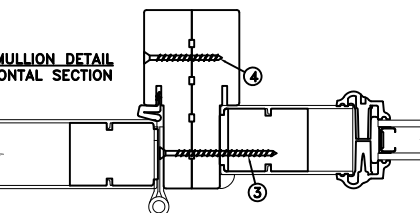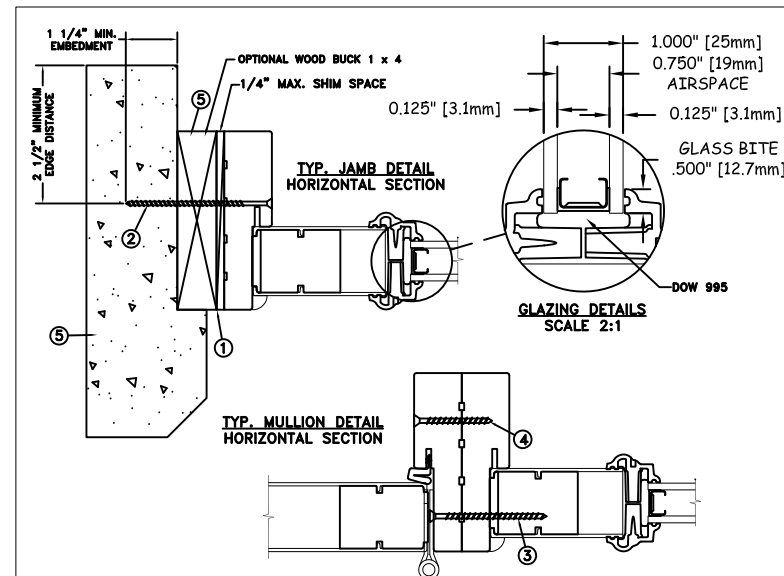

MAXIMUM FRAME	DP	IMPACT
112.125 x 97.125	+45/-45	NO


Installation Notes:

1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
2. Use 1/4" tapcon or equivalent fasteners through frame with sufficient length to penetrate a minimum of 1-1/4" into concrete or masonry at each location with a 2-1/2" min. from edge distance. For concrete (min. fc = 3000 psi) or masonry substrate (CMU shall adhere to ASTM C90).
3. Install one (1) - 1/4" tapcon through each hinge plate with 1-1/4" min. embedment into concrete or masonry.
4. Install #10 x 2" fastener through jamb into sidelite frame.
5. Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.

General Notes:

1. The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
2. All glazing shall conform to ASTM E1300.
3. Glazing is 3.1mm tempered - 19.0mm airspace - 3.1mm tempered glass.
4. Use structural or composite shims where required.

This item has been digitally signed and sealed by Micah Swartz, P.E. on the date adjacent to the seal. Printed copies of this document are not considered signed and sealed and the signature must be verified on any electronic copies

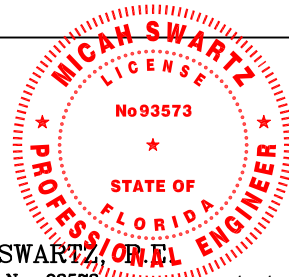


MICAH SWARTZ, P.E.
PE No. 93573
5134 Cambridge Ct.
Klamath Falls, OR. 97603
(541) 363-8075

05/04/25


DATE: 04/02/2025	JELD-WEN 3737 LAKEPORT BLVD. KLAMATH FALLS OR, 97601 PHONE: (800) 535-3936		
SCALE: NTS			
DRAWN BY: M.HAM	TITLE: Design Pro/Smooth Pro (F-3500) Fiberglass Swinging Door Outswing 3 Panel OXO		
CHECKED BY: D.VEZO			
APPROVED BY: D.VEZO			
REPORT No.: NCTL-210-3916-01			
RECORD No.: D1000184	CAD DWG. No.: D015690	REV: B	SHEET 18 of 20

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.


DISCLAIMER:
This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.

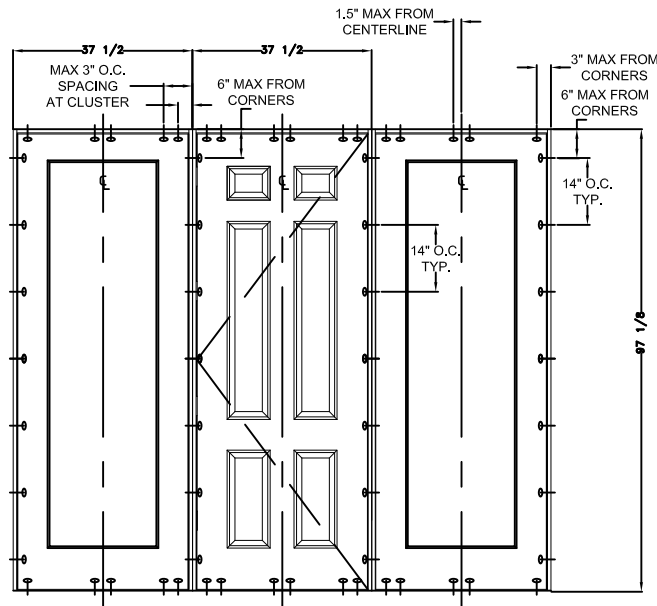

TYPICAL ELEVATION WITH FASTENER SPACING

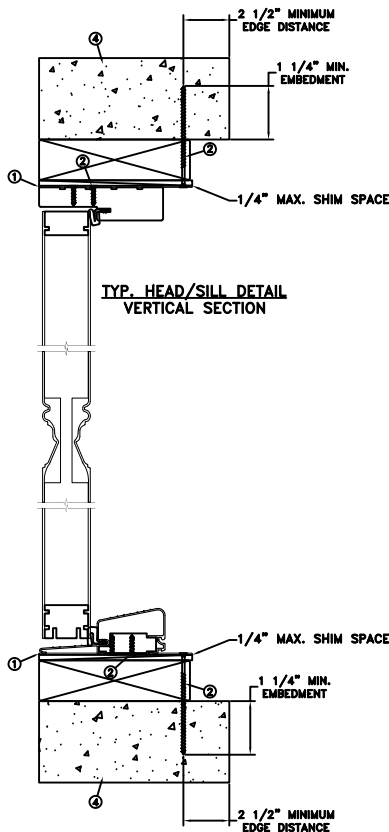

TYP. HEAD/SILL DETAIL
VERTICAL SECTION

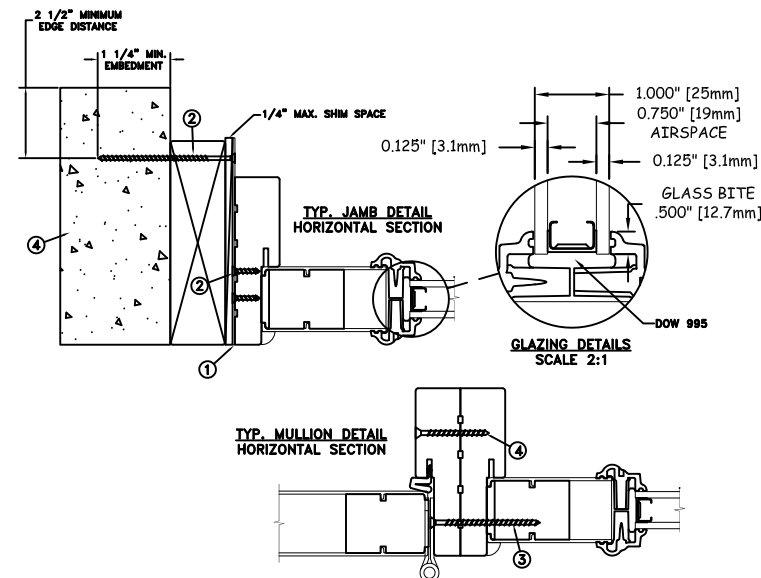

TYP. MULLION DETAIL
HORIZONTAL SECTION

GLAZING DETAILS
SCALE 2:1

MAXIMUM FRAME	DP	IMPACT
112.125 x 97.125	+45/-45	NO


Installation Notes:

1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
2. Use one (1) - 1/4" Tapcon or equivalent fasteners through strap with sufficient length to penetrate a minimum of 1-1/4" into concrete or masonry at each location with a 2-1/2" min. from edge distance. Use two (2) - #10 PFH fasteners through masonry strap into frame. For concrete (min. fc = 3000 psi) or masonry substrate (CMU shall adhere to ASTM C90).
3. Install one (1) - 1/4" tapcon through each hinge plate with 1-1/4" min. embedment into concrete masonry.
4. Install #10 x 2" fastener through jamb into sidelite frame.
5. Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.

General Notes:

1. The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
2. All glazing shall conform to ASTM E1300.
3. Glazing is 3.1mm tempered - 19mm airspace - 3.1mm tempered glass.
4. Use structural or composite shims where required.
5. Masonry strap specifications: 20 Ga. galvanized steel, .036" min. thickness x 1.5" min. width.

This item has been digitally signed and sealed by Micah Swartz, P.E. on the date adjacent to the seal. Printed copies of this document are not considered signed and sealed and the signature must be verified on any electronic copies

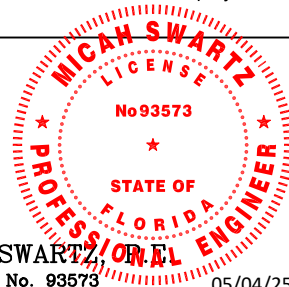


MICAH SWARTZ, P.E.
5134 Cambridge Ct.
Klamath Falls, OR. 97603
(541) 363-8075

05/04/25


	DATE: 04/02/2025	 3737 LAKEPORT BLVD. KLAMATH FALLS OR, 97601 PHONE: (800) 535-3936	
DRAWN BY: M.HAM	SCALE: NTS		
CHECKED BY: D.VEZO	TITLE: Design Pro/Smooth Pro (F-3500) Fiberglass Swinging Door Outswing 3 Panel OXO		
APPROVED BY: D.VEZO			
RECORD No.: D1000184			
REPORT No. NCTL-210-3916-01	CAD DWG. No.: D015690	REV: B	SHEET 19 of 20

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.


DISCLAIMER:
This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.

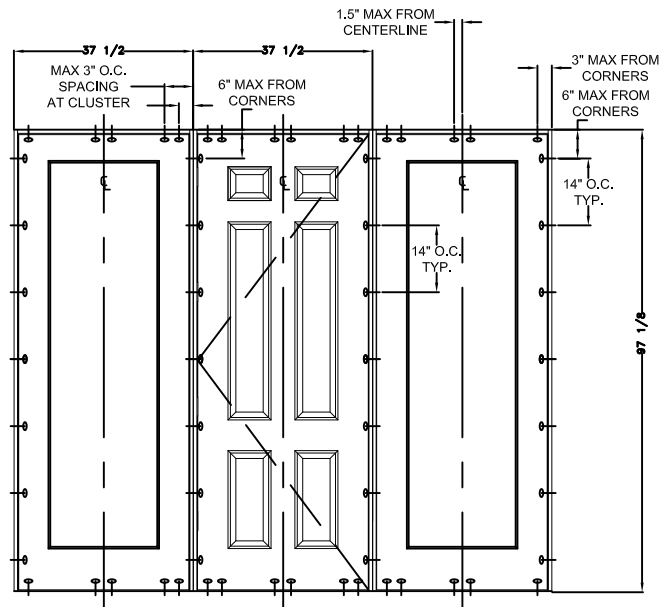

TYPICAL ELEVATION WITH FASTENER SPACING

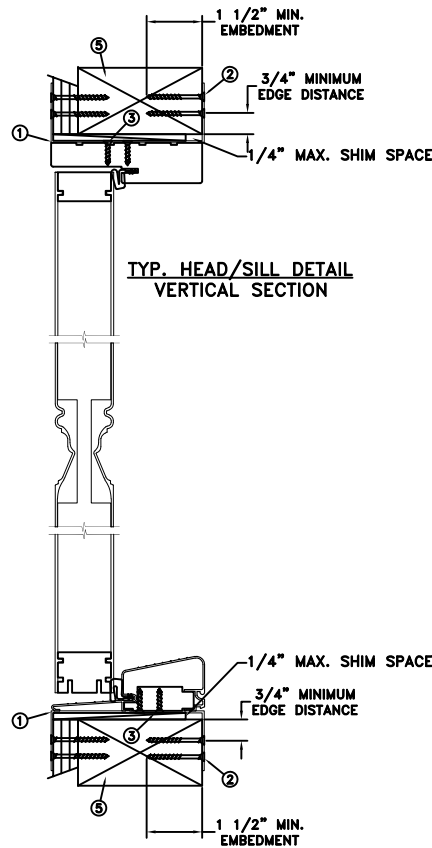

TYP. HEAD/SILL DETAIL VERTICAL SECTION

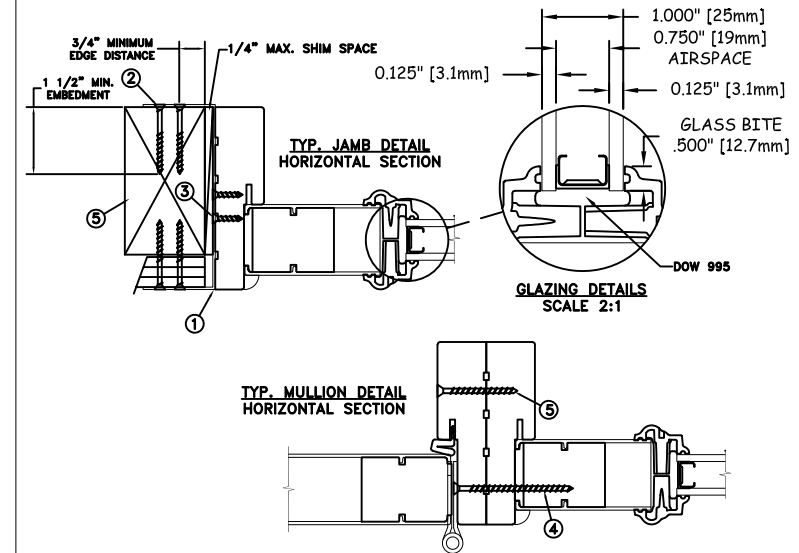

TYP. MULLION DETAIL HORIZONTAL SECTION

MAXIMUM FRAME	DP	IMPACT
112.125 x 97.125	+45/-45	NO


Installation Notes:

1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
2. Use min. two (2) - #10 PFH or larger fasteners through masonry strap with sufficient length to penetrate a minimum of 1 1/2" into the buck. Bend straps around both sides of the buck. For 2x wood frame substrate (min. S.G. = 0.55).
3. Use min. two (2) - #10 PFH or larger fasteners through masonry strap into jamb without penetrating through the jamb into product causing visibility or collateral damage to product.
4. Install one (1) - #9 x 2-1/2" PH fastener through each hinge plate into rough opening.
5. Install #10 x 2" fastener through jamb into sidelite frame.
6. Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.

General Notes:

1. The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
2. All glazing shall conform to ASTM E1300.
3. Glazing is 3.1mm tempered - 19mm airspace - 3.1mm tempered glass.
4. Use structural or composite shims where required.
5. Masonry strap specifications: 20 Ga. galvanized steel, .036" min. thickness x 1.5" min. width.

This item has been digitally signed and sealed by Micah Swartz, P.E. on the date adjacent to the seal. Printed copies of this document are not considered signed and sealed and the signature must be verified on any electronic copies

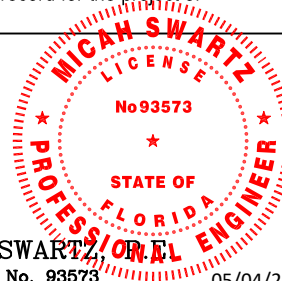

MICAH SWARTZ, P.E.
5134 Cambridge Ct.
Klamath Falls, OR. 97603
(541) 363-8075

05/04/25

DATE: 04/02/2025		JELD-WEN 3737 LAKEPORT BLVD. KLAMATH FALLS OR, 97601 PHONE: (800) 535-3936	
SCALE: NTS			
DRAWN BY: M.HAM		TITLE: Design Pro/Smooth Pro (F-3500) Fiberglass Swinging Door Outswing 3 Panel OXO	
CHECKED BY: D.Vezo			
APPROVED BY: D.Vezo			
REPORT No.: NCTL-210-3916-01		RECORD No.: D1000184	
CAD DWG. No.: D015690		REV: B SHEET 20 of 20	

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.

DISCLAIMER:
This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.