



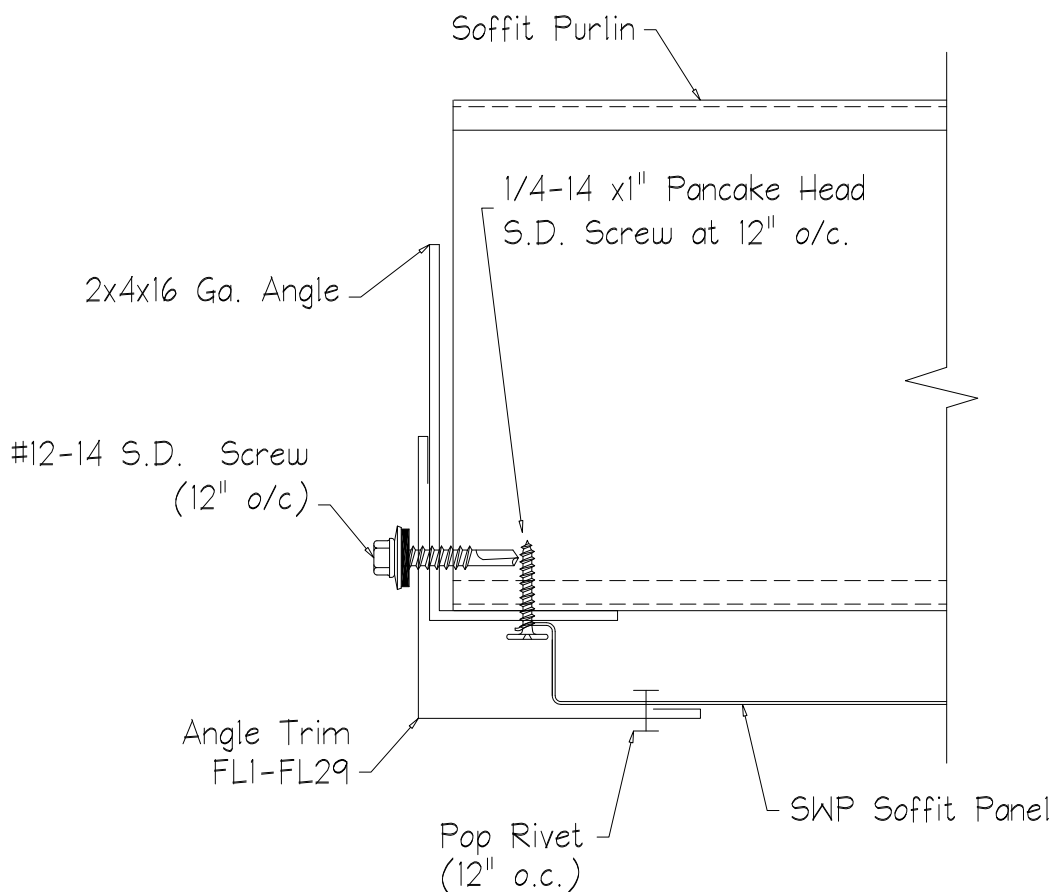

SWP1 Starting Soffit Layout

Revision	Date	Description
1	6/14/2010	#10 changed to 1/4-14X1" screws, angle trim corrected
2	8/2/2010	Added pop rivets

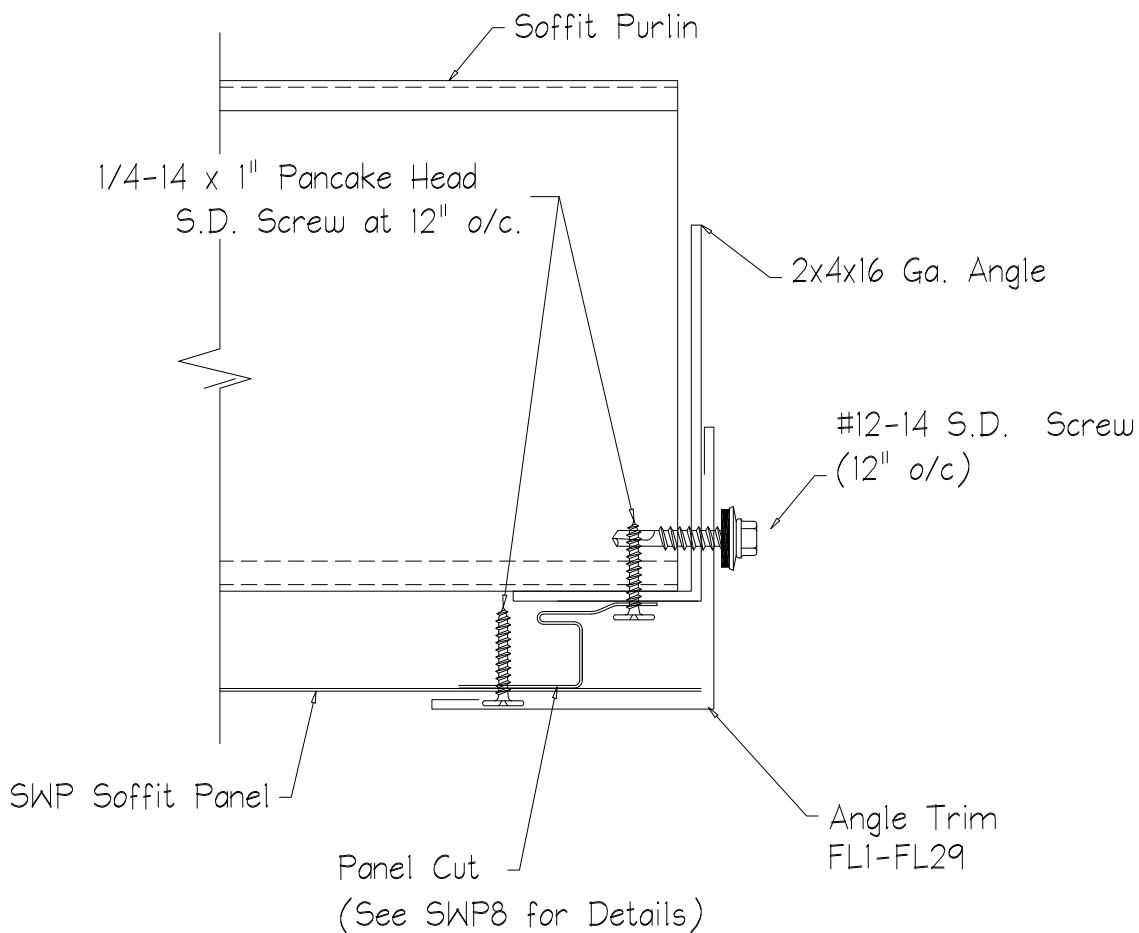


SWP2


Ending Soffit Panel Layout (w/o Wall Panel)

Revision	Date	Description
1	6/14/2010	#10 changed to 1/4-14X1" screws, angle trim corrected
1	8/2/2010	Panel Drop changed to panel cut and note added

Drawn by:	ACI Standard Erection Manual		
WK	Chapter:17	Section: 17.3	Drawing: SWP3
Approved:	SWP Sections		
DJ	Submitted: 8/10/09	Revised:	

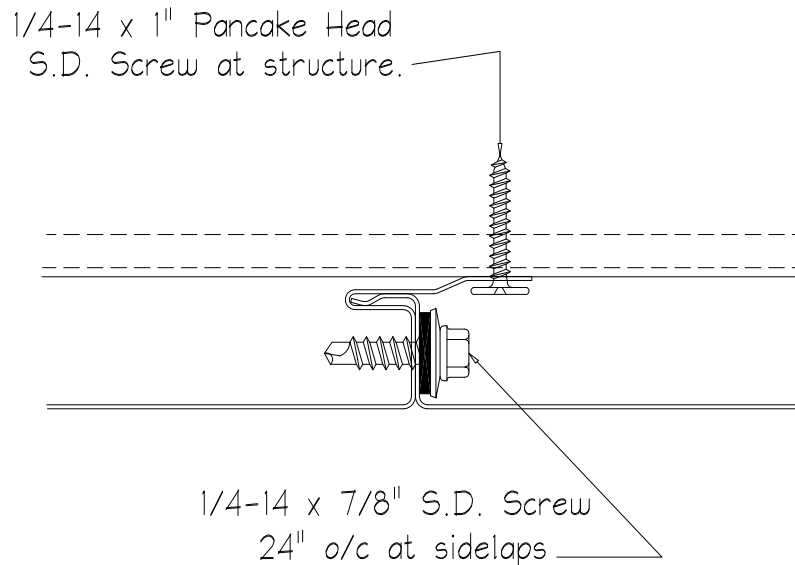

Stitch Screw Section

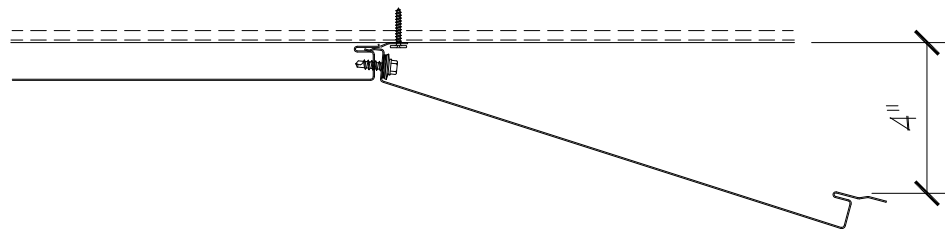


SWP3

Installation of Stitch Screw

Wall Application Only


Revision	Date	Description
1	6/14/2010	#10 changed to 1/4-14X1" screws

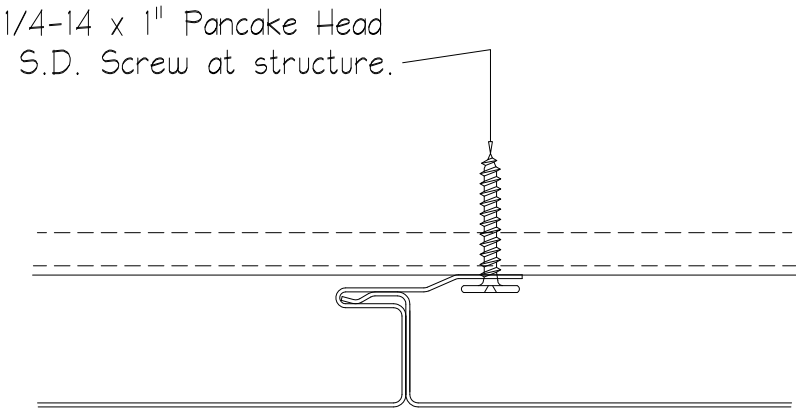

SWP3.1

SWP Soffit Panel Section


Drawn by:	ACI Standard Erection Manual		
WK	Chapter:17	Section: 17.4	Drawing: SWP4
Approved:	SWP Sections		
DJ	Submitted: 8/10/09		

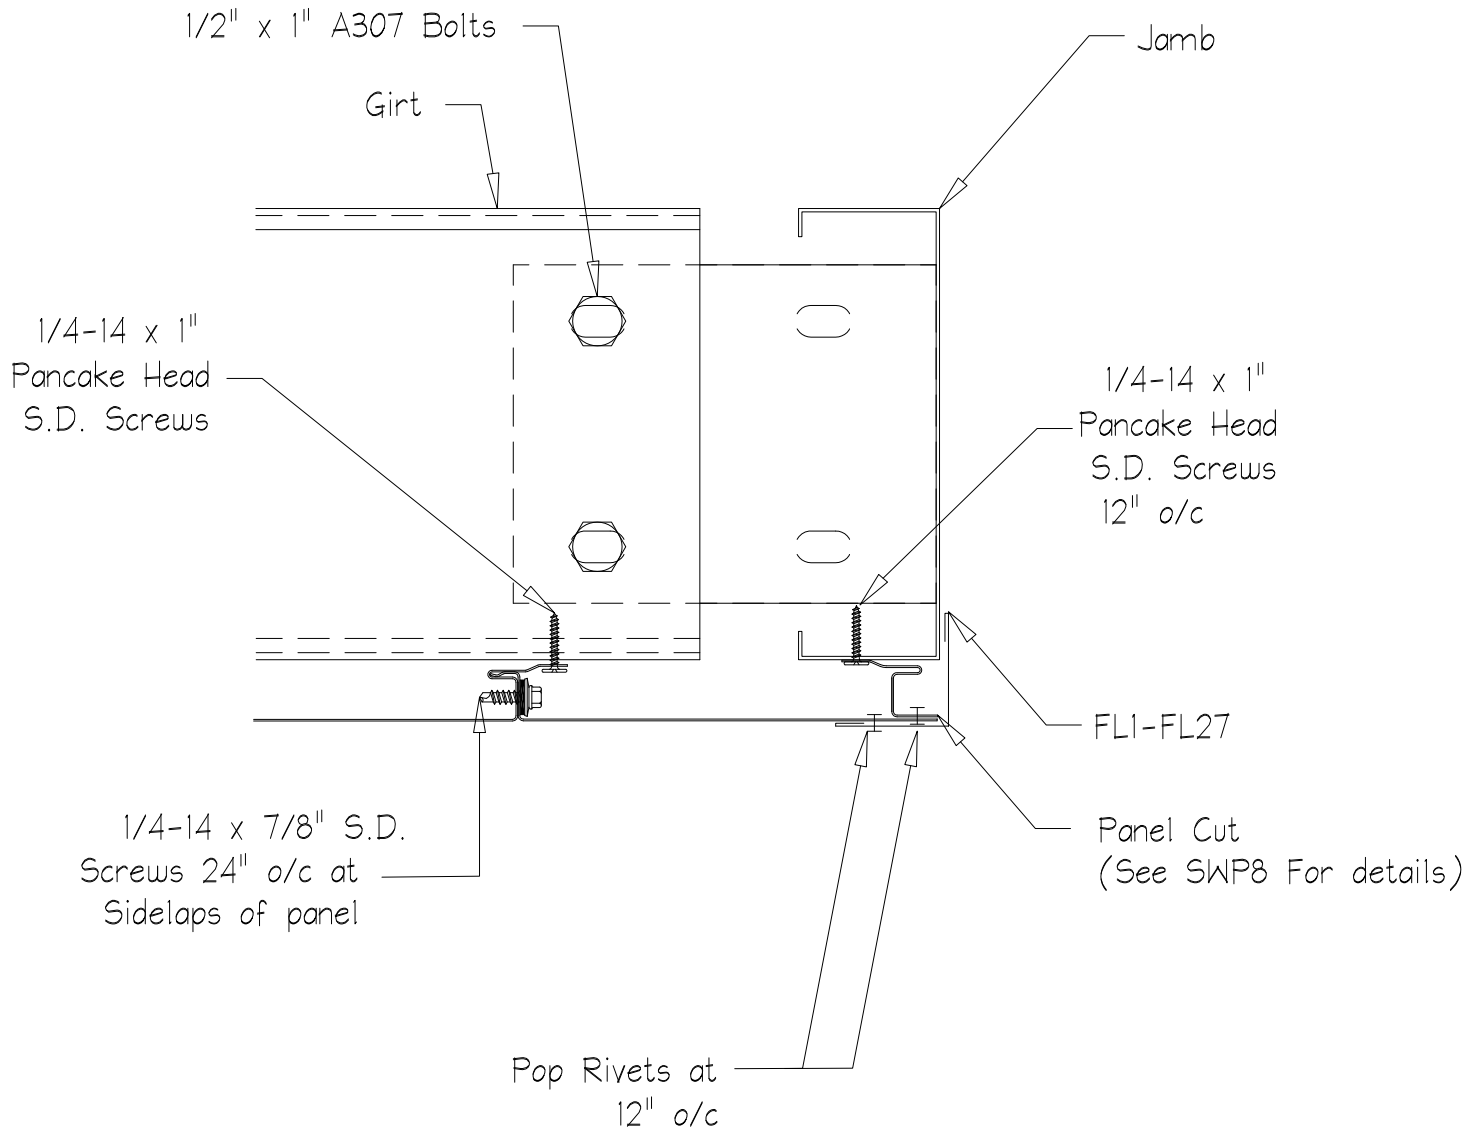

SWP4 Section at Jamb Trim

Revision	Date	Description
1	6/14/2010	#10 changed to 1/4-14X1" screws
2	8/2/2010	Panel Drop changed to panel cut and note added


Drawn by:	ACI Standard Erection Manual		
WK	Chapter:17	Section: 17.5	Drawing: SWP5
Approved:	SWP Sections		
DJ	Submitted: 8/10/09	Revised:	

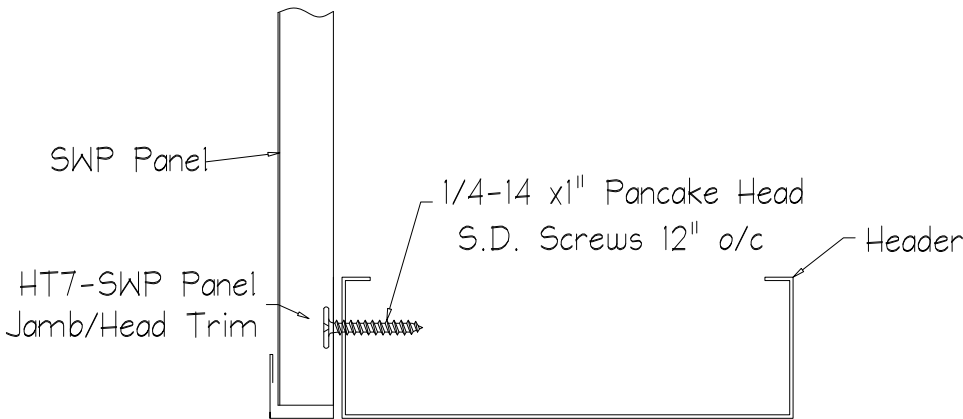

SWP5


Section at Head Trim

Revision	Date	Description
1	6/14/2010	#12 changed to 1/4-14X1" screws

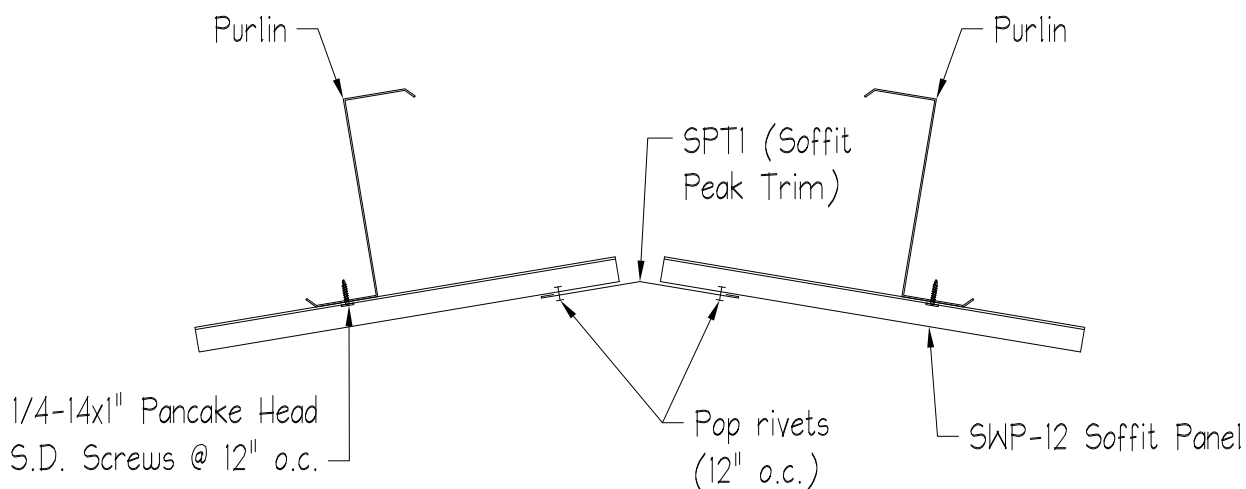


SWP6 Section at Soffit Peak trim

Revision	Date	Description
2	8/2/2010	Changed pop rivet spacing

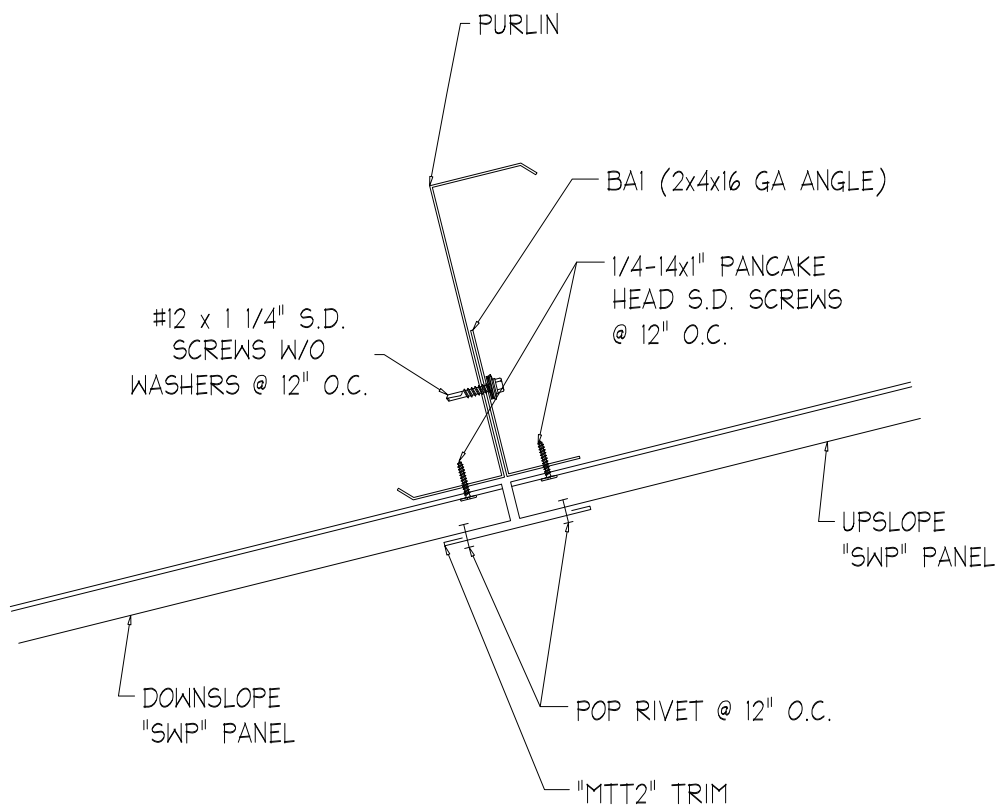


Section at Panel Splice

STEP 1

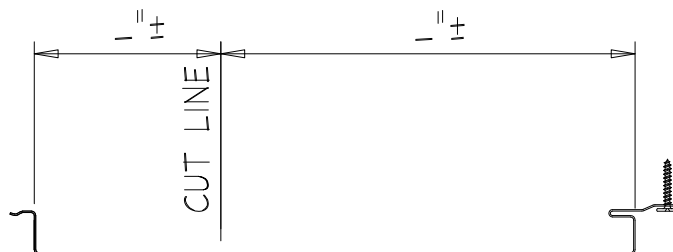

STEP 2

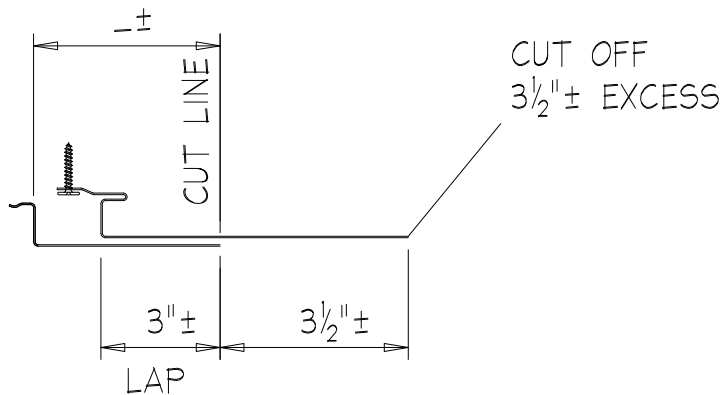

SWP8

INSTRUCTIONS FOR SOFFIT CUT