


HEAD AND JAMB SCREWS:
 OPENING TYPE (SUBSTRATE) = 2X_WOOD FRAME OR BUCK
 MINIMUM EMBED 1-1/2"
 SIDE JAMB SCREW = #8X5/8"
 (1-1/2" MIN. EMBEDMENT)

NOTE:
 Stainless Steel fasteners are recommended.

Weather Shield Windows & Doors

8120, 1104, 1105 Double Hung Tilt IMPACT NAIL FIN INSTALLATION

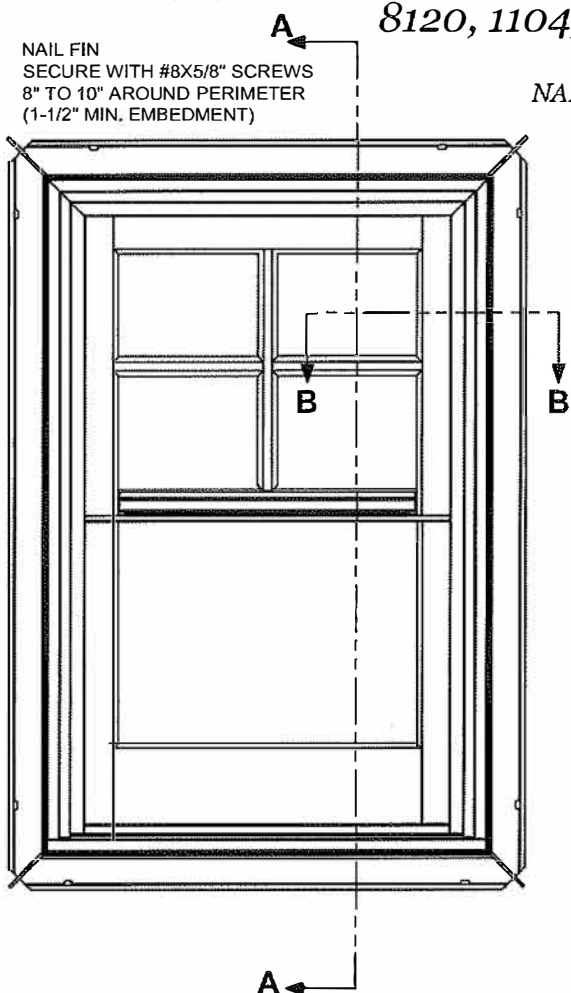


NAIL FIN
 SECURE WITH #8X5/8" SCREWS
 8" TO 10" AROUND PERIMETER
 (1-1/2" MIN. EMBEDMENT)

SECURED TO BUCK WITH
 #8X1-5/8" NON-CORROSIVE
 SCREWS 8" TO 10" ON CENTER
 THROUGH NAILING FIN
 AROUND THE UNITS
 ENTIRE PERIMETER TYP.
 (1-1/2" MIN. EMBEDMENT)

PERIMETER CAULK
 BY OTHERS


WOOD BUCK
 BY OTHERS TYP.

1/4" (6mm) MAX.
 SHIM TYP.

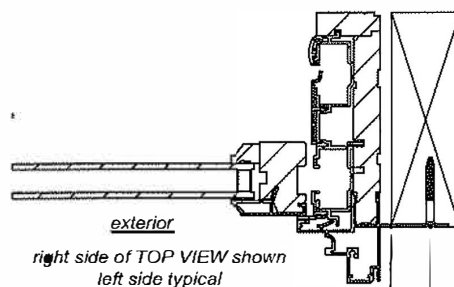

exterior
 right side of TOP VIEW shown
 left side typical

.625" MIN. EDGE
 DISTANCE TYP.

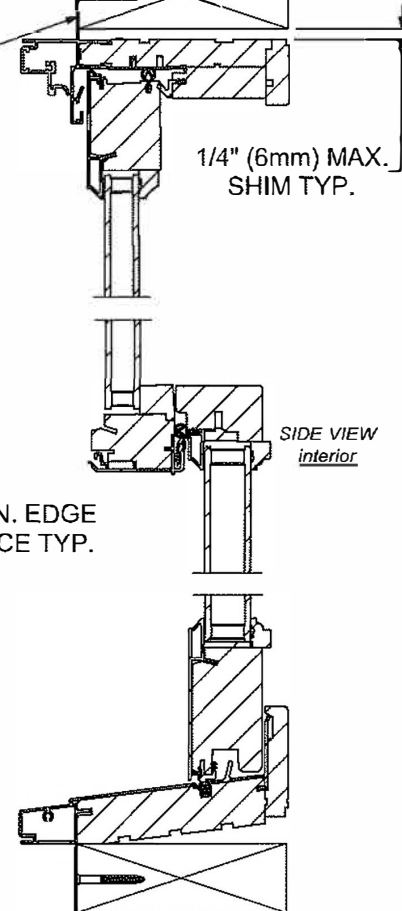

SIDE VIEW
 interior

THIS SCHEDULE ADDRESSES ONLY THE FASTENERS REQUIRED TO ANCHOR THE WINDOW(S) TO ACHIEVE THE RATED DESIGN PRESSURE. THOROUGHLY READ AND FOLLOW MANUFACTURERS INSTALLATION INSTRUCTIONS RECEIVED WITH UNIT. THIS GUIDE DOES NOT ADDRESS THE SEALING CONSIDERATIONS THAT MAY ARISE IN DIFFERENT WALL CONDITIONS.

DRAWING NOT TO SCALE

TOLERANCES UNLESS SPECIFIED:	
INCHES	ANGLE
x ± .1"	xx ± 1°
.xx ± .03"	xx.x ± .5° (1/2")
.xxx ± .015"	xx.xx ± .25° (1/4")

Weather Shield Windows & Doors

PRODUCTS: 1104, 1105		TITLE: INSTALLATION INSTRUCTION -	
DRAWN BY: SRS/JRA	DATE: 11/25/2015	DWG NO.: 45-01387	REV
SCALE: 1/8"		SHEET NAME: Sheet1	
		SHEET 1 OF 1	

REV	DATE	DESCRIPTION	PCR NO.	ENG	PDR #	PROFILE #
					10022	

DO NOT SCALE DRAWING