

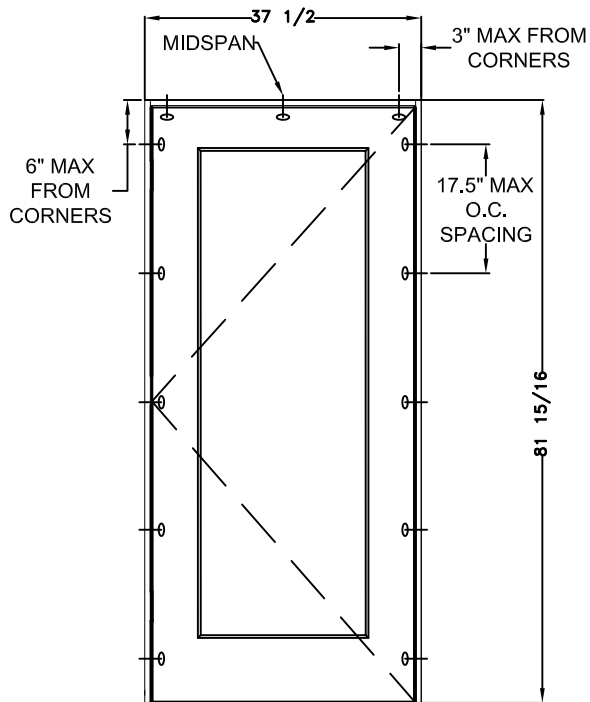


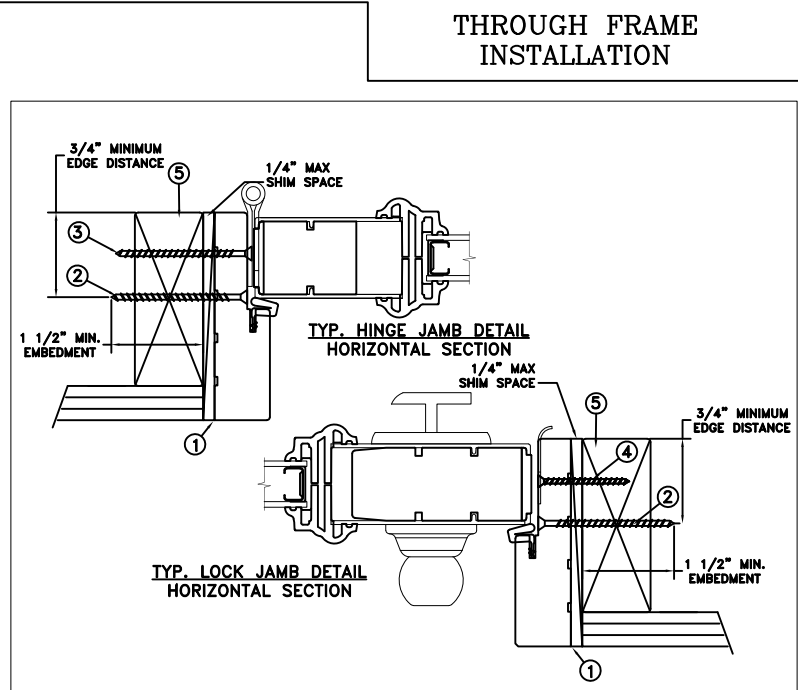

TYPICAL ELEVATION WITH FASTENER SPACING

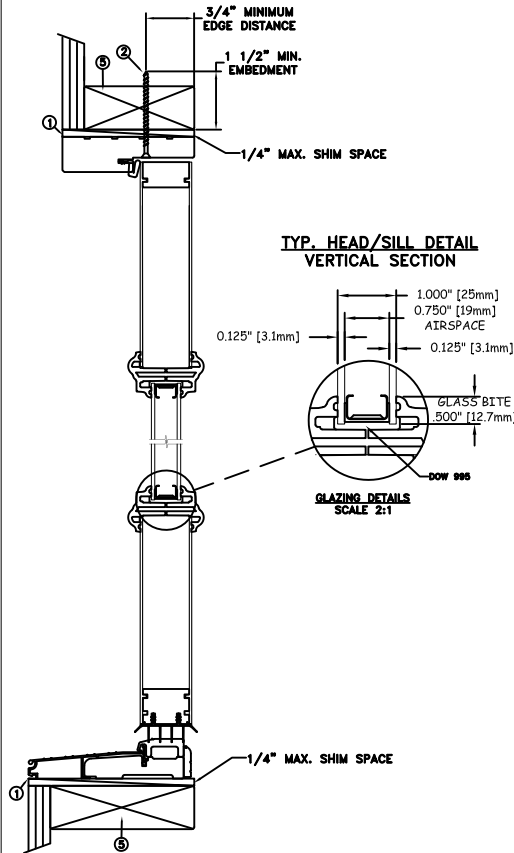

MAXIMUM FRAME	DP	IMPACT
37.5 x 81.9375	+50/-50	NO

Installation Notes:

1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
2. Use #10 PH or greater fastener through the head & side jambs with sufficient length to penetrate a minimum of 1-1/2" into the wood framing. For 2x wood frame substrate (min. S.G. = 0.55).
3. Install one (1) - #9 x 2-1/2" PH fastener through each hinge plate into rough opening.
4. Install three (3) - #8 x 2" PH fasteners into latch strike plate through the jamb into the rough opening.
5. Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.

Digitally signed by Hermes F. Norero, P.E.
Reason: I am approving this document
Date: 2025.04.22 20:38:05 -0400


General Notes:

1. The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
2. All glazing shall conform to ASTM E1300.
3. Glazing is 3.1mm tempered - 19mm airspace - 3.1mm tempered glass.
4. Use structural or composite shims where required.
4. TAS 202-94
5. Product meets High Velocity Hurricane Zone (HVHZ) Requirements.
6. Approved Impact Protective system is required on this product in areas requiring impact resistance.

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.


DISCLAIMER:

This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.


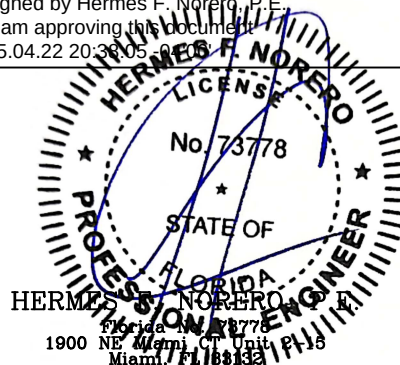


	DATE: 04/07/2025	JELD-WEN	3737 LAKEPORT BLVD.	
DRAWN BY: M.HAM	SCALE: NTS		KLAMATH FALLS OR, 97601 PHONE: (800) 535-3936	
CHECKED BY: D.Vezo	TITLE: Design Pro/Smooth Pro (F-3500) Fiberglass Swinging Door Inswing 1 Panel			
APPROVED BY: D.Vezo				
RECORD No.: D1000180				
REPORT No. NCTL-210-3916-02		CAD DWG. No.: D015715	REV: B	SHEET 1 of 20

MASONRY STRAP INSTALLATION

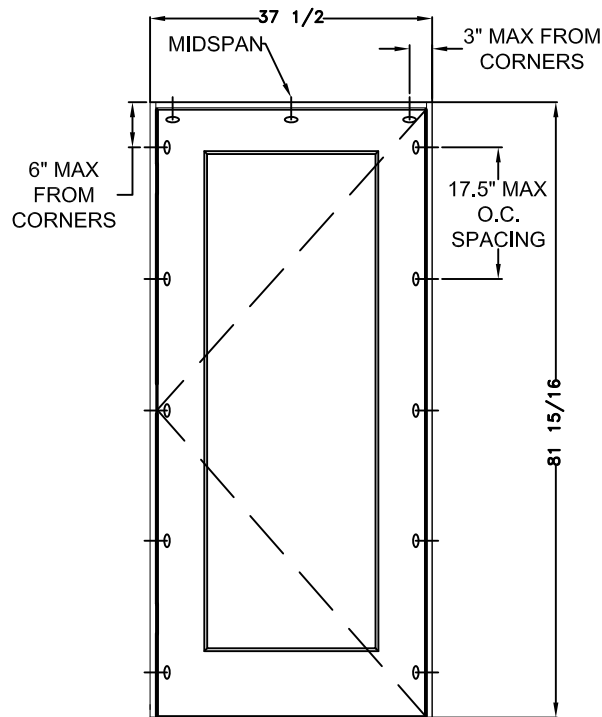

TYPICAL ELEVATION WITH FASTENER SPACING

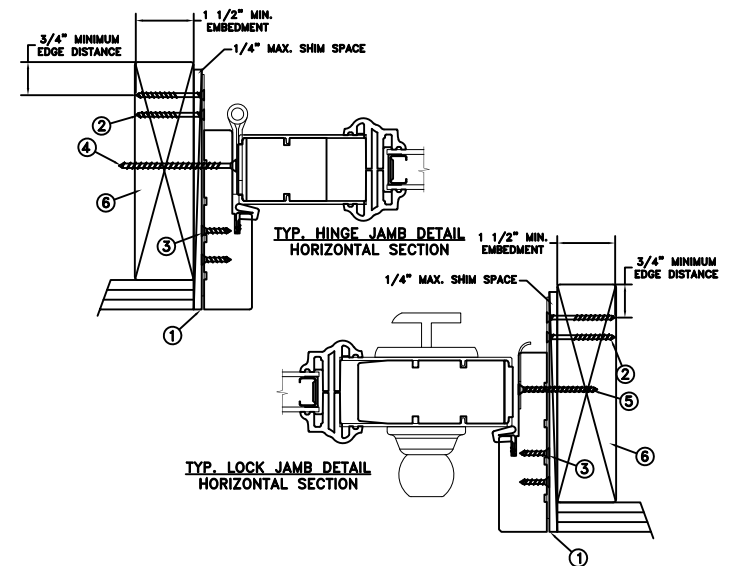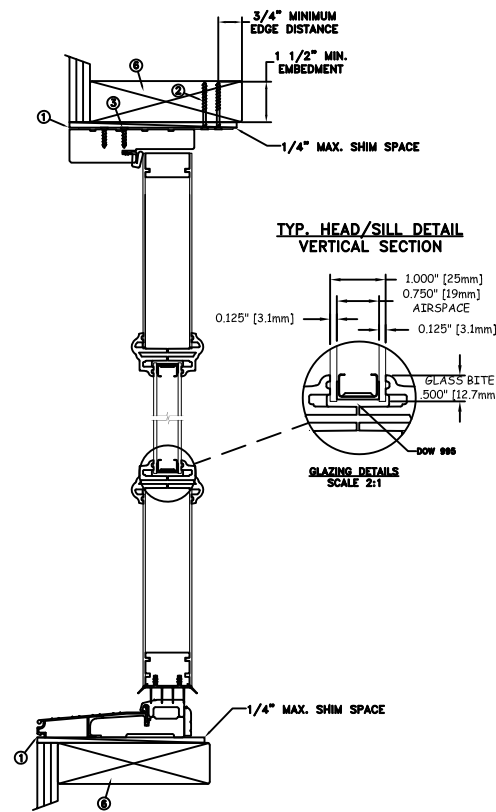

MAXIMUM FRAME	DP	IMPACT
37.5 x 81.9375	+50/-50	NO

Installation Notes:

1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
2. Use two (2) - #10 PFH or larger fasteners through masonry strap with sufficient length to penetrate a minimum of 1-1/2" into the buck. For 2x wood frame substrate (min. S.G. = 0.55).
3. Use two (2) - #10 PFH or larger fasteners through masonry strap into jamb without penetrating through the jamb into product causing visibility or collateral damage to product.
4. Install one (1) - #9 x 2-1/2" PH fastener through each hinge plate into rough opening.
5. Install three (3) - #8 x 2" PH fasteners into latch strike plate through the jamb into the rough opening.
6. Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer for the project of installation.


General Notes:

1. The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
2. All glazing shall conform to ASTM E1300.
3. Glazing is 3.1mm tempered - 19.0mm airspace - 3.1mm tempered glass.
4. Use structural or composite shims where required.
5. Masonry strap specifications: 20 Ga. galvanized steel, .036" min. thickness x 1.5" min. width.
6. TAS 202-94
7. Product meets High Velocity Hurricane Zone (HVHZ) Requirements.
8. Approved Impact Protective system is required on this product in areas requiring impact resistance.

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.


DISCLAIMER:

This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.


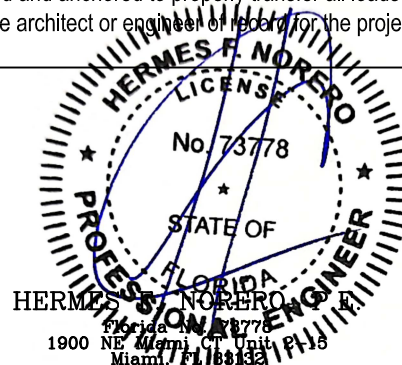


	DATE: 04/07/2025		3737 LAKEPORT BLVD.	
DRAWN BY: M.HAM	SCALE: NTS		KLAMATH FALLS OR, 97601	
CHECKED BY: D.Vezo	TITLE: Design Pro/Smooth Pro (F-3500) Fiberglass Swinging Door Inswing 1 Panel			
APPROVED BY: D.Vezo				
RECORD No.: D1000180				
REPORT No. NCTL-210-3916-02		CAD DWG. No.: D015715	REV: B	SHEET 2 of 20

CONCRETE/MASONRY INSTALLATION

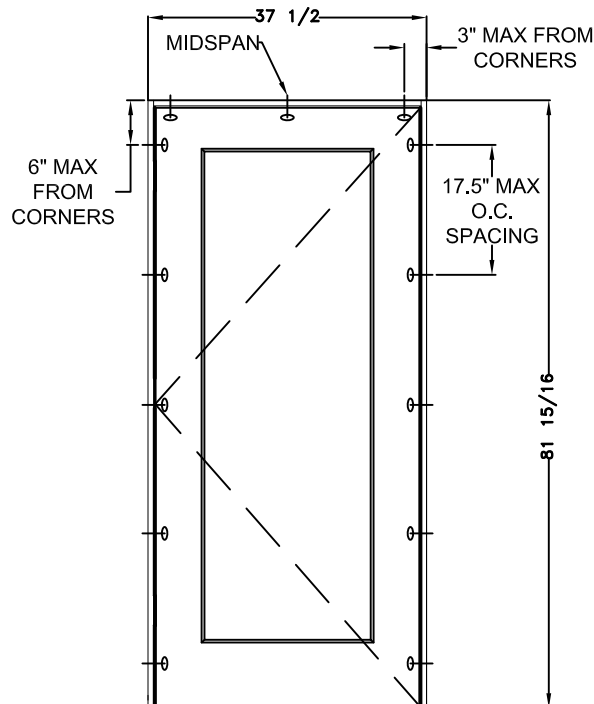

TYPICAL ELEVATION WITH FASTENER SPACING

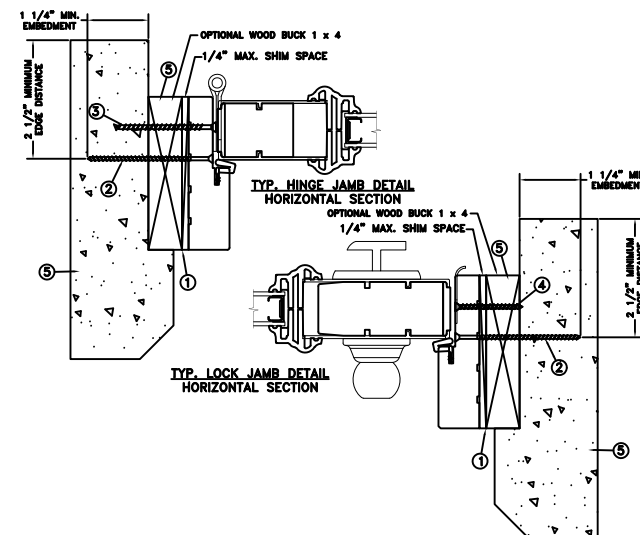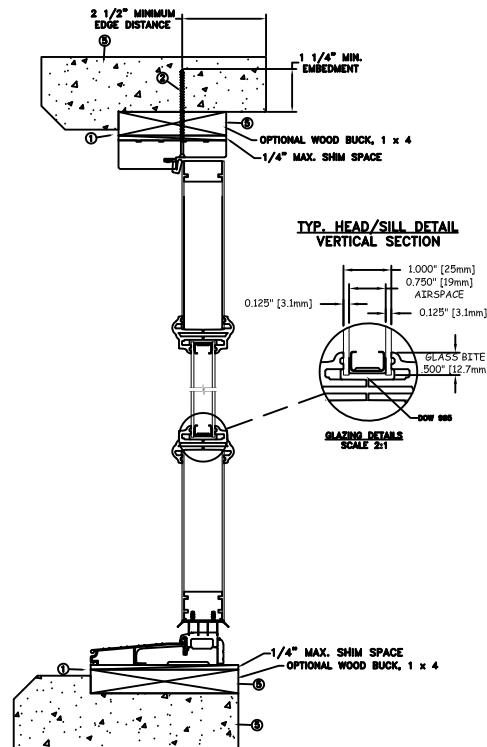

MAXIMUM FRAME	DP	IMPACT
37.5 x 81.9375	+50/-50	NO

Installation Notes:

1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
2. Use 3/16" tapcon or equivalent fasteners through frame with sufficient length to penetrate a minimum of 1-1/4" into concrete or masonry at each location with a 2-1/2" min. from edge distance. For concrete (min. fc = 3000 psi) or masonry substrate (CMU shall adhere to ASTM C90).
3. Install one (1) - 3/16" tapcon through each hinge plate with 1-1/4" min. embedment into concrete or masonry.
4. Install one (1) - 3/16" tapcon through latch strike plate with 1-1/4" min. embedment into concrete or masonry.
5. Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.


General Notes:

1. The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
2. All glazing shall conform to ASTM E1300.
3. Glazing is 3.1mm tempered - 19mm airspace - 3.1mm tempered glass.
4. Use structural or composite shims where required.
4. TAS 202-94
5. Product meets High Velocity Hurricane Zone (HVHZ) Requirements.
6. Approved Impact Protective system is required on this product in areas requiring impact resistance.

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.


DISCLAIMER:

This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.


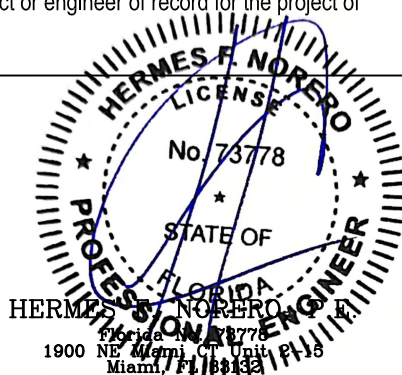


DATE: 04/07/2025	JELD-WEN 3737 LAKEPORT BLVD. KLAMATH FALLS OR, 97601 PHONE: (800) 535-3936
DRAWN BY: M.HAM	
CHECKED BY: D.Vezo	Design Pro/Smooth Pro (F-3500) Fiberglass Swinging Door Inswing 1 Panel
APPROVED BY: D.Vezo	
RECORD No.: D1000180	
REPORT No. NCTL-210-3916-02	CAD DWG. No.: D015715
REV: B	SHEET 3 of 20

CONCRETE/MASONRY INSTALLATION

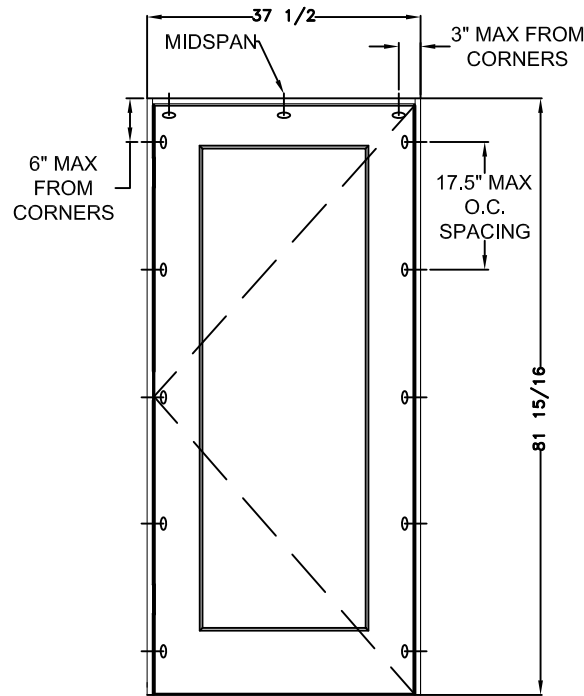

TYPICAL ELEVATION WITH FASTENER SPACING

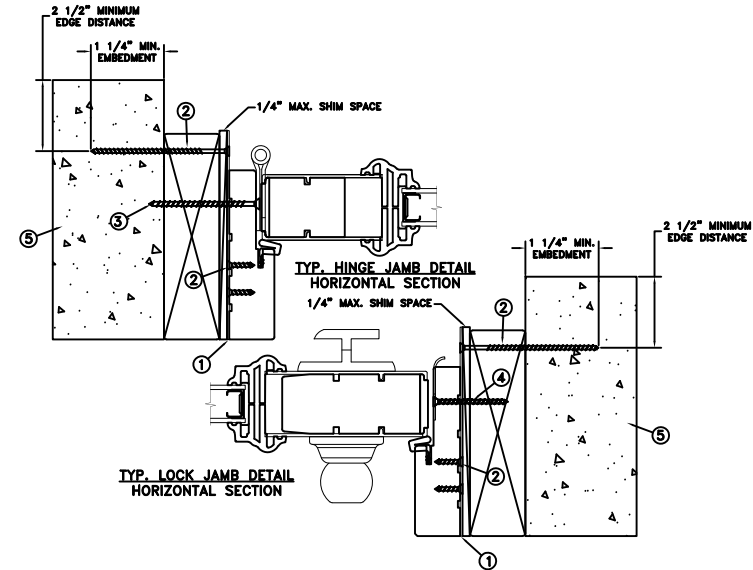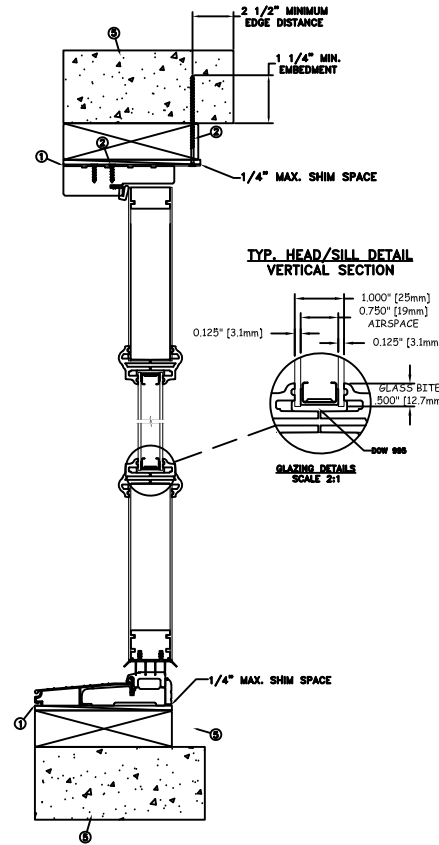

MAXIMUM FRAME	DP	IMPACT
37.5 x 81.9375	+50/-50	NO

Installation Notes:

1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
2. Use one (1) - 3/16" Tapcon or equivalent fasteners through strap with sufficient length to penetrate a minimum of 1-1/4" into concrete or masonry at each location with a 2-1/2" min. from edge distance. Use two (2) - #10 PFH fasteners through masonry strap into frame. For concrete (min. fc = 3000 psi) or masonry substrate (CMU shall adhere to ASTM C90).
3. Install one (1) - 3/16" tapcon through each hinge plate with 1-1/4" min. embedment into concrete masonry.
4. Install one (1) - 3/16" tapcon through latch strike plate with 1-1/4" min. embedment into concrete or masonry.
5. Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.


General Notes:

1. The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
2. All glazing shall conform to ASTM E1300.
3. Glazing is 3.1mm tempered - 19.0mm airspace - 3.1mm tempered glass.
4. Use structural or composite shims where required.
5. Masonry strap specifications: 20 Ga. galvanized steel, .036" min. thickness x 1.5" min. width.
6. TAS 202-94
7. Product meets High Velocity Hurricane Zone (HVHZ) Requirements.
8. Approved Impact Protective system is required on this product in areas requiring impact resistance.

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.


DISCLAIMER:

This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.


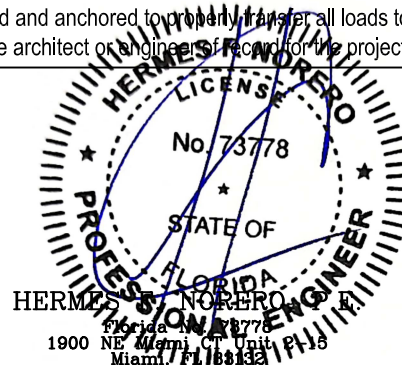


DATE: 04/07/2025	JELD-WEN 3737 LAKEPORT BLVD. KLAMATH FALLS OR, 97601 PHONE: (800) 535-3936
DRAWN BY: M.HAM	
CHECKED BY: D.Vezo	TITLE: Design Pro/Smooth Pro (F-3500) Fiberglass Swinging Door Inswing 1 Panel
APPROVED BY: D.Vezo	
RECORD No.: D1000180	
REPORT No. NCTL-210-3916-02	CAD DWG. No.: D015715
REV: B	SHEET 4 of 20

MASONRY STRAP INSTALLATION

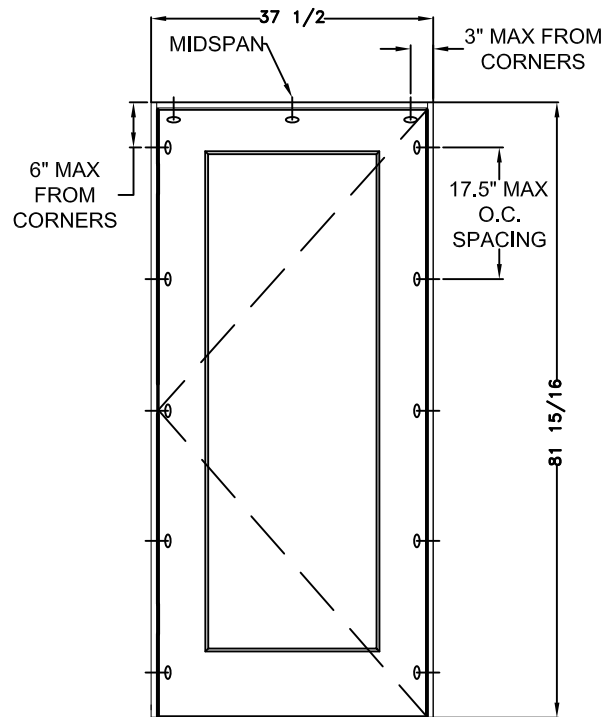

TYPICAL ELEVATION WITH FASTENER SPACING

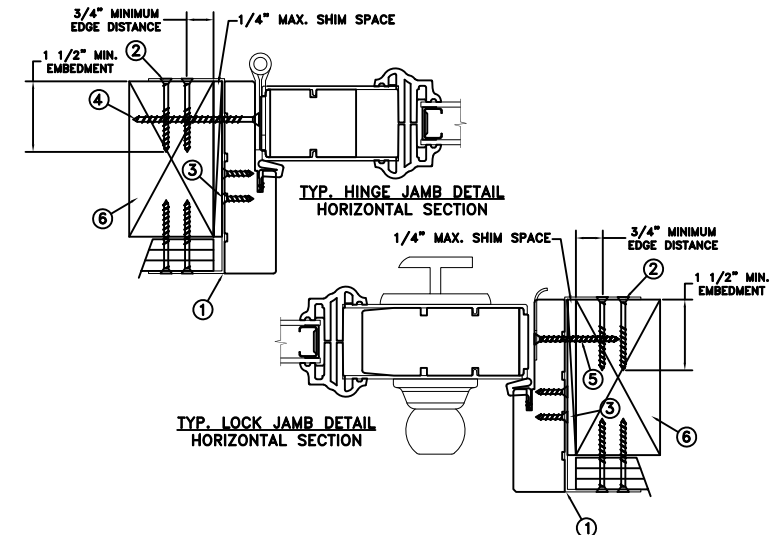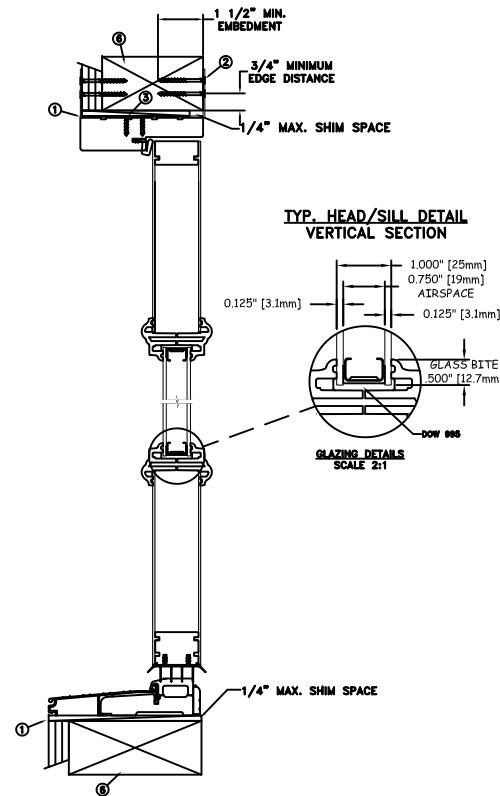

MAXIMUM FRAME	DP	IMPACT
37.5 x 81.9375	+50/-50	NO

Installation Notes:

1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
2. Use min. two (2) - #10 PFH or larger fasteners through masonry strap with sufficient length to penetrate a minimum of 1 1/2" into the buck. Bend straps around both sides of the buck. For 2x wood frame substrate (min. S.G. = 0.55).
3. Use min. two (2) - #10 PFH or larger fasteners through masonry strap into jamb without penetrating through the jamb into product causing visibility or collateral damage to product.
4. Install one (1) - #9 x 2-1/2" PH fastener through each hinge plate into rough opening.
5. Install three (3) - #8 x 2" PH fasteners into latch strike plate through the jamb into the rough opening.
6. Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.


General Notes:

1. The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
2. All glazing shall conform to ASTM E1300.
3. Glazing is 3.1mm tempered - 19.0mm airspace - 3.1mm tempered glass.
4. Use structural or composite shims where required.
5. Masonry strap specifications: 20 Ga. galvanized steel, .036" min. thickness x 1.5" min. width.
6. TAS 202-94
7. Product meets High Velocity Hurricane Zone (HVHZ) Requirements.
8. Approved Impact Protective system is required on this product in areas requiring impact resistance.

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.


DISCLAIMER:

This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.


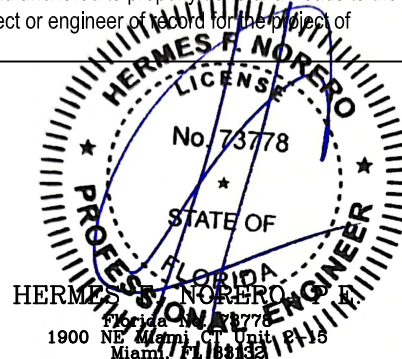


	DATE: 04/07/2025	 3737 LAKEPORT BLVD. KLAMATH FALLS OR, 97601 PHONE: (800) 535-3936		
DRAWN BY: M.HAM	SCALE: NTS			
CHECKED BY: D.Vezo	TITLE: Design Pro/Smooth Pro (F-3500) Fiberglass Swinging Door Inswing 1 Panel			
APPROVED BY: D.Vezo				
RECORD No.: D1000180				
REPORT No. NCTL-210-3916-02		CAD DWG. No.: D015715	REV: B	SHEET 5 of 20

THROUGH FRAME INSTALLATION

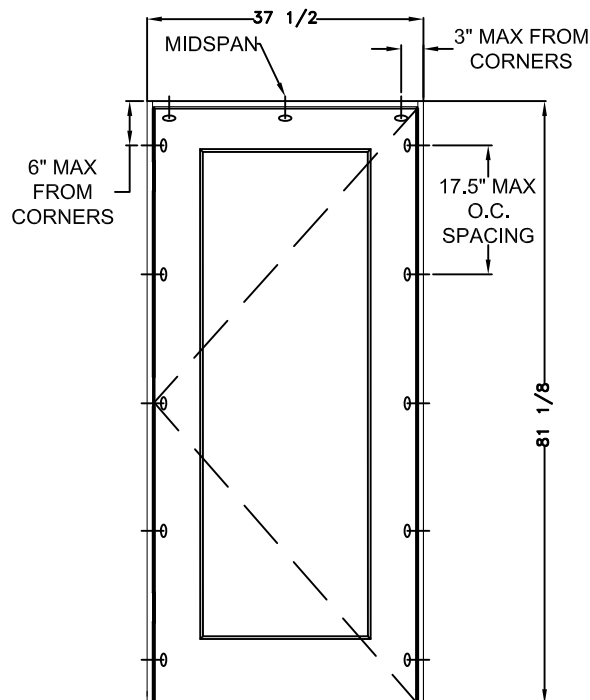

TYPICAL ELEVATION WITH FASTENER SPACING

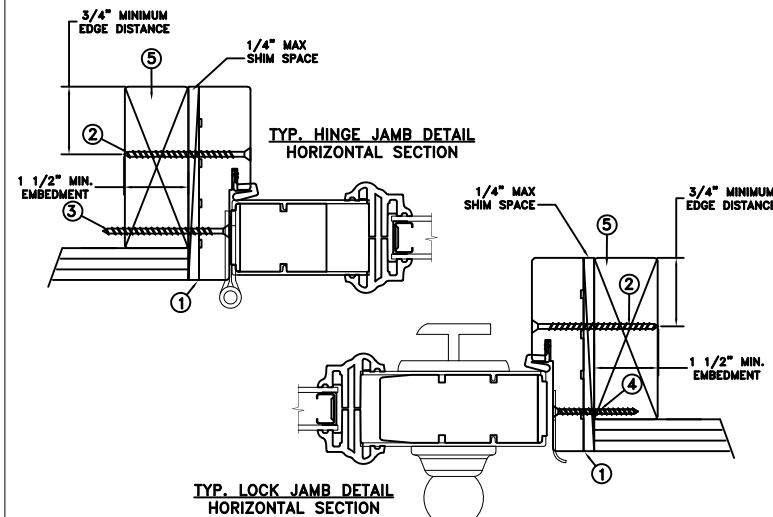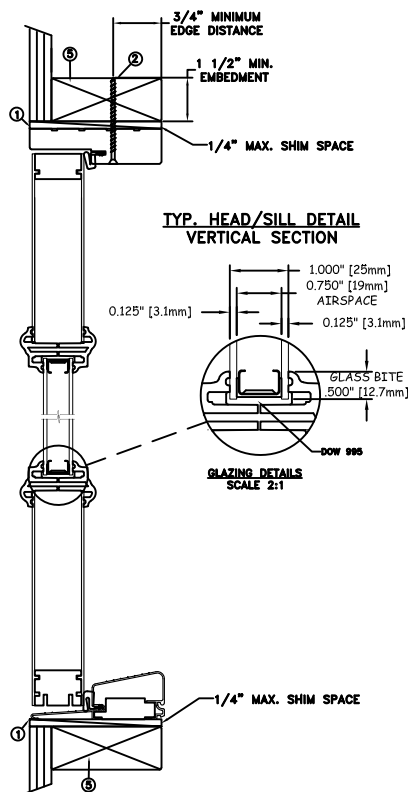

MAXIMUM FRAME	DP	IMPACT
37.5 x 81.125	+50/-50	NO

Installation Notes:

1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
2. Use #10 PH or greater fastener through the head & side jambs with sufficient length to penetrate a minimum of 1-1/2" into the wood framing. For 2x wood frame substrate (min. S.G. = 0.55).
3. Install one (1) - #9 x 2-1/2" PH fastener through each hinge plate into rough opening.
4. Install three (3) - #8 x 2" PH fasteners into latch strike plate through the jamb into the rough opening.
5. Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.


General Notes:

1. The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
2. All glazing shall conform to ASTM E1300.
3. Glazing is 3.1mm tempered - 19mm airspace - 3.1mm tempered glass.
4. Use structural or composite shims where required.
4. TAS 202-94
5. Product meets High Velocity Hurricane Zone (HVHZ) Requirements.
6. Approved Impact Protective system is required on this product in areas requiring impact resistance.

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.


DISCLAIMER:

This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.


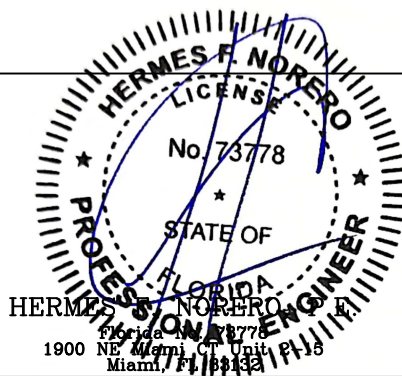


	DATE: 04/07/2025	JELD-WEN	3737 LAKEPORT BLVD.	
DRAWN BY: M.HAM	SCALE: NTS		KLAMATH FALLS OR, 97601	
CHECKED BY: D.VEZO	TITLE: Design Pro/Smooth Pro (F-3500) Fiberglass Swinging Door Outswing 1 Panel			
APPROVED BY: D.VEZO				
RECORD No.: D1000180				
REPORT No. NCTL-210-3916-02		CAD DWG. No.: D015715	REV: B	SHEET 6 of 20

MASONRY STRAP INSTALLATION

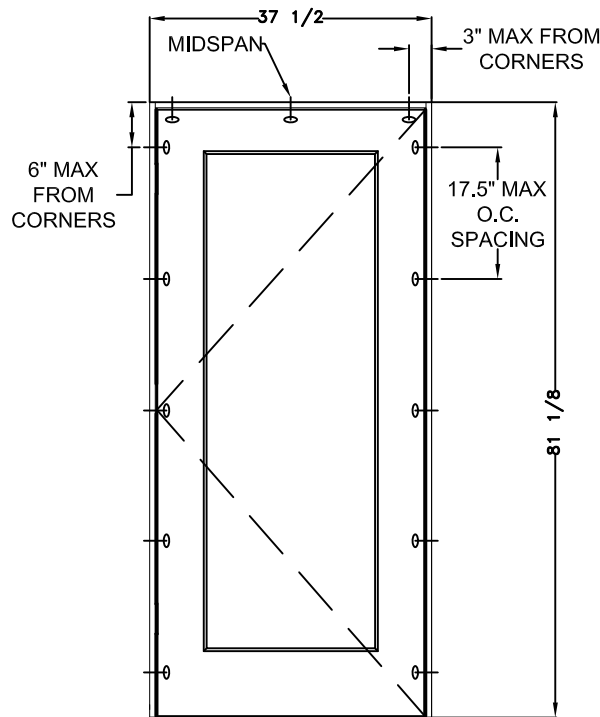

TYPICAL ELEVATION WITH FASTENER SPACING

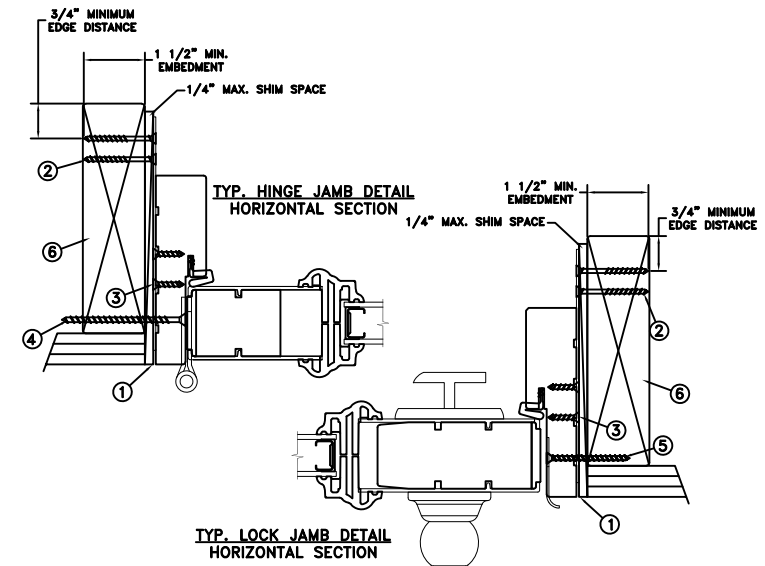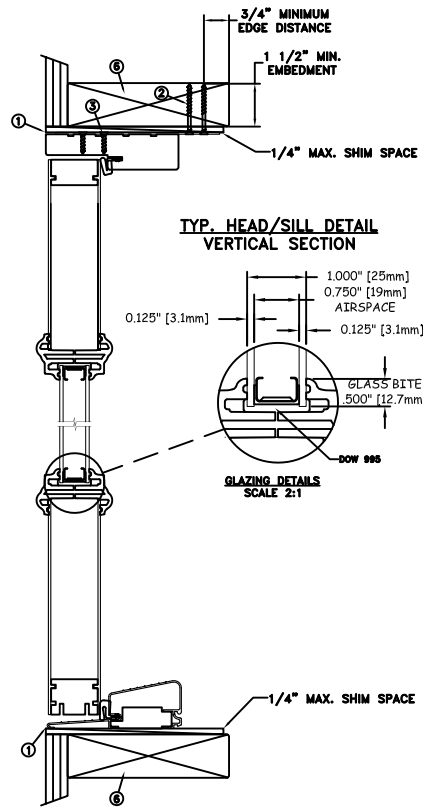

MAXIMUM FRAME	DP	IMPACT
37.5 x 81.125	+50/-50	NO

Installation Notes:

1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
2. Use two (2) - #10 PFH or larger fasteners through masonry strap with sufficient length to penetrate a minimum of 1-1/2" into the buck. For 2x wood frame substrate (min. S.G. = 0.55).
3. Use two (2) - #10 PFH or larger fasteners through masonry strap into jamb without penetrating through the jamb into product causing visibility or collateral damage to product.
4. Install one (1) - #9 x 2-1/2" PH fastener through each hinge plate into rough opening.
5. Install three (3) - #8 x 2" PH fasteners into latch strike plate through the jamb into the rough opening.
6. Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.


General Notes:

1. The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
2. All glazing shall conform to ASTM E1300.
3. Glazing is 3.1mm tempered - 19.0mm airspace - 3.1mm tempered glass.
4. Use structural or composite shims where required.
5. Masonry strap specifications: 20 Ga. galvanized steel, .036" min. thickness x 1.5" min. width.
6. TAS 202-94
7. Product meets High Velocity Hurricane Zone (HVHZ) Requirements.
8. Approved Impact Protective system is required on this product in areas requiring impact resistance.

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.


DISCLAIMER:

This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.


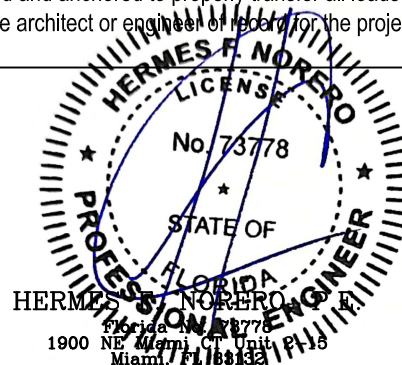


DATE: 04/07/2025	JELD-WEN 3737 LAKEPORT BLVD. KLAMATH FALLS OR, 97601 PHONE: (800) 535-3936
DRAWN BY: M.HAM	
CHECKED BY: D.Vezo	TITLE: Design Pro/Smooth Pro (F-3500) Fiberglass Swinging Door Outswing 1 Panel
APPROVED BY: D.Vezo	
RECORD No.: D1000180	
REPORT No. NCTL-210-3916-02	CAD DWG. No.: D015715
	REV: B
	SHEET 7 of 20

CONCRETE/MASONRY INSTALLATION

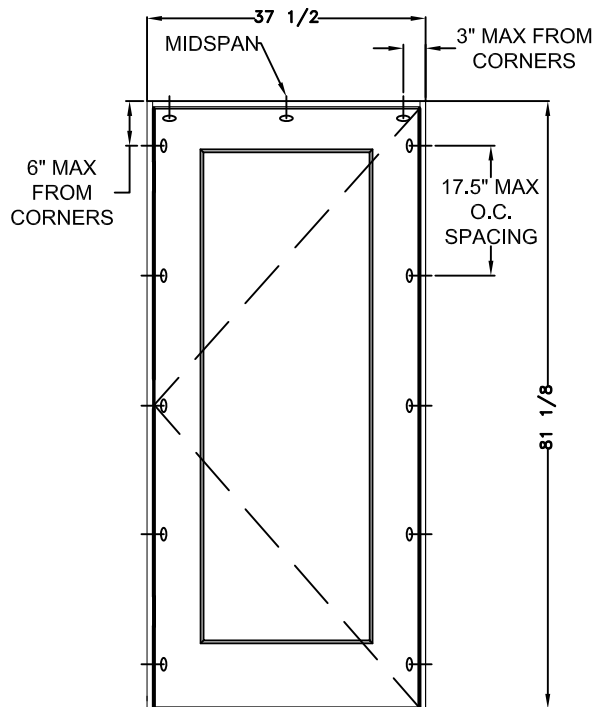

TYPICAL ELEVATION WITH FASTENER SPACING

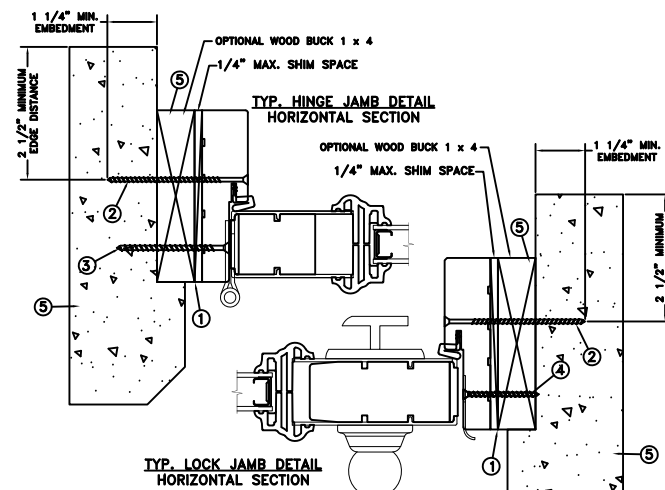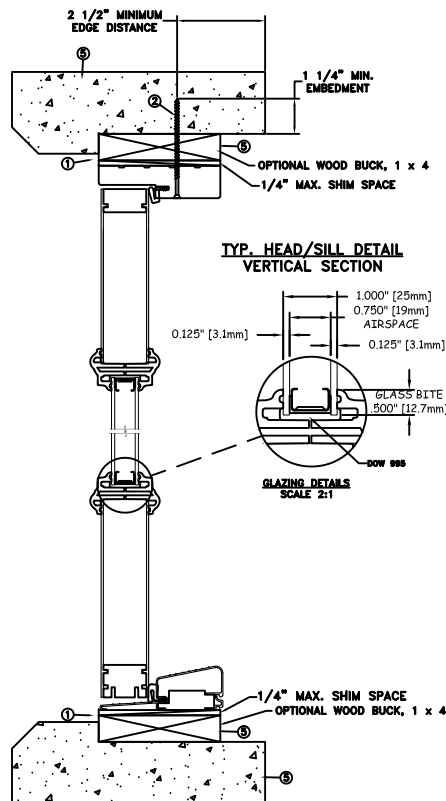

MAXIMUM FRAME	DP	IMPACT
37.5 x 81.125	+50/-50	NO

Installation Notes:

1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
2. Use 3/16" tapcon or equivalent fasteners through frame with sufficient length to penetrate a minimum of 1-1/4" into concrete or masonry at each location with a 2-1/2" min. from edge distance. For concrete (min. fc = 3000 psi) or masonry substrate (CMU shall adhere to ASTM C90).
3. Install one (1) - 3/16" tapcon through each hinge plate with 1-1/4" min. embedment into concrete or masonry.
4. Install one (1) - 3/16" tapcon through latch strike plate with 1-1/4" min. embedment into concrete or masonry.
5. Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.


General Notes:

1. The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
2. All glazing shall conform to ASTM E1300.
3. Glazing is 3.1mm tempered - 19mm airspace - 3.1mm tempered glass.
4. Use structural or composite shims where required.
4. TAS 202-94
5. Product meets High Velocity Hurricane Zone (HVHZ) Requirements.
6. Approved Impact Protective system is required on this product in areas requiring impact resistance.

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.


DISCLAIMER:

This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.


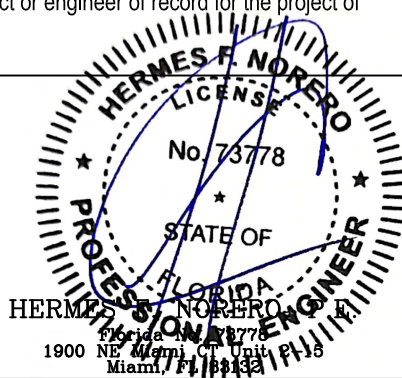


	DATE: 04/07/2025	 3737 LAKEPORT BLVD. KLAMATH FALLS OR, 97601 PHONE: (800) 535-3936	
DRAWN BY: M.HAM	SCALE: NTS		
CHECKED BY: D.VEZO	TITLE: Design Pro/Smooth Pro (F-3500) Fiberglass Swinging Door Outswing 1 Panel		
APPROVED BY: D.VEZO			
RECORD No.: D1000180			
REPORT No. NCTL-210-3916-02		CAD DWG. No.: D015715	REV: B

CONCRETE/MASONRY INSTALLATION

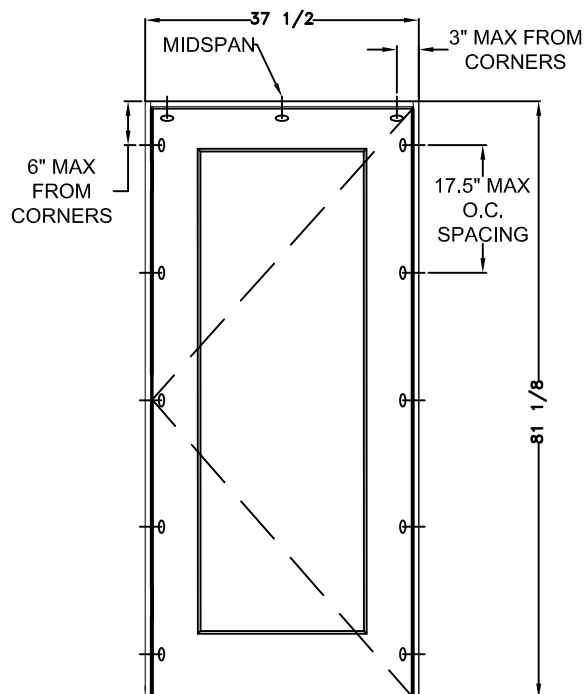

TYPICAL ELEVATION WITH FASTENER SPACING

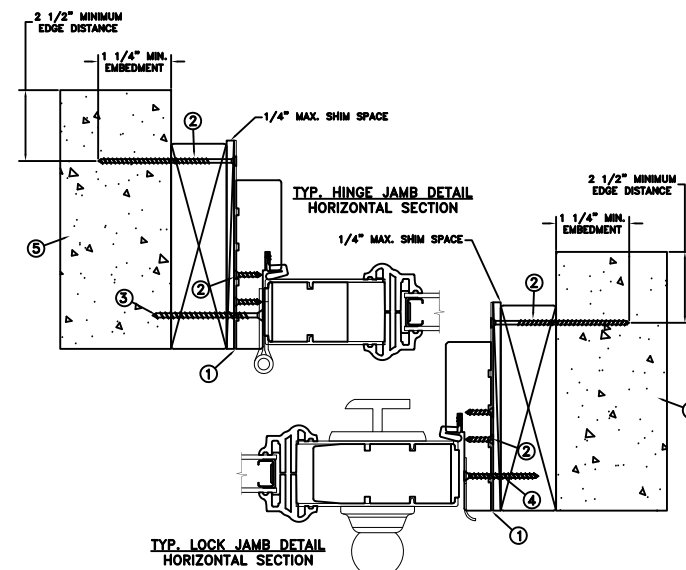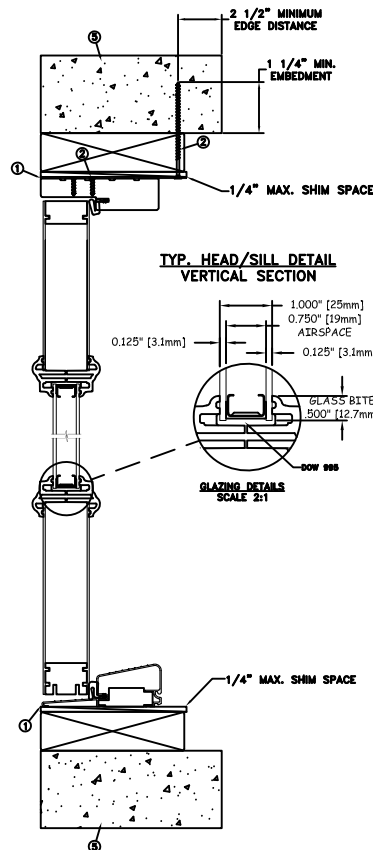

MAXIMUM FRAME	DP	IMPACT
37.5 x 81.125	+50/-50	NO

Installation Notes:

1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
2. Use one (1) - 3/16" Tapcon or equivalent fasteners through strap with sufficient length to penetrate a minimum of 1-1/4" into concrete or masonry at each location with a 2-1/2" min. from edge distance. Use two (2) - #10 PFH fasteners through masonry strap into frame. For concrete (min. fc = 3000 psi) or masonry substrate (CMU shall adhere to ASTM C90).
3. Install one (1) - 3/16" tapcon through each hinge plate with 1-1/4" min. embedment into concrete masonry.
4. Install one (1) - 3/16" tapcon through latch strike plate with 1-1/4" min. embedment into concrete or masonry.
5. Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.


General Notes:

1. The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
2. All glazing shall conform to ASTM E1300.
3. Glazing is 3.1mm tempered - 19.0mm airspace - 3.1mm tempered glass.
4. Use structural or composite shims where required.
5. Masonry strap specifications: 20 Ga. galvanized steel, .036" min. thickness x 1.5" min. width.
6. TAS 202-94
7. Product meets High Velocity Hurricane Zone (HVHZ) Requirements.
8. Approved Impact Protective system is required on this product in areas requiring impact resistance.

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.


DISCLAIMER:

This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.


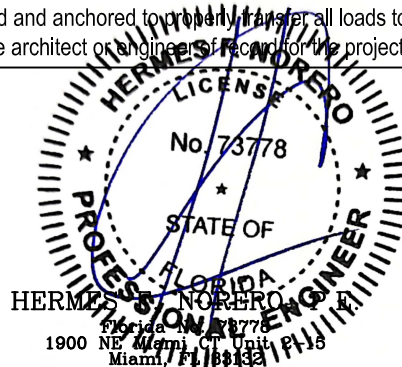


DATE: 04/07/2025	JELD-WEN 3737 LAKEPORT BLVD. KLAMATH FALLS OR, 97601 PHONE: (800) 535-3936
DRAWN BY: M.HAM	
CHECKED BY: D.VEZO	TITLE: Design Pro/Smooth Pro (F-3500) Fiberglass Swinging Door Outswing 1 Panel
APPROVED BY: D.VEZO	
RECORD No.: D1000180	
REPORT No. NCTL-210-3916-02	CAD DWG. No.: D015715
	REV: B SHEET 9 of 20

MASONRY STRAP INSTALLATION

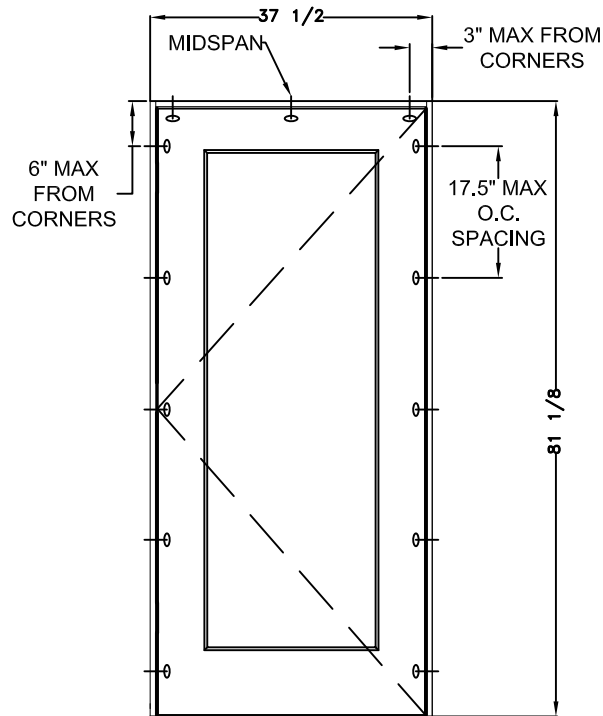

TYPICAL ELEVATION WITH FASTENER SPACING

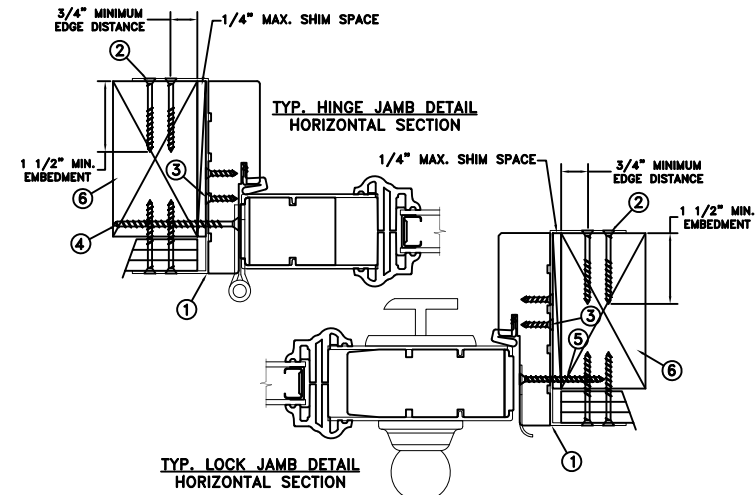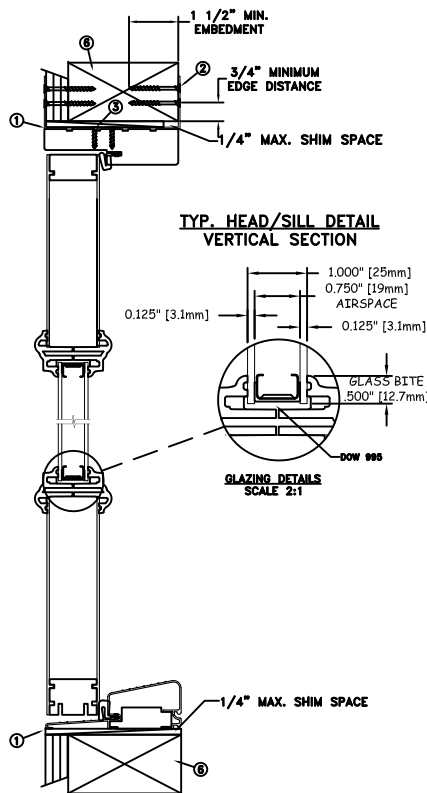

MAXIMUM FRAME	DP	IMPACT
37.5 x 81.125	+50/-50	NO

Installation Notes:

1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
2. Use min. two (2) - #10 PFH or larger fasteners through masonry strap with sufficient length to penetrate a minimum of 1 1/2" into the buck. Bend straps around both sides of the buck. For 2x wood frame substrate (min. S.G. = 0.55).
3. Use min. two (2) - #10 PFH or larger fasteners through masonry strap into jamb without penetrating through the jamb into product causing visibility or collateral damage to product.
4. Install one (1) - #9 x 2-1/2" PH fastener through each hinge plate into rough opening.
5. Install three (3) - #8 x 2" PH fasteners into latch strike plate through the jamb into the rough opening.
6. Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.


General Notes:

1. The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
2. All glazing shall conform to ASTM E1300.
3. Glazing is 3.1mm tempered - 19.0mm airspace - 3.1mm tempered glass.
4. Use structural or composite shims where required.
5. Masonry strap specifications: 20 Ga. galvanized steel, .036" min. thickness x 1.5" min. width.
6. TAS 202-94
7. Product meets High Velocity Hurricane Zone (HVHZ) Requirements.
8. Approved Impact Protective system is required on this product in areas requiring impact resistance.


This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.

DISCLAIMER:


This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.

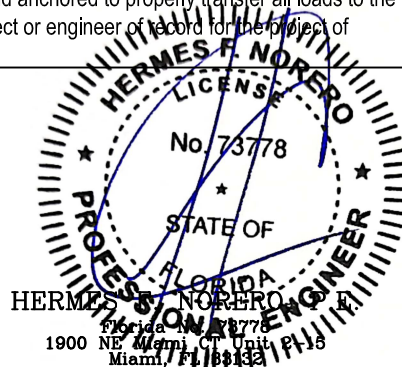


DATE: 04/07/2025	JELD-WEN 3737 LAKEPORT BLVD. KLAMATH FALLS OR, 97601 PHONE: (800) 535-3936
DRAWN BY: M.HAM	
CHECKED BY: D.Vezo	TITLE: Design Pro/Smooth Pro (F-3500) Fiberglass Swinging Door Outswing 1 Panel
APPROVED BY: D.Vezo	
RECORD No.: D1000180	
REPORT No. NCTL-210-3916-02	CAD DWG. No.: D015715
	REV: B SHEET 10 of 20

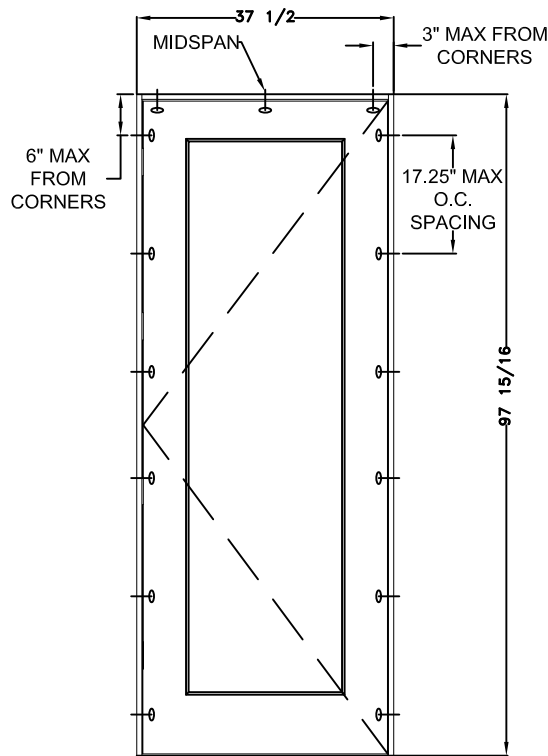

TYPICAL ELEVATION WITH FASTENER SPACING

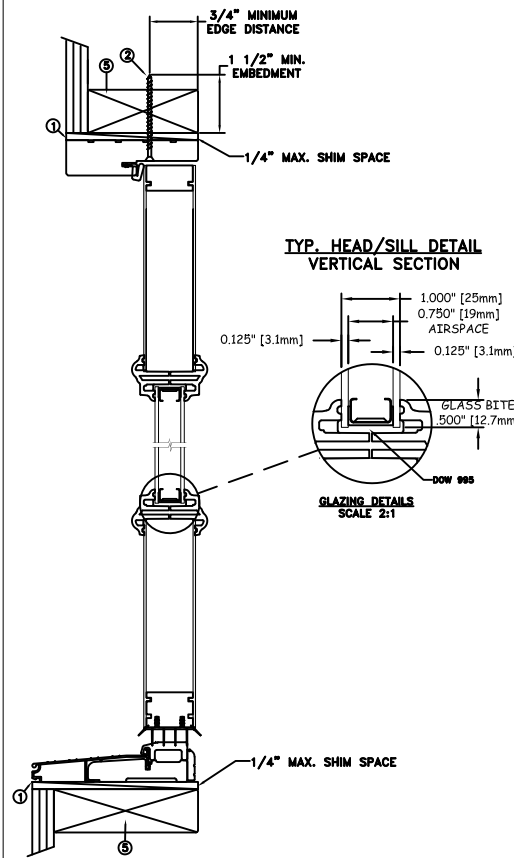

THROUGH FRAME INSTALLATION

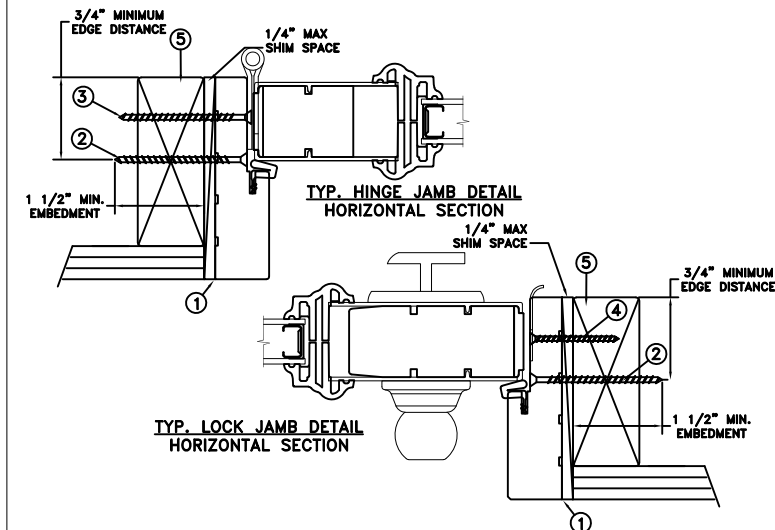

MAXIMUM FRAME	DP	IMPACT
37.5 x 97.9375	+50/-50	NO

Installation Notes:

1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
2. Use #10 PH or greater fastener through the head & side jambs with sufficient length to penetrate a minimum of 1-1/2" into the wood framing. For 2x wood frame substrate (min. S.G. = 0.55).
3. Install one (1) - #9 x 2-1/2" PH fastener through each hinge plate into rough opening.
4. Install three (3) - #8 x 2" PH fasteners into latch strike plate through the jamb into the rough opening.
5. Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.


General Notes:

1. The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
2. All glazing shall conform to ASTM E1300.
3. Glazing is 3.1mm tempered - 19mm airspace - 3.1mm tempered glass.
4. Use structural or composite shims where required.
4. TAS 202-94
5. Product meets High Velocity Hurricane Zone (HVHZ) Requirements.
6. Approved Impact Protective system is required on this product in areas requiring impact resistance.

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.


DISCLAIMER:

This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.


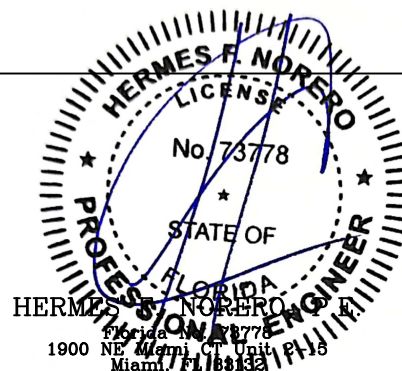


	DATE: 04/07/2025	JELD-WEN 3737 LAKEPORT BLVD. KLAMATH FALLS OR, 97601 PHONE: (800) 535-3936	
DRAWN BY: M.HAM	SCALE: NTS		
CHECKED BY: D.Vezo	TITLE: Design Pro/Smooth Pro (F-3500) Fiberglass Swinging Door Inswing 1 Panel		
APPROVED BY: D.Vezo			
RECORD No.: D1000180			
REPORT No. NCTL-210-3916-02	CAD DWG. No.: D015715	REV: B	SHEET 11 of 20

MASONRY STRAP INSTALLATION

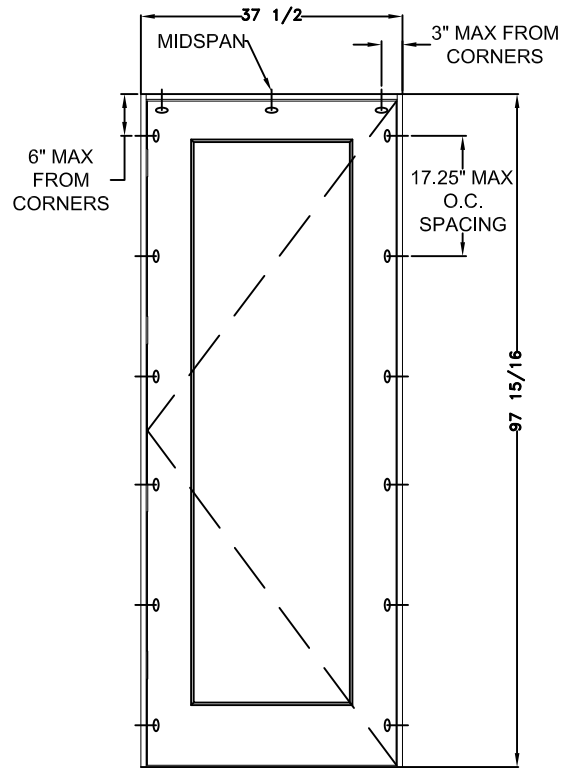

TYPICAL ELEVATION WITH FASTENER SPACING

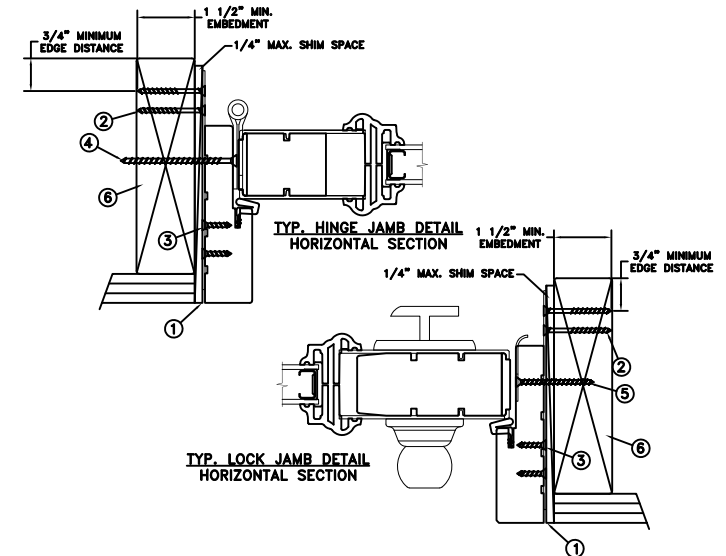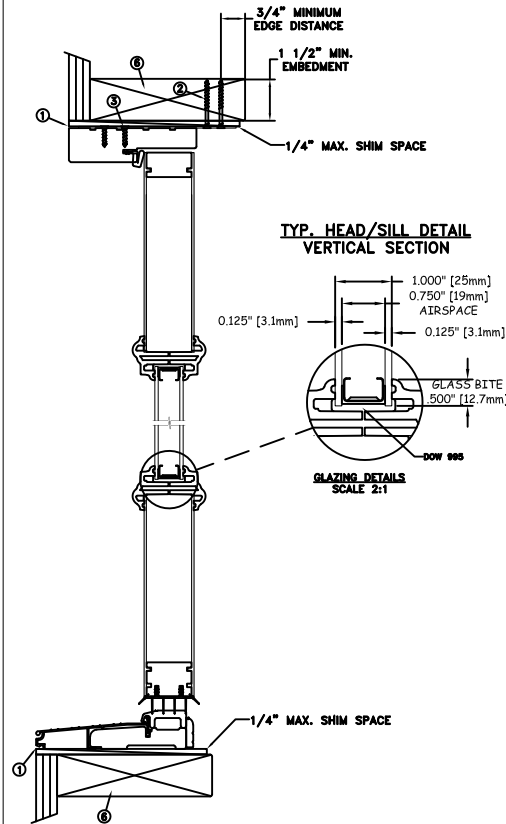

MAXIMUM FRAME	DP	IMPACT
37.5 x 97.9375	+50/-50	NO

Installation Notes:

1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
2. Use two (2) - #10 PFH or larger fasteners through masonry strap with sufficient length to penetrate a minimum of 1-1/2" into the buck. For 2x wood frame substrate (min. S.G. = 0.55).
3. Use two (2) - #10 PFH or larger fasteners through masonry strap into jamb without penetrating through the jamb into product causing visibility or collateral damage to product.
4. Install one (1) - #9 x 2-1/2" PH fastener through each hinge plate into rough opening.
5. Install three (3) - #8 x 2" PH fasteners into latch strike plate through the jamb into the rough opening.
6. Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.


General Notes:

1. The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
2. All glazing shall conform to ASTM E1300.
3. Glazing is 3.1mm tempered - 19.0mm airspace - 3.1mm tempered glass.
4. Use structural or composite shims where required.
5. Masonry strap specifications: 20 Ga. galvanized steel, .036" min. thickness x 1.5" min. width.
6. TAS 202-94
7. Product meets High Velocity Hurricane Zone (HVHZ) Requirements.
8. Approved Impact Protective system is required on this product in areas requiring impact resistance.

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.


DISCLAIMER:

This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.


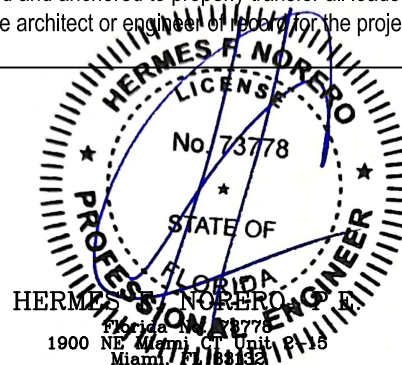


	DATE: 04/07/2025		3737 LAKEPORT BLVD.	
DRAWN BY: M.HAM	SCALE: NTS		KLAMATH FALLS OR, 97601	
CHECKED BY: D.Vezo	TITLE: Design Pro/Smooth Pro (F-3500) Fiberglass Swinging Door Inswing 1 Panel			
APPROVED BY: D.Vezo				
RECORD No.: D1000180				
REPORT No. NCTL-210-3916-02		CAD DWG. No.: D015715	REV: B	SHEET 12 of 20

CONCRETE/MASONRY INSTALLATION

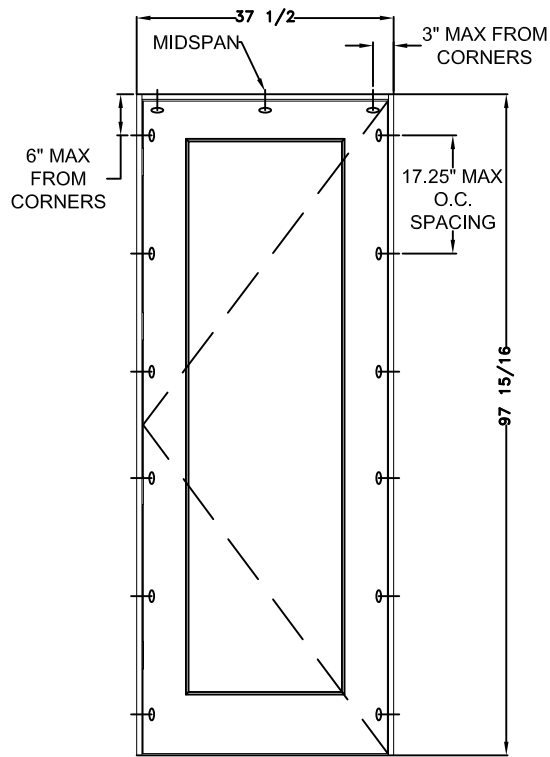

TYPICAL ELEVATION WITH FASTENER SPACING

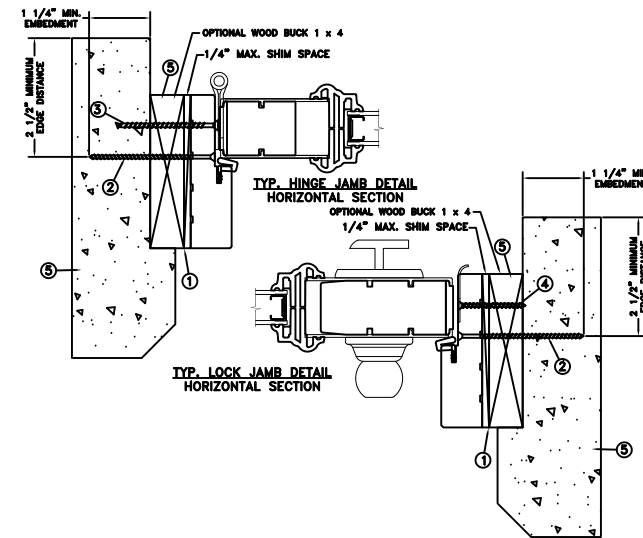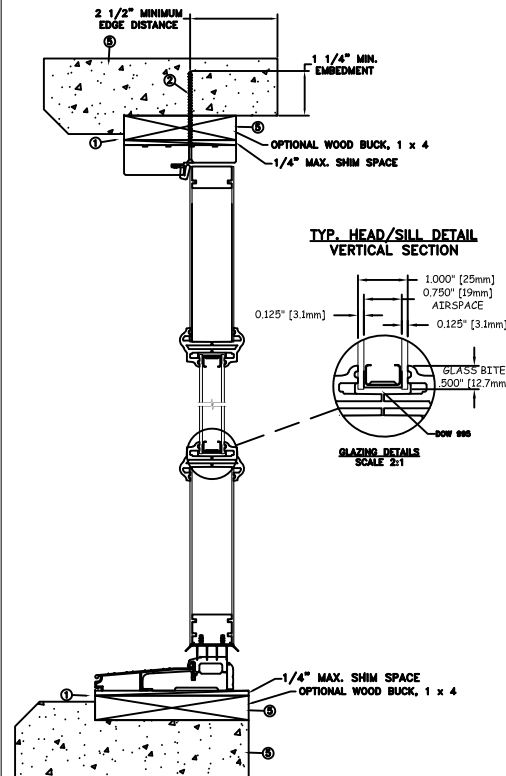

MAXIMUM FRAME	DP	IMPACT
37.5 x 97.9375	+50/-50	NO

Installation Notes:

1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
2. Use 3/16" tapcon or equivalent fasteners through frame with sufficient length to penetrate a minimum of 1-1/4" into concrete or masonry at each location with a 2-1/2" min. from edge distance. For concrete (min. fc = 3000 psi) or masonry substrate (CMU shall adhere to ASTM C90).
3. Install one (1) - 3/16" tapcon through each hinge plate with 1-1/4" min. embedment into concrete or masonry.
4. Install one (1) - 3/16" tapcon through latch strike plate with 1-1/4" min. embedment into concrete or masonry.
5. Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.


General Notes:

1. The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
2. All glazing shall conform to ASTM E1300.
3. Glazing is 3.1mm tempered - 19mm airspace - 3.1mm tempered glass.
4. Use structural or composite shims where required.
4. TAS 202-94
5. Product meets High Velocity Hurricane Zone (HVHZ) Requirements.
6. Approved Impact Protective system is required on this product in areas requiring impact resistance.

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.


DISCLAIMER:

This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.


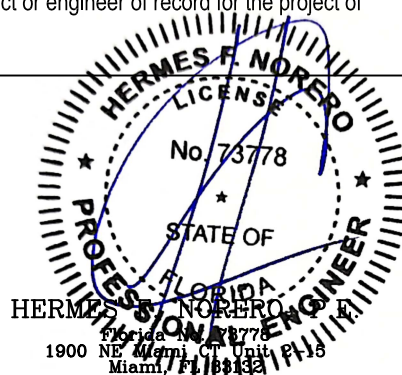


DATE: 04/07/2025	JELD-WEN 3737 LAKEPORT BLVD. KLAMATH FALLS OR, 97601 PHONE: (800) 535-3936
DRAWN BY: M.HAM	
CHECKED BY: D.VEZO	TITLE: Design Pro/Smooth Pro (F-3500) Fiberglass Swinging Door Inswing 1 Panel
APPROVED BY: D.VEZO	
RECORD No.: D1000180	CAD DWG. No.: D015715
REPORT No. NCTL-210-3916-02	
REV: B	SHEET 13 of 20

CONCRETE/MASONRY INSTALLATION

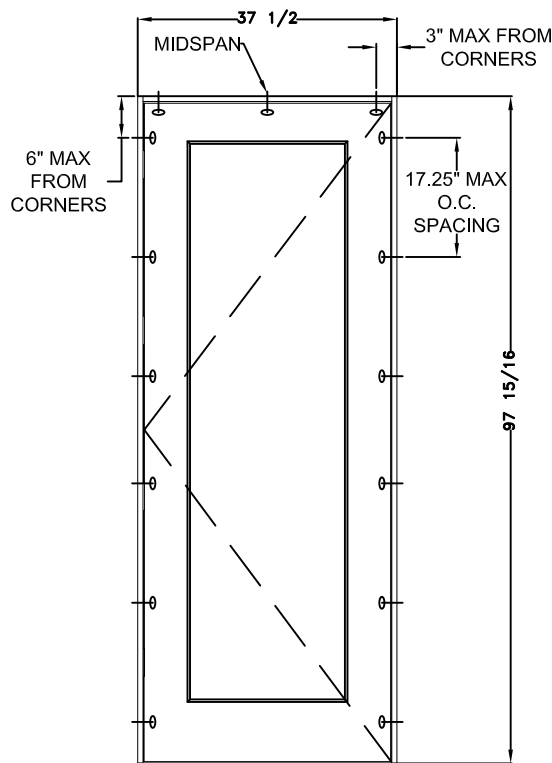

TYPICAL ELEVATION WITH FASTENER SPACING

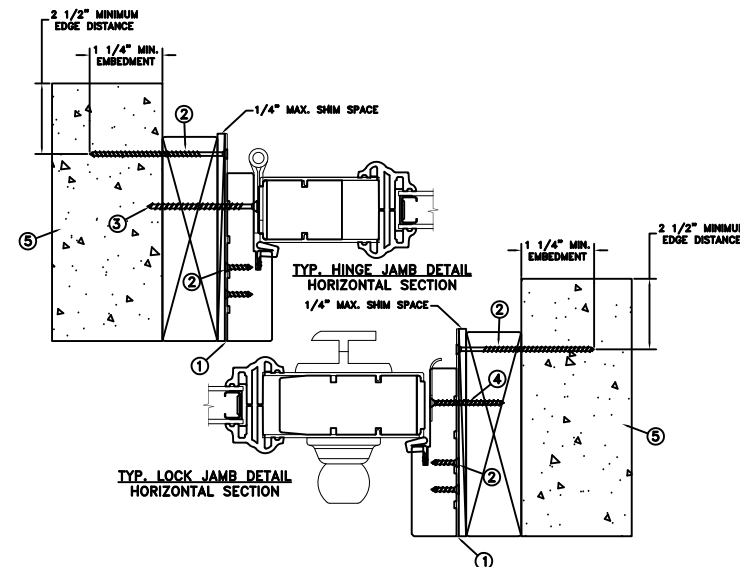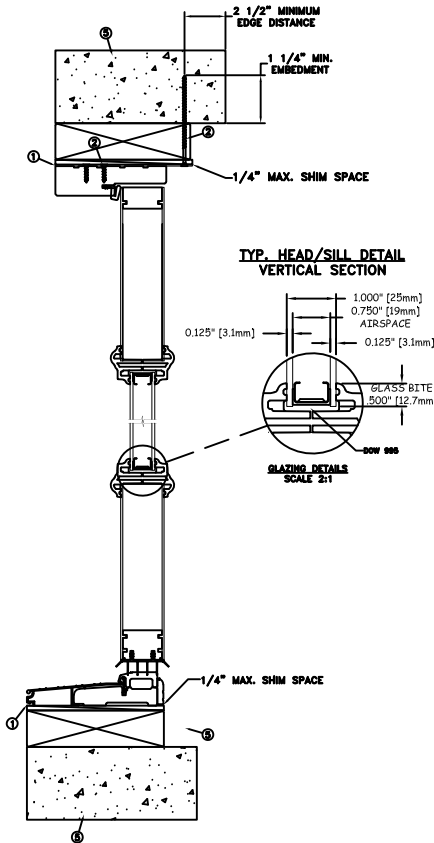

MAXIMUM FRAME	DP	IMPACT
37.5 x 97.9375	+50/-50	NO

Installation Notes:

1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
2. Use one (1) - 3/16" Tapcon or equivalent fasteners through strap with sufficient length to penetrate a minimum of 1-1/4" into concrete or masonry at each location with a 2-1/2" min. from edge distance. Use two (2) - #10 PFH fasteners through masonry strap into frame. For concrete (min. fc = 3000 psi) or masonry substrate (CMU shall adhere to ASTM C90).
3. Install one (1) - 3/16" tapcon through each hinge plate with 1-1/4" min. embedment into concrete masonry.
4. Install one (1) - 3/16" tapcon through latch strike plate with 1-1/4" min. embedment into concrete or masonry.
5. Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.


General Notes:

1. The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
2. All glazing shall conform to ASTM E1300.
3. Glazing is 3.1mm tempered - 19.0mm airspace - 3.1mm tempered glass.
4. Use structural or composite shims where required.
5. Masonry strap specifications: 20 Ga. galvanized steel, .036" min. thickness x 1.5" min. width.
6. TAS 202-94
7. Product meets High Velocity Hurricane Zone (HVHZ) Requirements.
8. Approved Impact Protective system is required on this product in areas requiring impact resistance.

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.


DISCLAIMER:

This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.


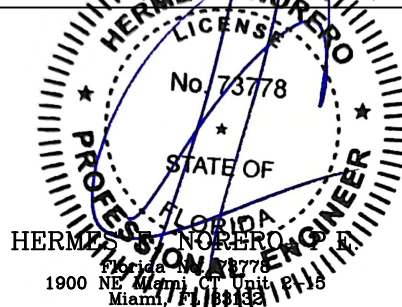


DATE: 04/07/2025	JELD-WEN 3737 LAKEPORT BLVD. KLAMATH FALLS OR, 97601 PHONE: (800) 535-3936
DRAWN BY: M.HAM	
CHECKED BY: D.Vezo	TITLE: Design Pro/Smooth Pro (F-3500) Fiberglass Swinging Door Inswing 1 Panel
APPROVED BY: D.Vezo	
RECORD No.: D1000180	
REPORT No. NCTL-210-3916-02	CAD DWG. No.: D015715
	REV: B
	SHEET 14 of 20

MASONRY STRAP INSTALLATION

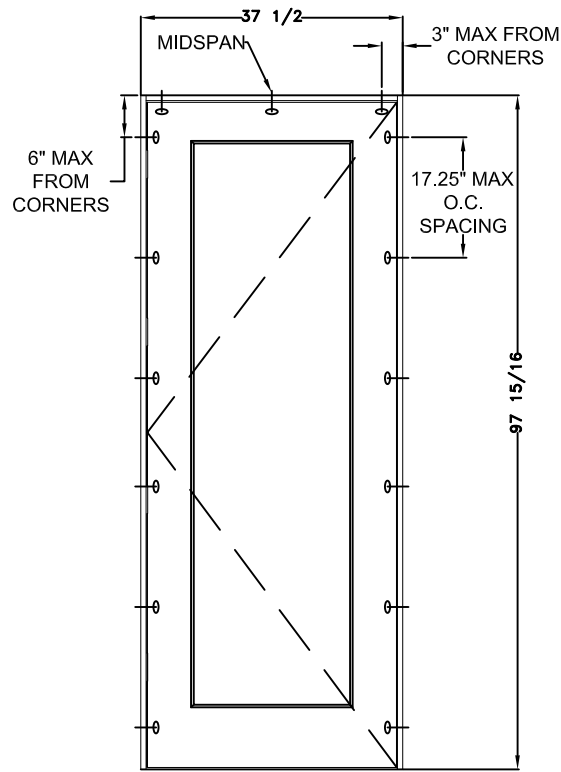

TYPICAL ELEVATION WITH FASTENER SPACING

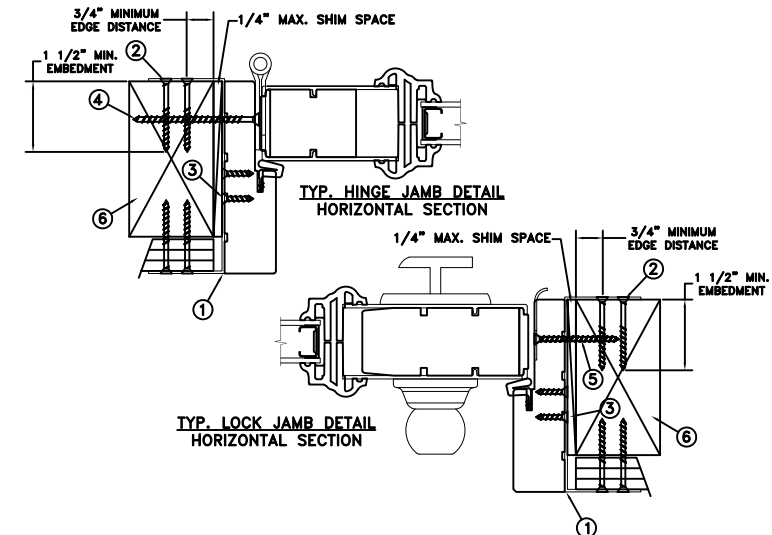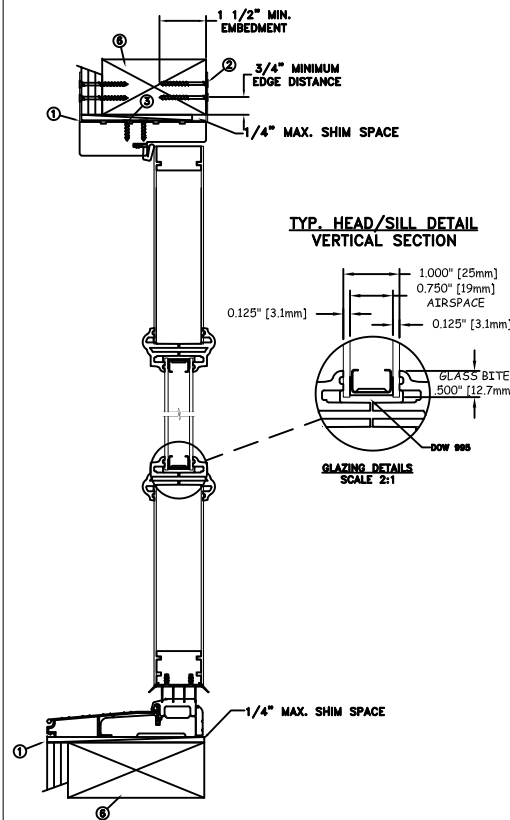

MAXIMUM FRAME	DP	IMPACT
37.5 x 97.9375	+50/-50	NO

Installation Notes:

1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
2. Use min. two (2) - #10 PFH or larger fasteners through masonry strap with sufficient length to penetrate a minimum of 1 1/2" into the buck. Bend straps around both sides of the buck. For 2x wood frame substrate (min. S.G. = 0.55).
3. Use min. two (2) - #10 PFH or larger fasteners through masonry strap into jamb without penetrating through the jamb into product causing visibility or collateral damage to product.
4. Install one (1) - #9 x 2-1/2" PH fastener through each hinge plate into rough opening.
5. Install three (3) - #8 x 2" PH fasteners into latch strike plate through the jamb into the rough opening.
6. Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.


General Notes:

1. The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
2. All glazing shall conform to ASTM E1300.
3. Glazing is 3.1mm tempered - 19.0mm airspace - 3.1mm tempered glass.
4. Use structural or composite shims where required.
5. Masonry strap specifications: 20 Ga. galvanized steel, .036" min. thickness x 1.5" min. width.
6. TAS 202-94
7. Product meets High Velocity Hurricane Zone (HVHZ) Requirements.
8. Approved Impact Protective system is required on this product in areas requiring impact resistance.

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.


DISCLAIMER:

This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.


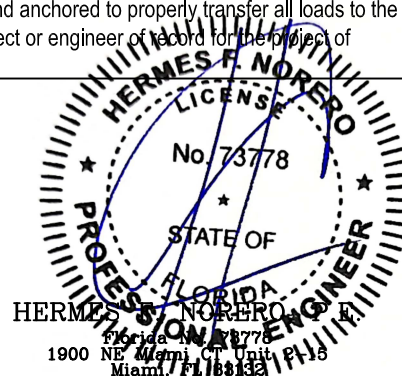


DATE: 04/07/2025	JELD-WEN 3737 LAKEPORT BLVD. KLAMATH FALLS OR, 97601 PHONE: (800) 535-3936
DRAWN BY: M.HAM	
CHECKED BY: D.Vezo	TITLE: Design Pro/Smooth Pro (F-3500) Fiberglass Swinging Door Inswing 1 Panel
APPROVED BY: D.Vezo	
RECORD No.: D1000180	
REPORT No. NCTL-210-3916-02	CAD DWG. No.: D015715
REV: B	SHEET 15 of 20

THROUGH FRAME INSTALLATION

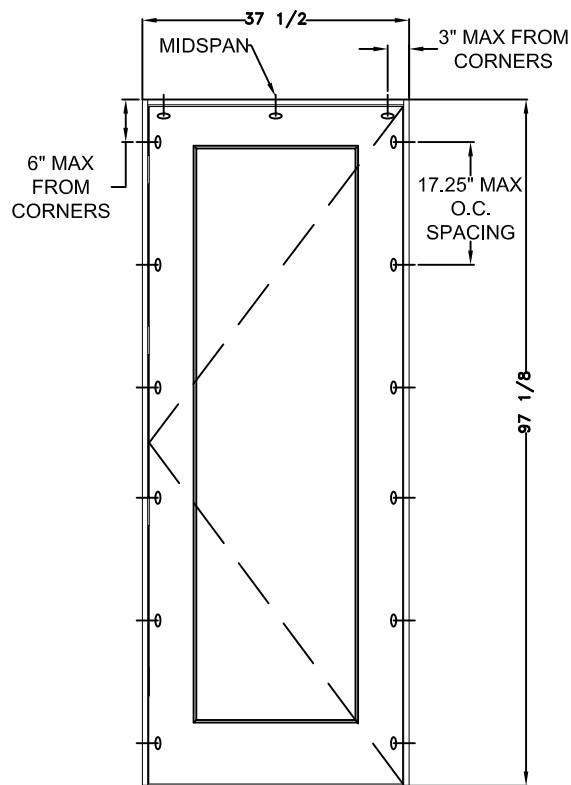

TYPICAL ELEVATION WITH FASTENER SPACING

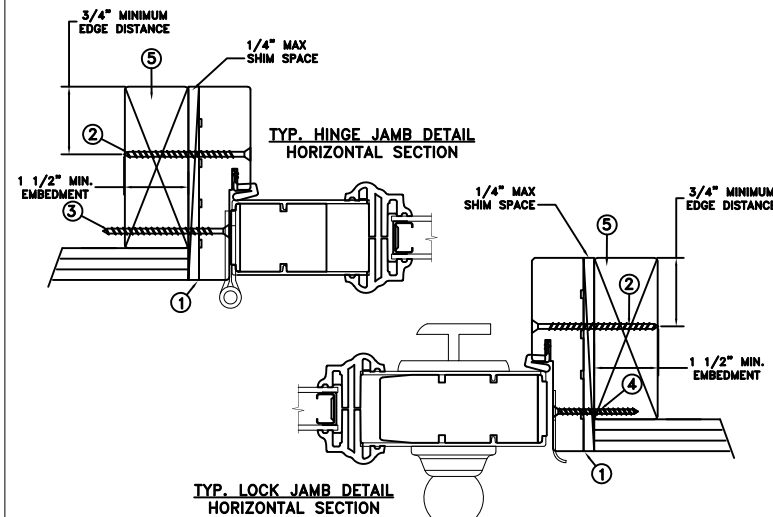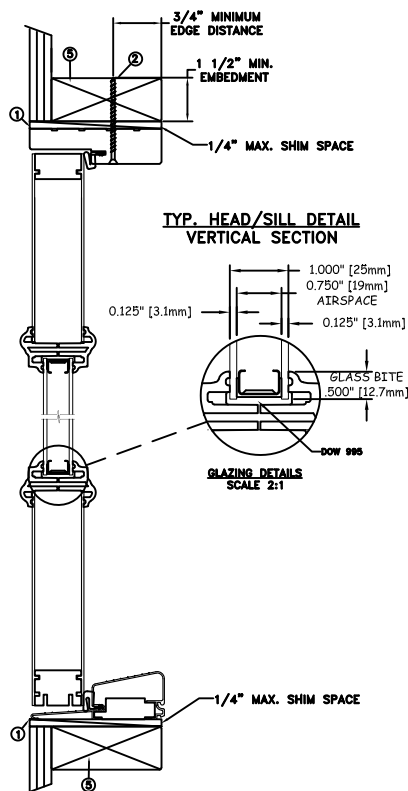

MAXIMUM FRAME	DP	IMPACT
37.5 x 97.125	+50/-50	NO

Installation Notes:

1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
2. Use #10 PH or greater fastener through the head & side jambs with sufficient length to penetrate a minimum of 1-1/2" into the wood framing. For 2x wood frame substrate (min. S.G. = 0.55).
3. Install one (1) - #9 x 2-1/2" PH fastener through each hinge plate into rough opening.
4. Install three (3) - #8 x 2" PH fasteners into latch strike plate through the jamb into the rough opening.
5. Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.


General Notes:

1. The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
2. All glazing shall conform to ASTM E1300.
3. Glazing is 3.1mm tempered - 19mm airspace - 3.1mm tempered glass.
4. Use structural or composite shims where required.
4. TAS 202-94
5. Product meets High Velocity Hurricane Zone (HVHZ) Requirements.
6. Approved Impact Protective system is required on this product in areas requiring impact resistance.

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.


DISCLAIMER:

This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.


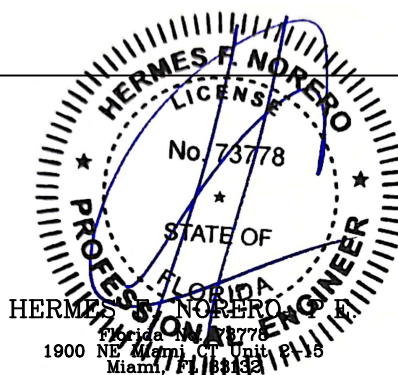


DATE: 04/07/2025	JELD-WEN 3737 LAKEPORT BLVD. KLAMATH FALLS OR, 97601 PHONE: (800) 535-3936
DRAWN BY: M.HAM	
CHECKED BY: D.VEZO	TITLE: Design Pro/Smooth Pro (F-3500) Fiberglass Swinging Door Outswing 1 Panel
APPROVED BY: D.VEZO	
RECORD No.: D1000180	REPORT No. NCTL-210-3916-02
CAD DWG. No.: D015715	
REV: B	SHEET 16 of 20

MASONRY STRAP INSTALLATION

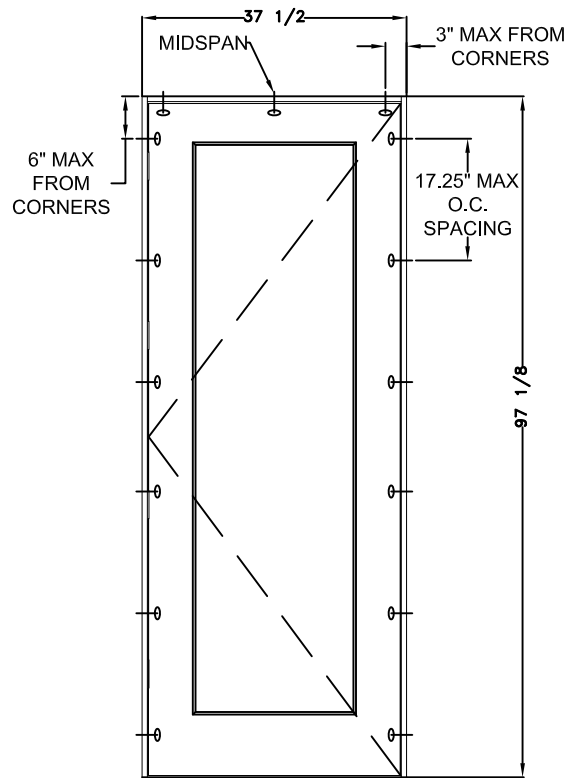

TYPICAL ELEVATION WITH FASTENER SPACING

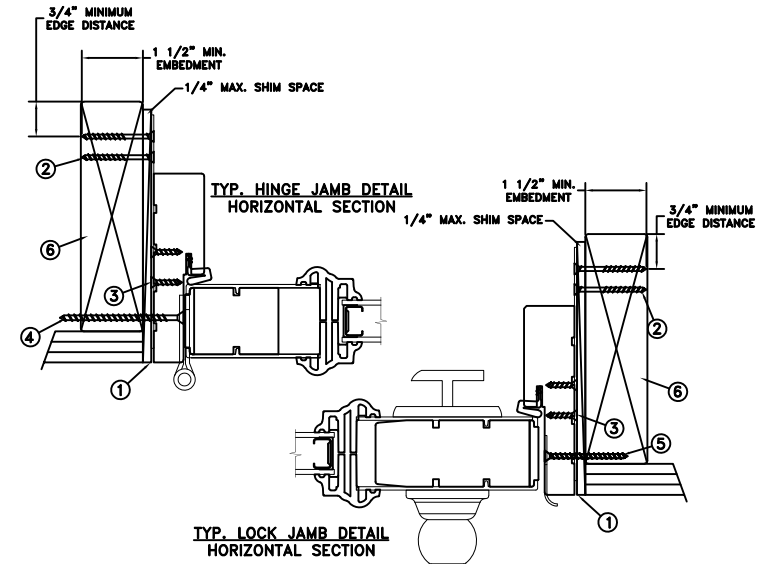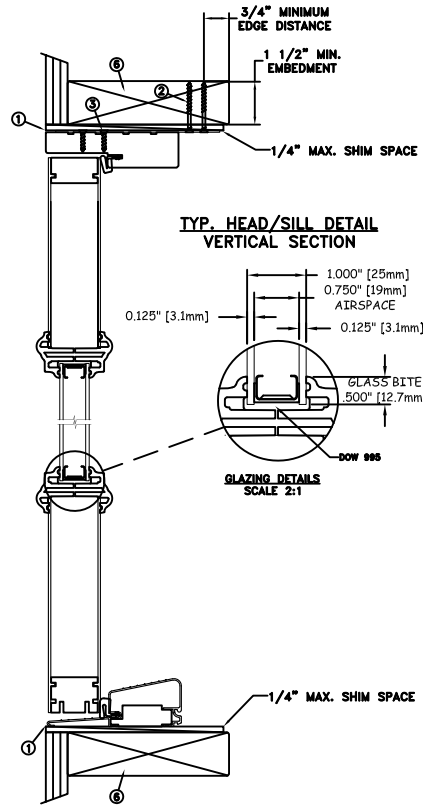

MAXIMUM FRAME	DP	IMPACT
37.5 x 97.125	+50/-50	NO

Installation Notes:

1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
2. Use two (2) - #10 PFH or larger fasteners through masonry strap with sufficient length to penetrate a minimum of 1-1/2" into the buck. For 2x wood frame substrate (min. S.G. = 0.55).
3. Use two (2) - #10 PFH or larger fasteners through masonry strap into jamb without penetrating through the jamb into product causing visibility or collateral damage to product.
4. Install one (1) - #9 x 2-1/2" PH fastener through each hinge plate into rough opening.
5. Install three (3) - #8 x 2" PH fasteners into latch strike plate through the jamb into the rough opening.
6. Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.


General Notes:

1. The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
2. All glazing shall conform to ASTM E1300.
3. Glazing is 3.1mm tempered - 19.0mm airspace - 3.1mm tempered glass.
4. Use structural or composite shims where required.
5. Masonry strap specifications: 20 Ga. galvanized steel, .036" min. thickness x 1.5" min. width.
6. TAS 202-94
7. Product meets High Velocity Hurricane Zone (HVHZ) Requirements.
8. Approved Impact Protective system is required on this product in areas requiring impact resistance.

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.


DISCLAIMER:

This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.


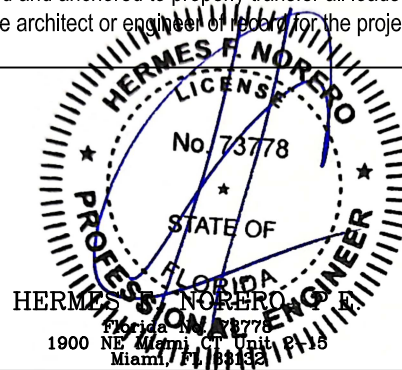


DATE: 04/07/2025	JELD-WEN 3737 LAKEPORT BLVD. KLAMATH FALLS OR, 97601 PHONE: (800) 535-3936
DRAWN BY: M.HAM	
CHECKED BY: D.Vezo	TITLE: Design Pro/Smooth Pro (F-3500) Fiberglass Swinging Door Outswing 1 Panel
APPROVED BY: D.Vezo	
RECORD No.: D1000180	
REPORT No. NCTL-210-3916-02	CAD DWG. No.: D015715
	REV: B
	SHEET 17 of 20

CONCRETE/MASONRY INSTALLATION

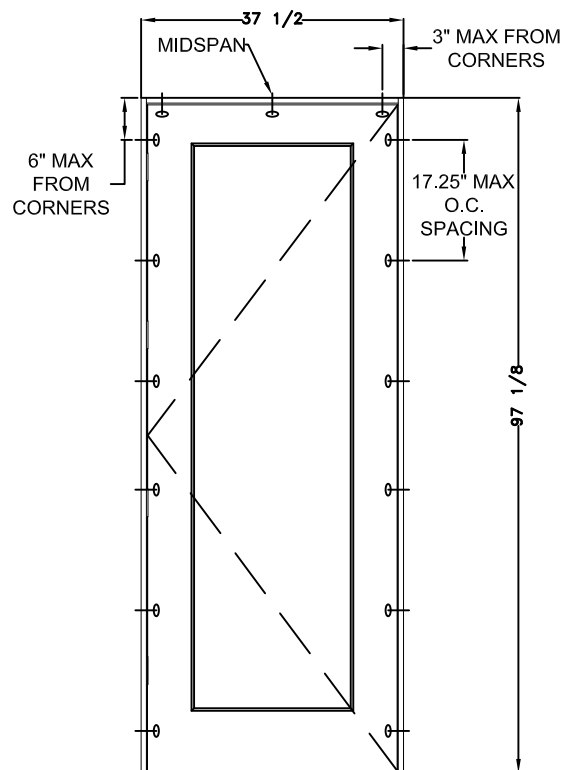

TYPICAL ELEVATION WITH FASTENER SPACING

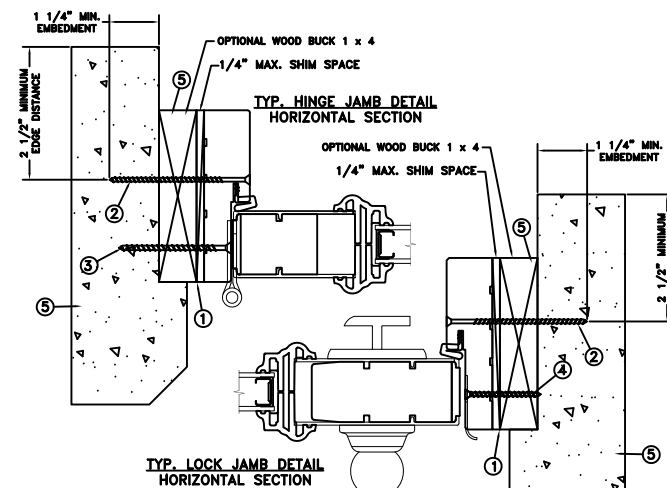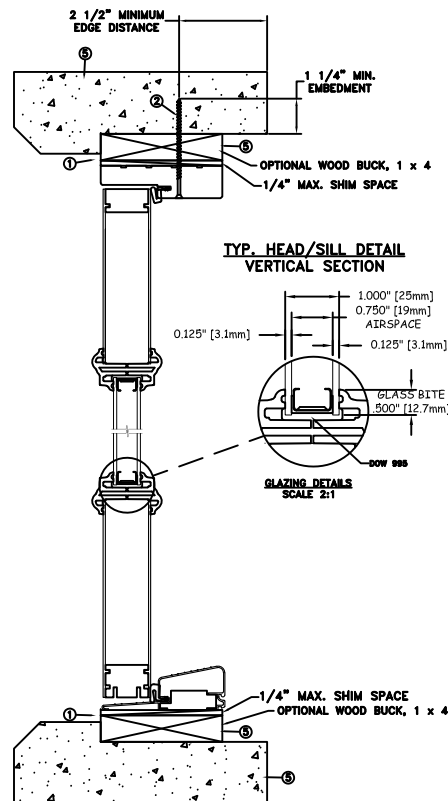

MAXIMUM FRAME	DP	IMPACT
37.5 x 97.125	+50/-50	NO

Installation Notes:

- Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
- Use 3/16" tapcon or equivalent fasteners through frame with sufficient length to penetrate a minimum of 1-1/4" into concrete or masonry at each location with a 2-1/2" min. from edge distance. For concrete (min. fc = 3000 psi) or masonry substrate (CMU shall adhere to ASTM C90).
- Install one (1) - 3/16" tapcon through each hinge plate with 1-1/4" min. embedment into concrete or masonry.
- Install one (1) - 3/16" tapcon through latch strike plate with 1-1/4" min. embedment into concrete or masonry.
- Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.


General Notes:

- The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
- All glazing shall conform to ASTM E1300.
- Glazing is 3.1mm tempered - 19mm airspace - 3.1mm tempered glass.
- Use structural or composite shims where required.
- TAS 202-94
- Product meets High Velocity Hurricane Zone (HVHZ) Requirements.
- Approved Impact Protective system is required on this product in areas requiring impact resistance.

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.


DISCLAIMER:

This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.


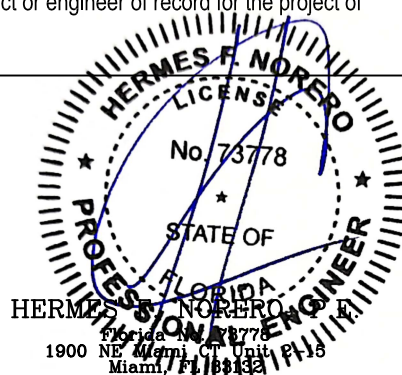


DATE: 04/07/2025	JELD-WEN 3737 LAKEPORT BLVD. KLAMATH FALLS OR, 97601 PHONE: (800) 535-3936
DRAWN BY: M.HAM	
CHECKED BY: D.Vezo	TITLE: Design Pro/Smooth Pro (F-3500) Fiberglass Swinging Door Outswing 1 Panel
APPROVED BY: D.Vezo	
RECORD No.: D1000180	CAD DWG. No.: D015715
REPORT No. NCTL-210-3916-02	
REV: B	SHEET 18 of 20

CONCRETE/MASONRY INSTALLATION

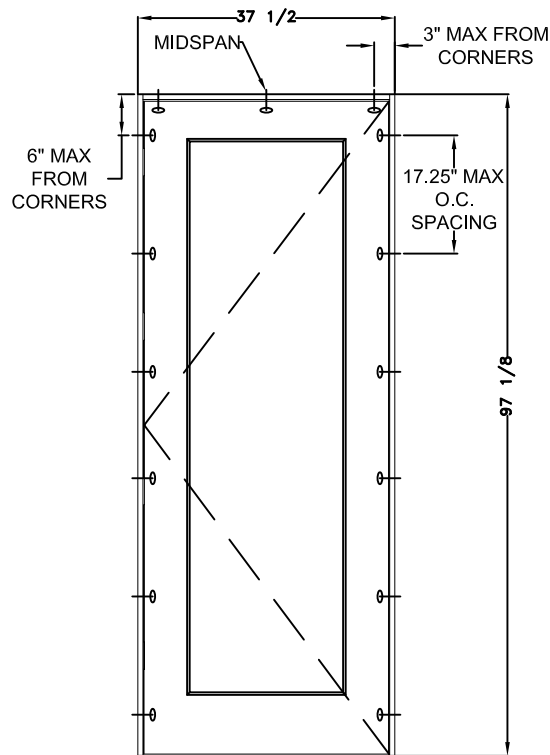

TYPICAL ELEVATION WITH FASTENER SPACING

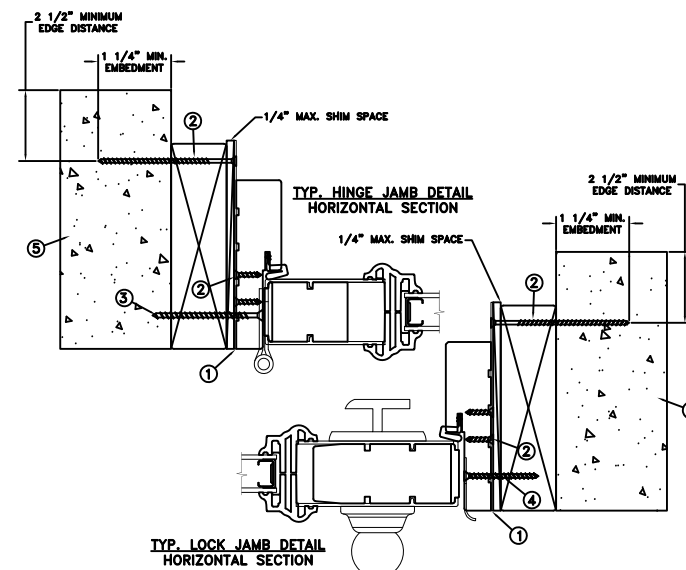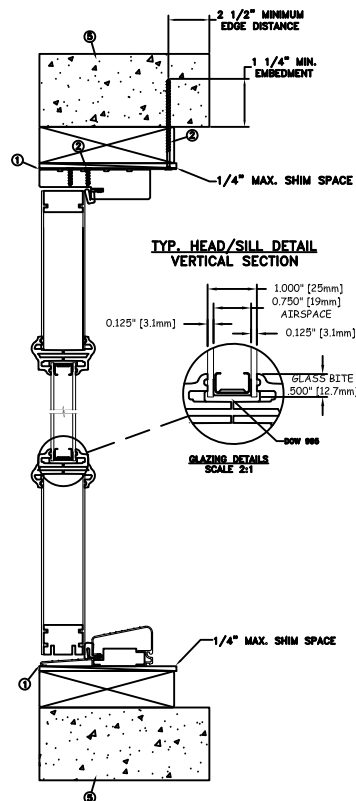

MAXIMUM FRAME	DP	IMPACT
37.5 x 97.125	+50/-50	NO

Installation Notes:

1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
2. Use one (1) - 3/16" Tapcon or equivalent fasteners through strap with sufficient length to penetrate a minimum of 1-1/4" into concrete or masonry at each location with a 2-1/2" min. from edge distance. Use two (2) - #10 PFH fasteners through masonry strap into frame. For concrete (min. fc = 3000 psi) or masonry substrate (CMU shall adhere to ASTM C90).
3. Install one (1) - 3/16" tapcon through each hinge plate with 1-1/4" min. embedment into concrete masonry.
4. Install one (1) - 3/16" tapcon through latch strike plate with 1-1/4" min. embedment into concrete or masonry.
5. Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.


General Notes:

1. The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
2. All glazing shall conform to ASTM E1300.
3. Glazing is 3.1mm tempered - 19.0mm airspace - 3.1mm tempered glass.
4. Use structural or composite shims where required.
5. Masonry strap specifications: 20 Ga. galvanized steel, .036" min. thickness x 1.5" min. width.
6. TAS 202-94
7. Product meets High Velocity Hurricane Zone (HVHZ) Requirements.
8. Approved Impact Protective system is required on this product in areas requiring impact resistance.

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.


DISCLAIMER:

This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.


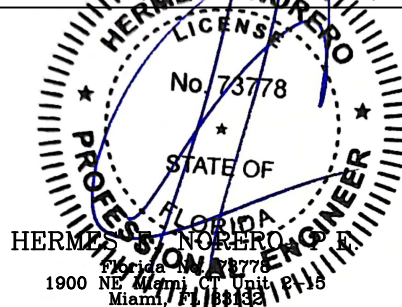


	DATE: 04/07/2025	 3737 LAKEPORT BLVD. KLAMATH FALLS OR, 97601 PHONE: (800) 535-3936	
DRAWN BY: M.HAM	SCALE: NTS		
CHECKED BY: D.Vezo	TITLE: Design Pro/Smooth Pro (F-3500) Fiberglass Swinging Door Outswing 1 Panel		
APPROVED BY: D.Vezo			
RECORD No.: D1000180			
REPORT No. NCTL-210-3916-02	CAD DWG. No.: D015715	REV: B	SHEET 19 of 20

MASONRY STRAP INSTALLATION

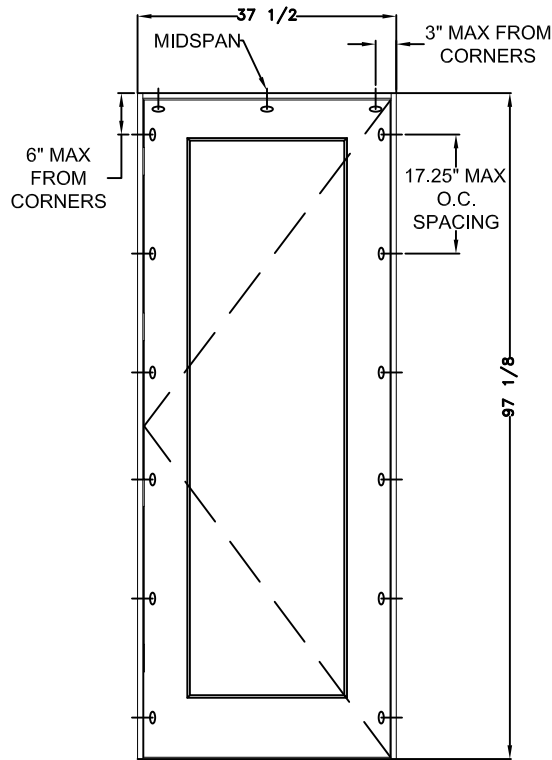

TYPICAL ELEVATION WITH FASTENER SPACING

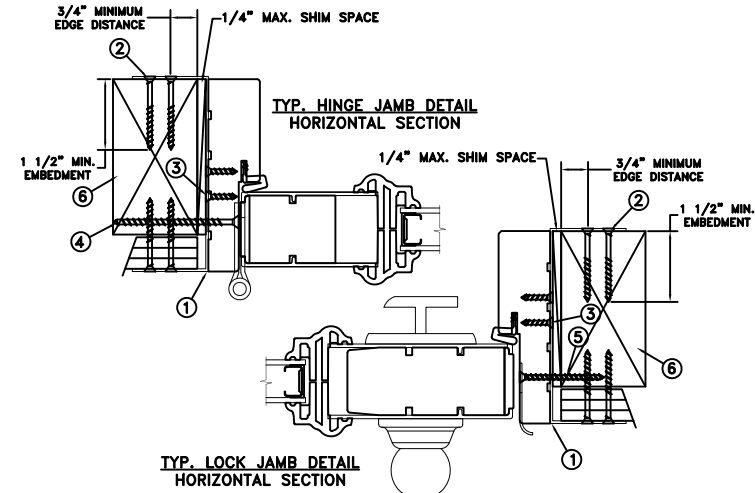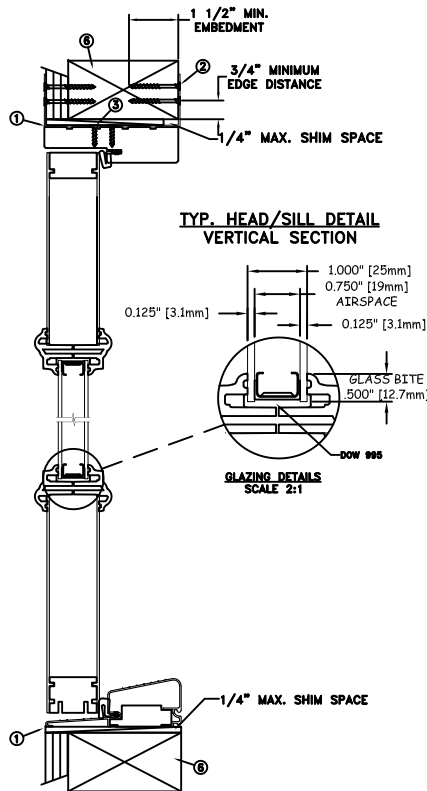

MAXIMUM FRAME	DP	IMPACT
37.5 x 97.125	+50/-50	NO

Installation Notes:

1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
2. Use min. two (2) - #10 PFH or larger fasteners through masonry strap with sufficient length to penetrate a minimum of 1 1/2" into the buck. Bend straps around both sides of the buck. For 2x wood frame substrate (min. S.G. = 0.55).
3. Use min. two (2) - #10 PFH or larger fasteners through masonry strap into jamb without penetrating through the jamb into product causing visibility or collateral damage to product.
4. Install one (1) - #9 x 2-1/2" PH fastener through each hinge plate into rough opening.
5. Install three (3) - #8 x 2" PH fasteners into latch strike plate through the jamb into the rough opening.
6. Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.


General Notes:

1. The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
2. All glazing shall conform to ASTM E1300.
3. Glazing is 3.1mm tempered - 19.0mm airspace - 3.1mm tempered glass.
4. Use structural or composite shims where required.
5. Masonry strap specifications: 20 Ga. galvanized steel, .036" min. thickness x 1.5" min. width.
6. TAS 202-94
7. Product meets High Velocity Hurricane Zone (HVHZ) Requirements.
8. Approved Impact Protective system is required on this product in areas requiring impact resistance.

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.

DISCLAIMER:

This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.

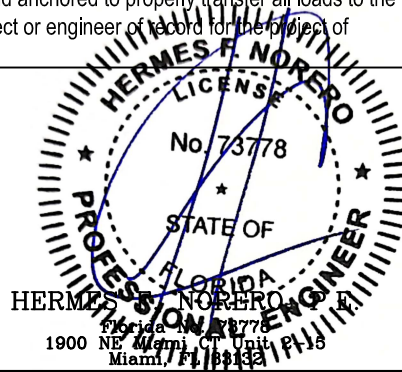

	DATE: 04/07/2025	 3737 LAKEPORT BLVD. KLAMATH FALLS OR, 97601 PHONE: (800) 535-3936	
DRAWN BY: M.HAM	SCALE: NTS		
CHECKED BY: D.Vezo	TITLE: Design Pro/Smooth Pro (F-3500) Fiberglass Swinging Door Outswing 1 Panel		
APPROVED BY: D.Vezo			
RECORD No.: D1000180			
REPORT No. NCTL-210-3916-02	CAD DWG. No.: D015715	REV: B	SHEET 20 of 20