



CS WALL PANEL - The details shown below are typical Chief metal building details. Not all details may apply. Specific details for additional features will be provided for complete installation instructions.

- NOTES:
- The structural system must be plumb and square prior to panel installation.
 - Care must be taken to insure panel modularity due to accessory locations and trim.
 - Insulation has not been shown for clarity.
 - Blanket insulation must be trimmed above the bottom of panel to prevent water from "WICKING" into the insulation.
 - Provide air gap of 1/4" min. at bottom of panel to avoid corrosion.
 - #12-14 X 1 1/4" Fastener spacing is (12" C.C.) unless otherwise noted.
 - ** #12-14 X 1-1/4", Blanket Insulation <=4" thickness
 - ** #12-14 X 2", Blanket Insulation >4" thickness
 - When possible, CHIEF recommends installing panel so that panel lap is away from prevailing weather.

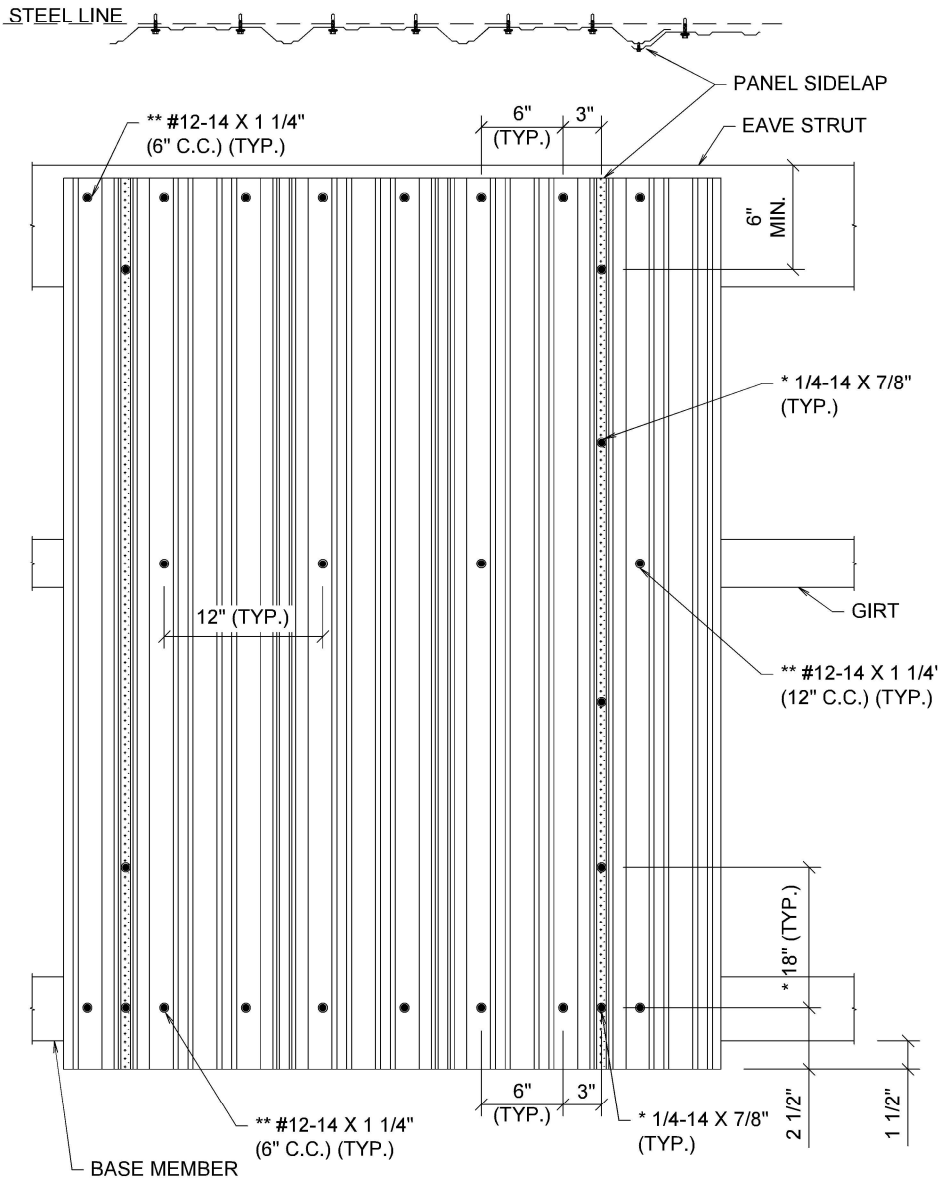


CS PANEL INSTALLATION

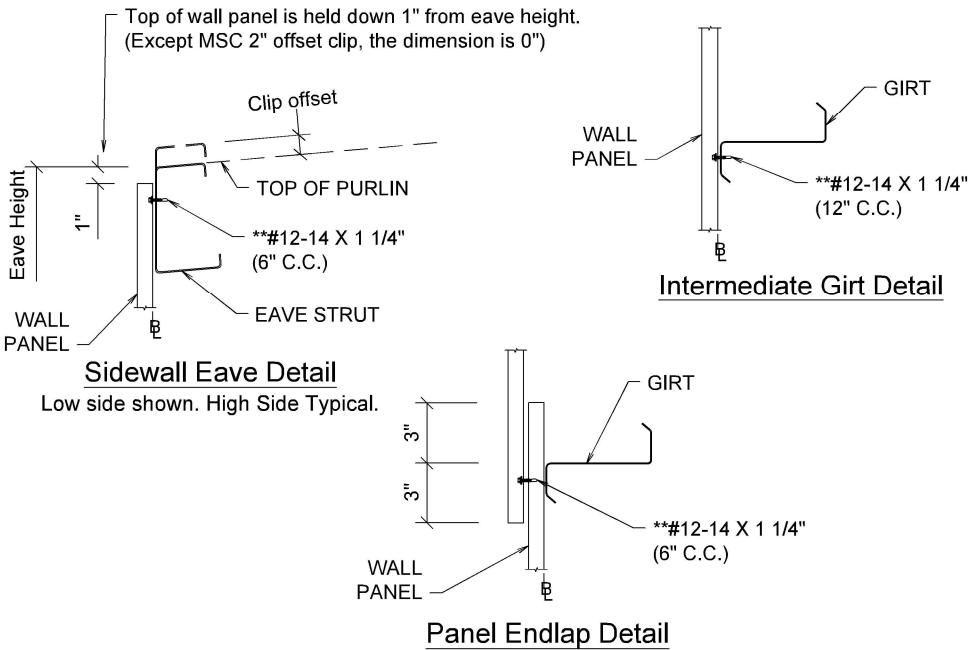


CS PANEL FASTENER INSTALLATION

- NOTE:
- Sidelap holes (7/32" DIA.) must be Pre-drilled in the overlapping corrugation only.
 - The overlapping corrugation does not have the return leg.

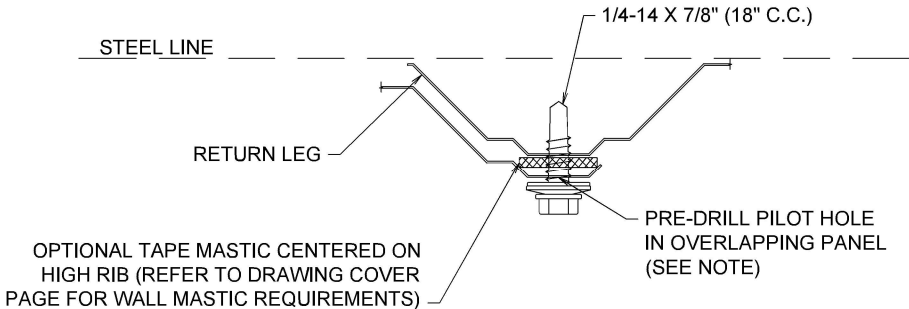


CS PANEL SIDE LAPS

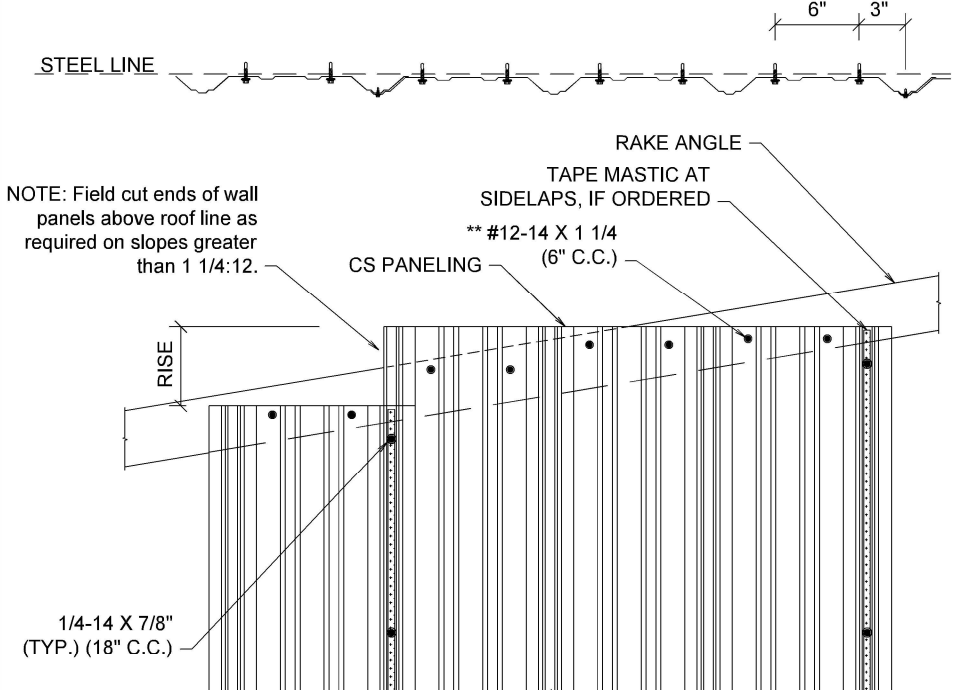

CS PANEL AT GABLE END

- NOTES:
- Field cut panel if required for corner trim.
 - Corner Angle connection/fasteners, refer to Girt Corner Detail.
 - Connection of panel to structure at corner is by the corner trim fasteners.

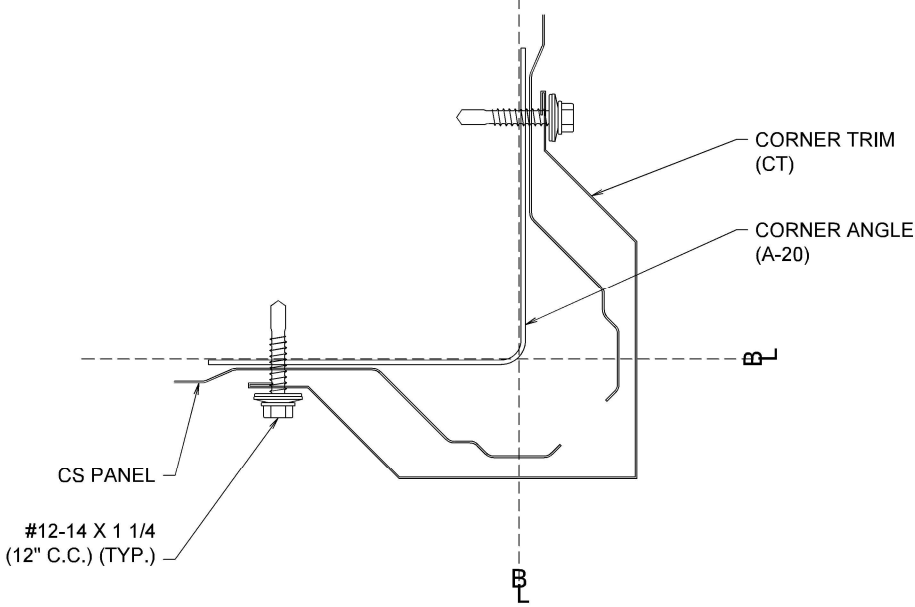

CS PANEL STANDARD CORNER CONDITION


REVISIONS

4	
3	
2	
1	

Notwithstanding the adjacent seal, neither the Engineer named nor Chief Buildings is acting as The Engineer of Record. The Engineer named and Chief Buildings responsibility is limited to the structural performance of the pre-engineered components designed by Chief Buildings.

Chief Buildings
PO Box 2078, Grand Island, NE 68802-2078
(308) 389-7289 cs@chiefind.com


This drawing has been electronically signed and sealed by Dustin Cole, PE on 9/8/2023 using a Digital Signature. Printed copies of this document are not considered signed and sealed and the signature must be verified on any electronic copies.

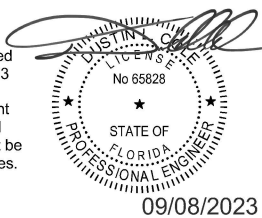


Drawing	CS/AP Wall Panel Installation Details			
Buyer	----			
Customer	----			
Project Name	----			
CHIEF BUILDINGS	DRAWN	CHECK	ORDER NO.	D7
	CMS	xxx	----	
	09/07/23	xx/xx/xx	----	

AP WALL PANEL - The details shown below are typical Chief metal building details. Not all details may apply. Specific details for additional features will be provided for complete installation instructions.


- NOTES:
- The structural system must be plumb and square prior to panel installation.
 - Care must be taken to insure panel modularity due to accessory locations and trim.
 - Insulation has not been shown for clarity.
 - Blanket insulation must be trimmed above the bottom of panel to prevent water from "WICKING" into the insulation.
 - Provide air gap of 1/4" min. at bottom of panel to avoid corrosion.
 - #12-14 X 1 1/4" Fastener spacing is (12" C.C.) unless otherwise noted.
 - ** #12-14 X 1-1/4", Blanket Insulation <=4" thickness
 - ** #12-14 X 2", Blanket Insulation >4" thickness
 - When possible, CHIEF recommends installing panel so that panel lap is away from prevailing weather.

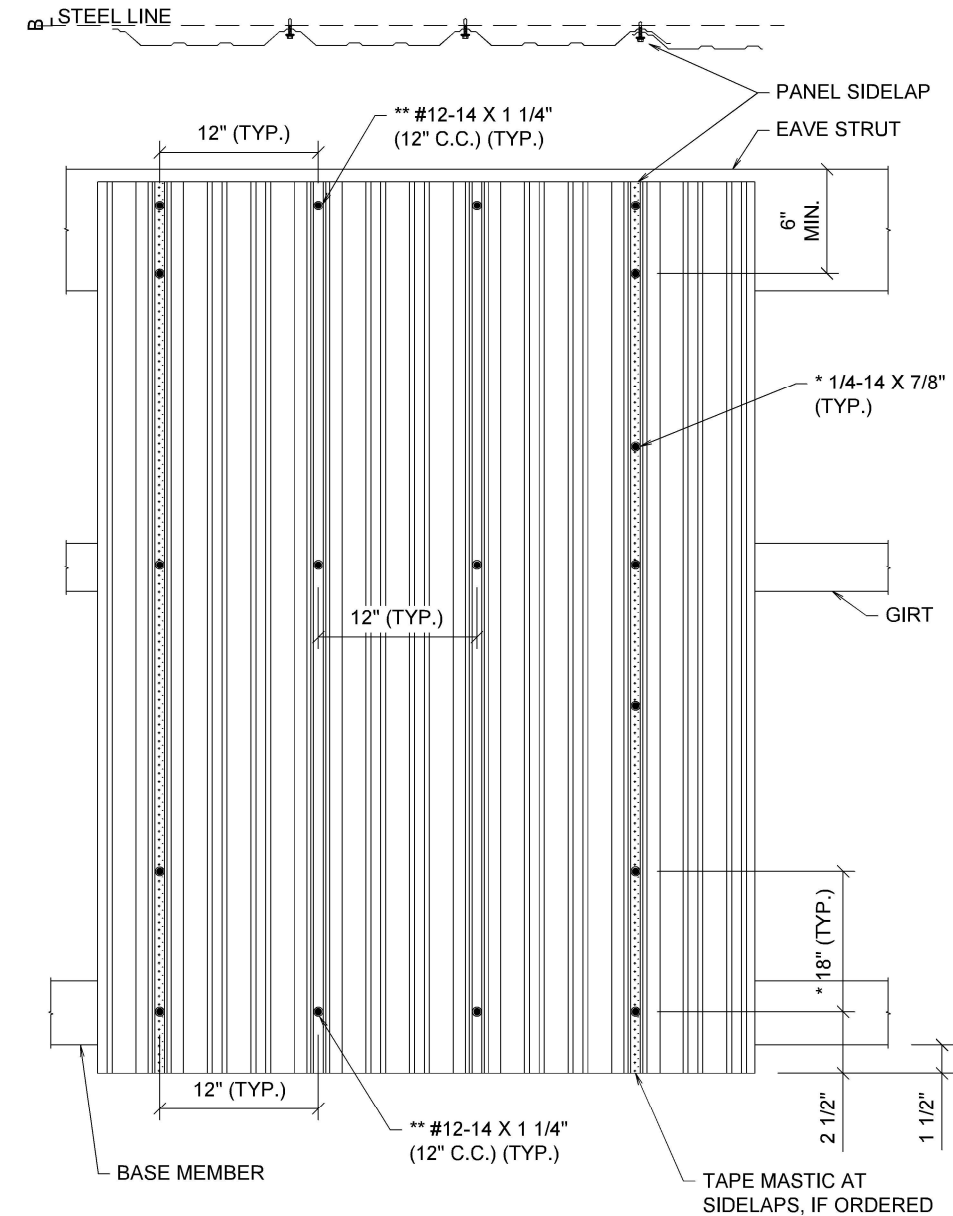


AP PANEL INSTALLATION

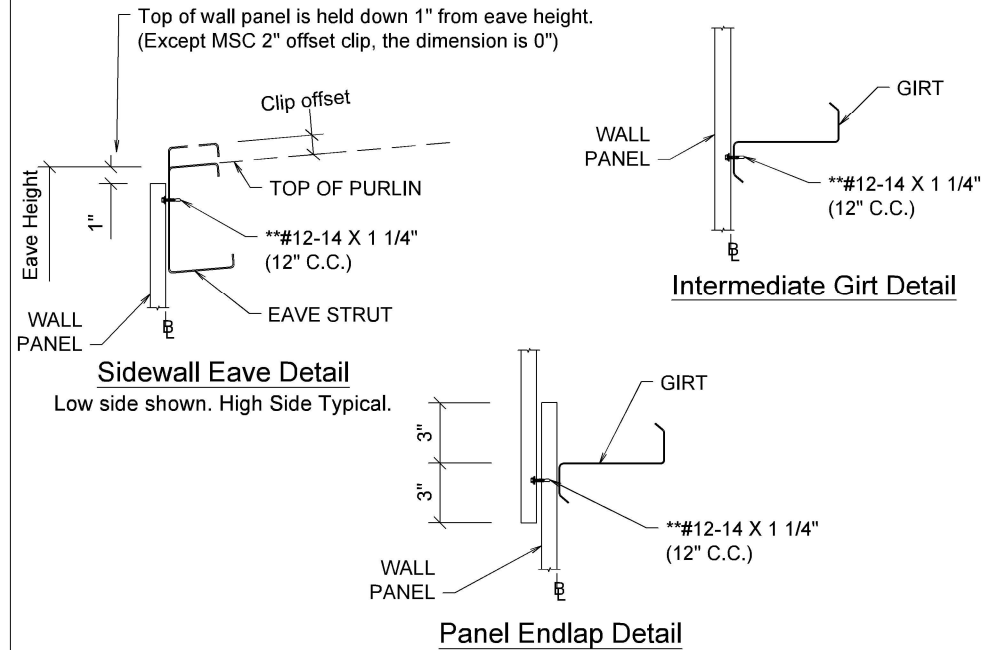


AP PANEL FASTENER INSTALLATION

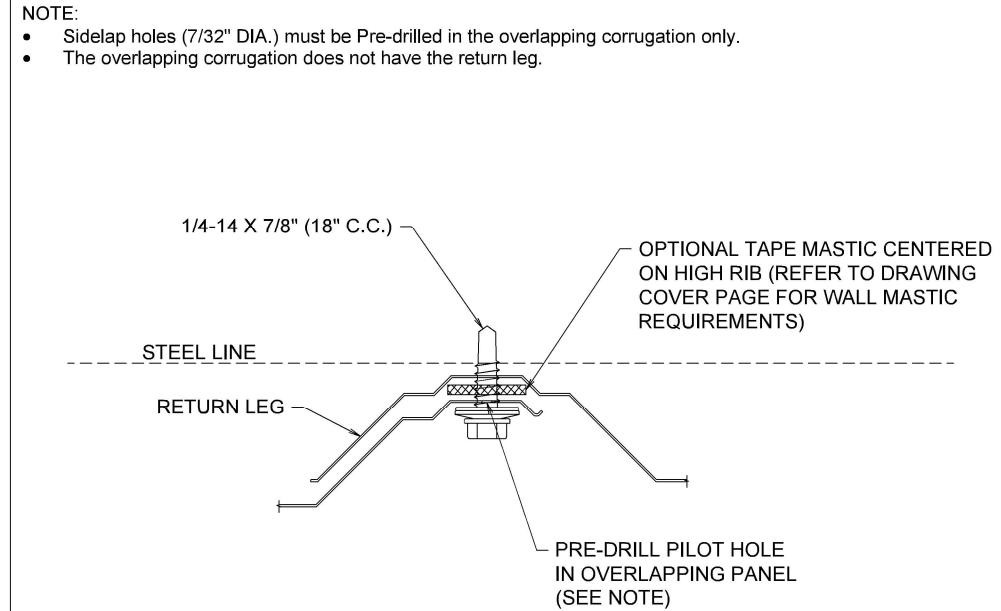

AP PANEL SIDE LAPS

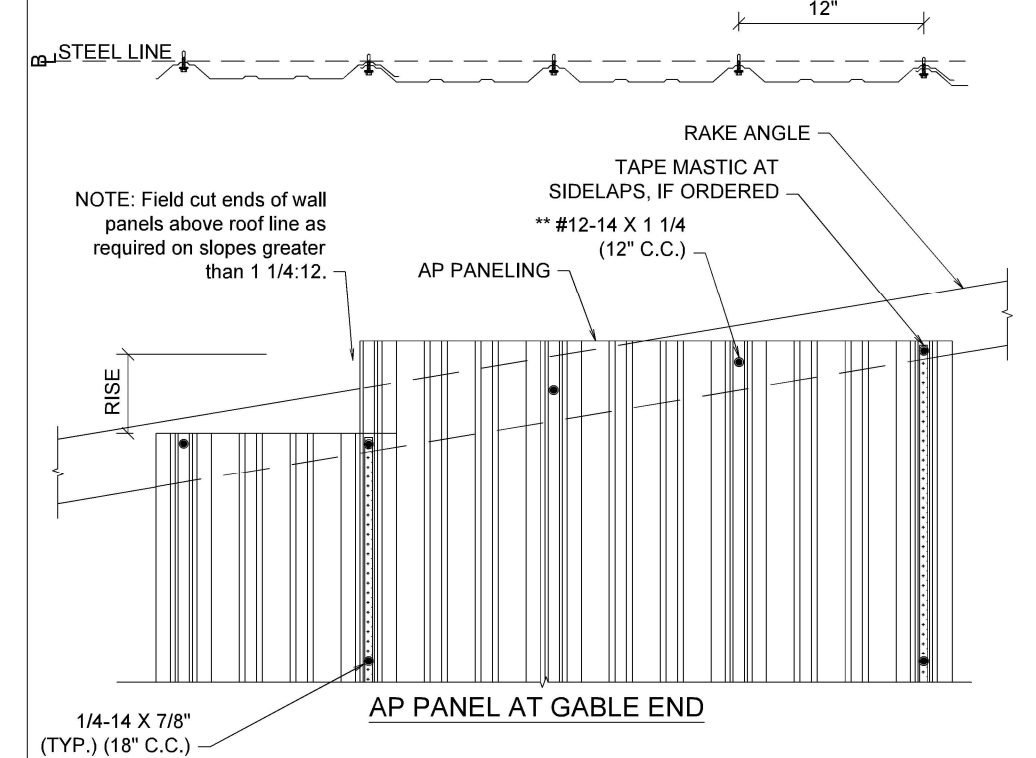

AP PANEL STANDARD CORNER CONDITION

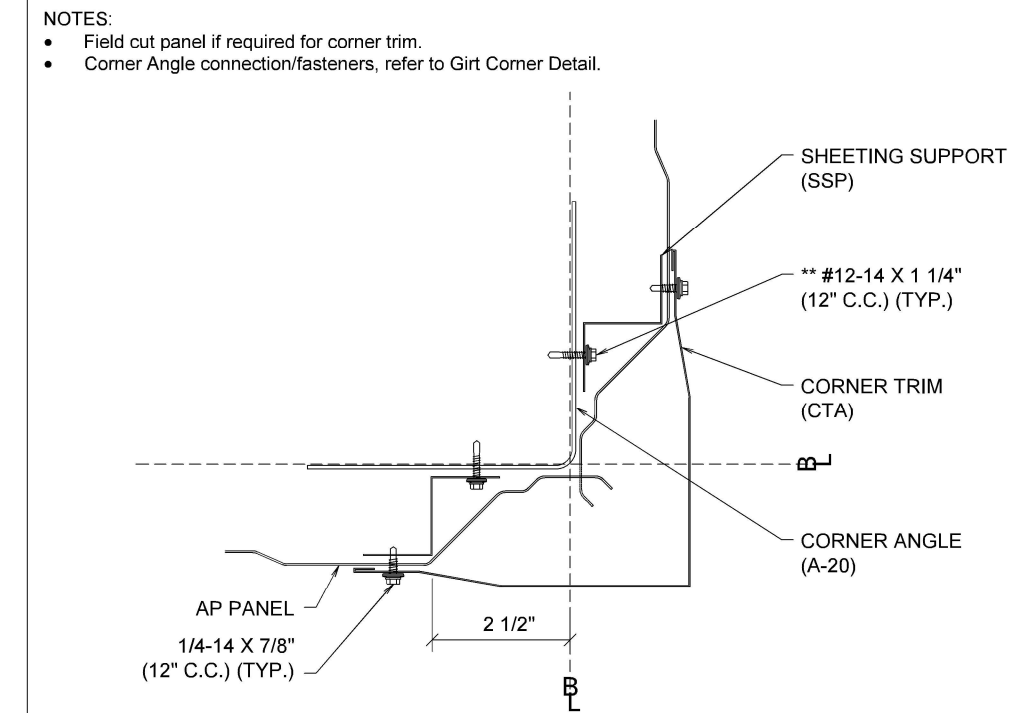


REVISIONS	
4	
3	
2	
1	

Notwithstanding the adjacent seal, neither the Engineer named nor Chief Buildings is acting as The Engineer of Record. The Engineer named and Chief Buildings responsibility is limited to the structural performance of the pre-engineered components designed by Chief Buildings.


Chief Buildings
PO Box 2078, Grand Island, NE 68802-2078
(308) 389-7289 cs@chiefind.com

This drawing has been electronically signed and sealed by Dustin Cole, PE on 9/8/2023 using a Digital Signature. Printed copies of this document are not considered signed and sealed and the signature must be verified on any electronic copies.

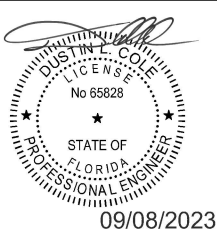

Drawing	CS/AP Wall Panel Installation Details			
Buyer	----			
Customer	----			
Project Name	----			
CHIEF BUILDINGS	DRAWN	CHECK	ORDER NO.	D8
	CMS	xxx	----	
	09/07/23	xx/xx/xx	----	

- Reference notes:
- Use 1/8" x 3/8" Blind Rivets 10'-0" C.C. to attach Base Trim to Base Member.
 - Drill Ø1/8" hole for 1/8" x 3/8" Blind Rivets.
 - Provide air gap of 1/4" min. at bottom of panel to avoid corrosion.

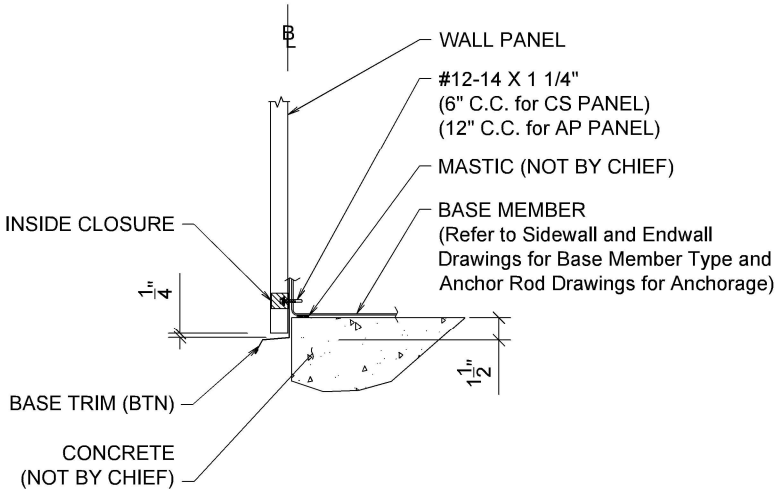

BASE TRIM (BTN)
FINISH FLOOR


REVISIONS

4	
3	
2	
1	

Notwithstanding the adjacent seal, neither the Engineer named nor Chief Buildings is acting as The Engineer of Record. The Engineer named and Chief Buildings responsibility is limited to the structural performance of the pre-engineered components designed by Chief Buildings.

This drawing has been electronically signed and sealed by Dustin Cole, PE on 9/8/2023 using a Digital Signature. Printed copies of this document are not considered signed and sealed and the signature must be verified on any electronic copies.

Chief Buildings
PO Box 2078, Grand Island, NE 68802-2078
(308) 389-7289 cs@chiefind.com

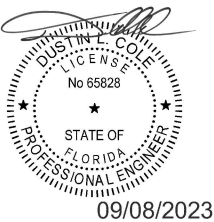

Drawing	CS/AP Wall Panel Installation Details			
Buyer	----			
Customer	----			
Project Name	----			
CHIEF BUILDINGS	DRAWN	CHECK	ORDER NO.	D9 ----
	CMS	xxx	----	
	09/07/23	xx/xx/xx	----	