


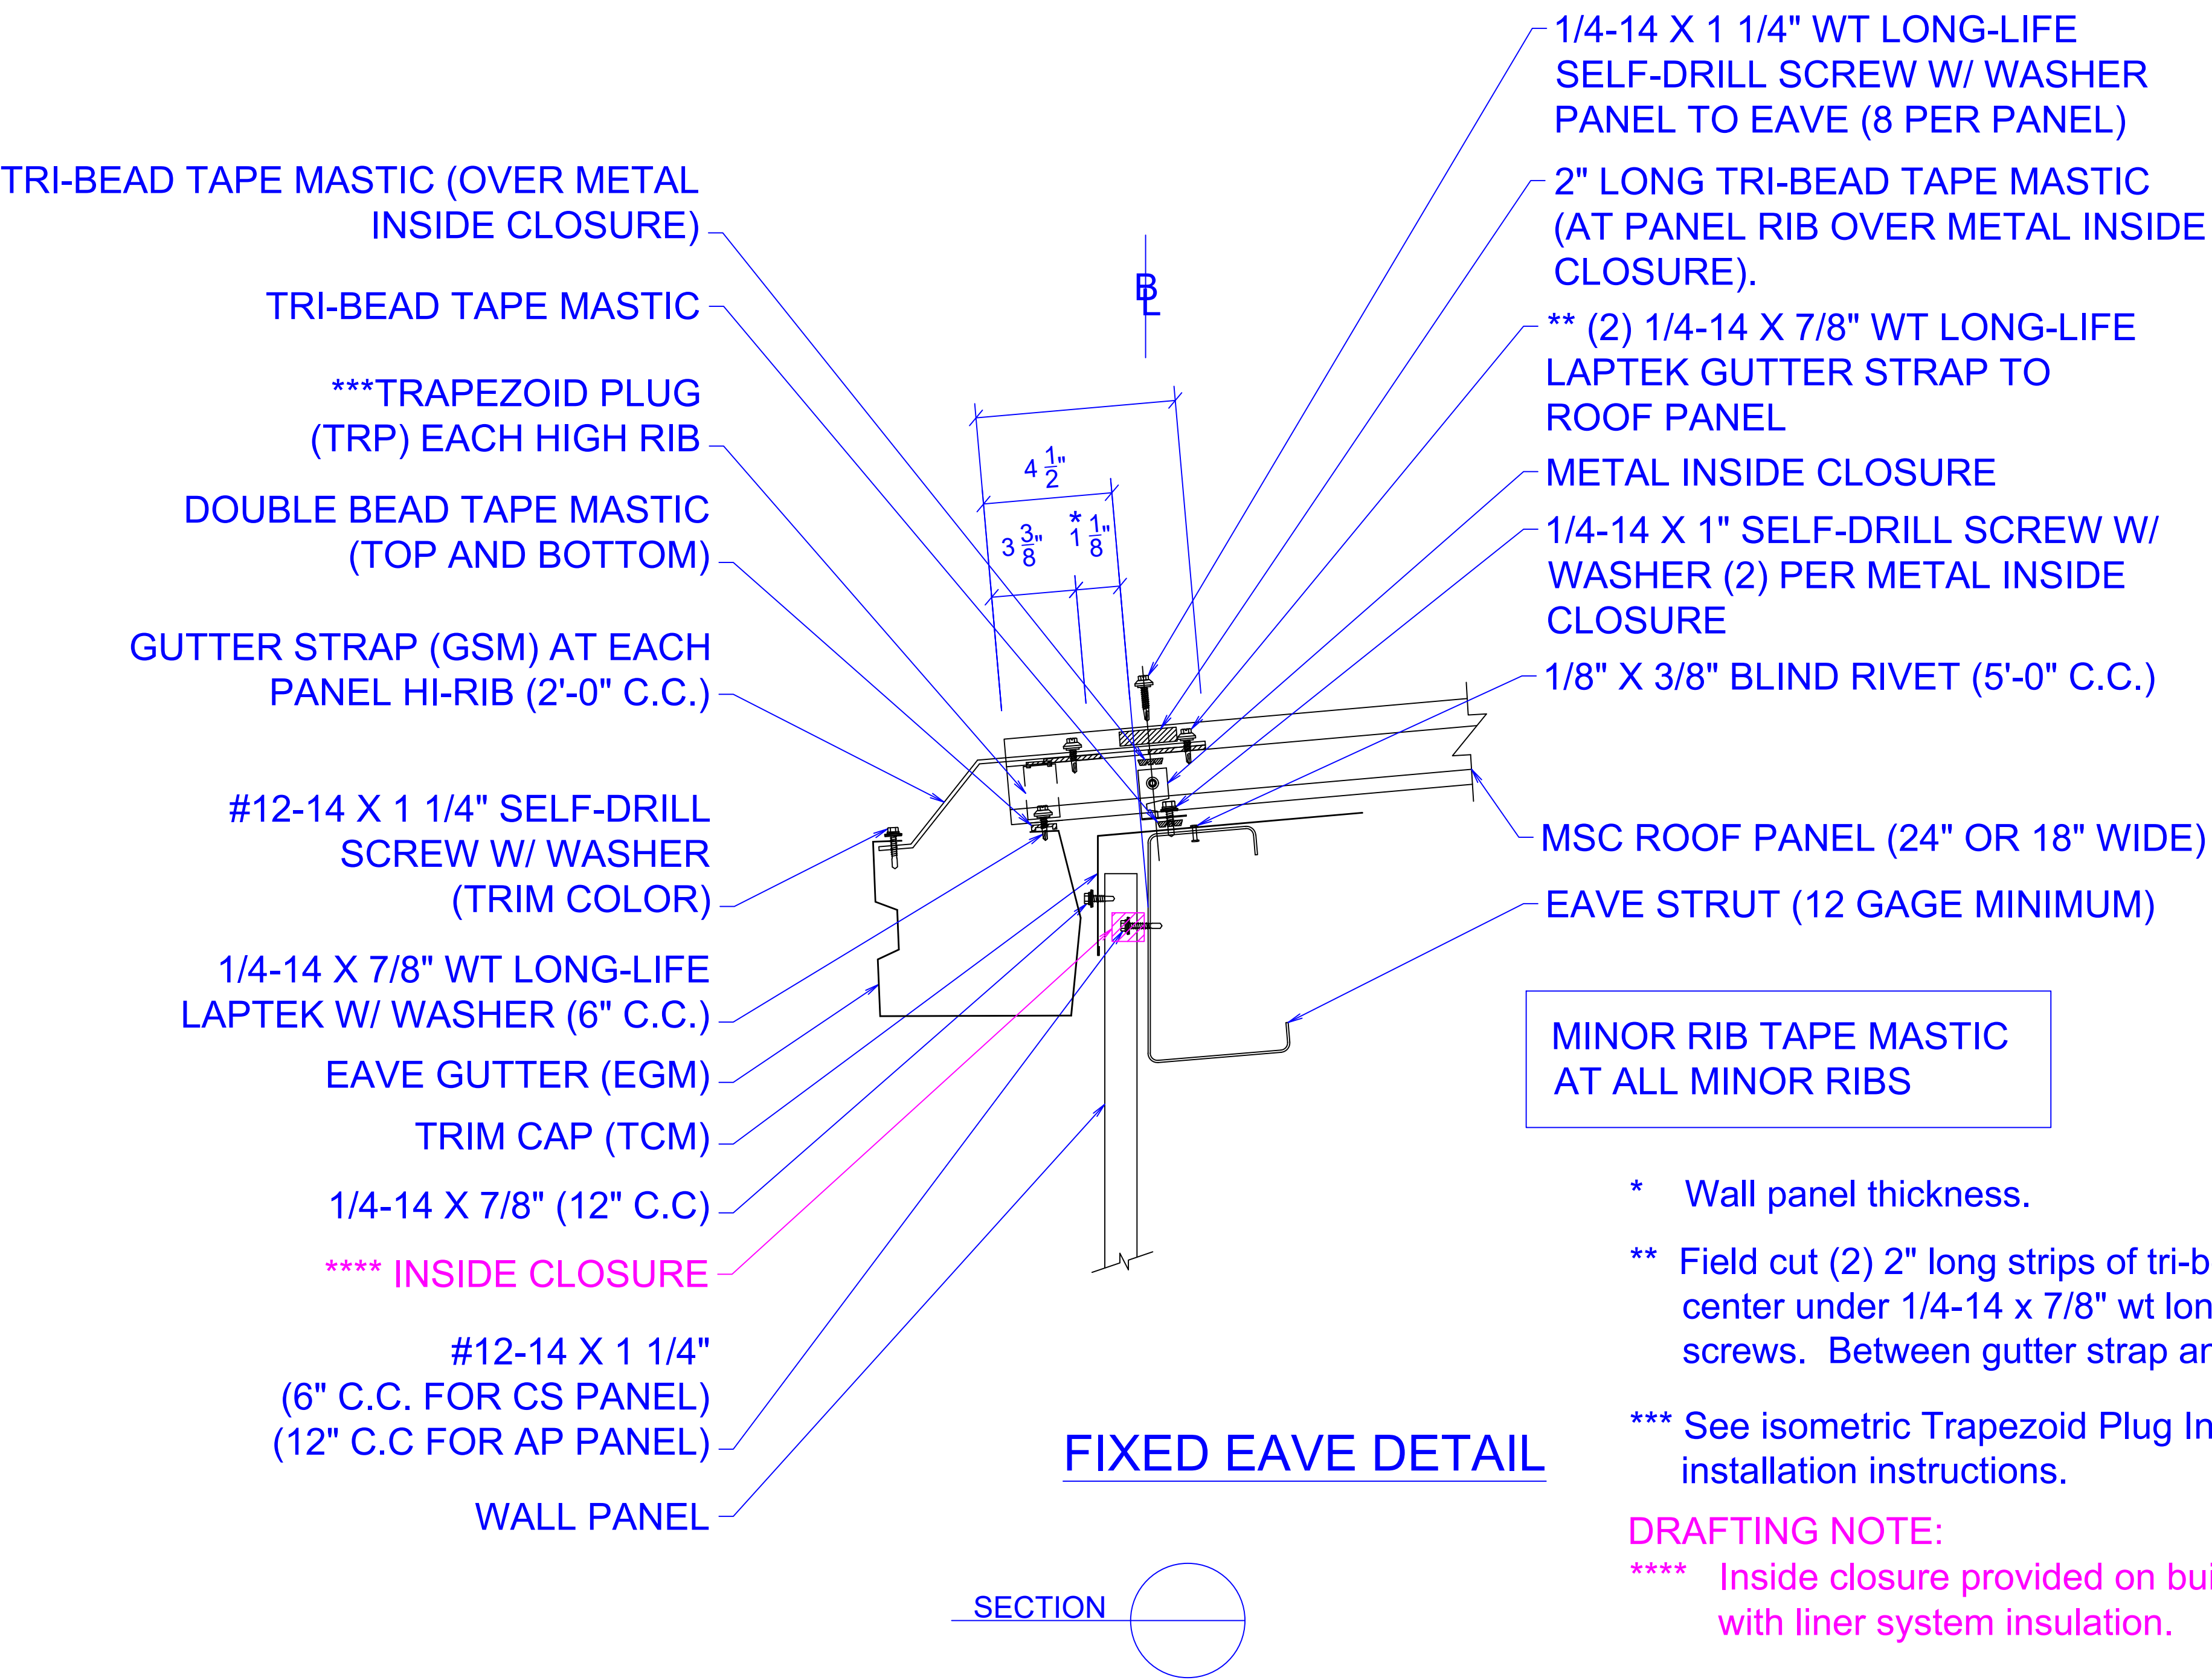

INSTALLATION NOTE:



1. Apply tri-bead tape mastic continuous over substrate.
2. Attach metal inside closure w/ 1/4-14 x 1" self-drill screw w/ washer.
3. Apply a 9" long piece of tri-bead tape mastic up and over the metal inside closure.
4. Apply a 2" long piece of tri-bead tape mastic in vertical leg of the panel seam.
5. If the panels have minor ribs, apply minor rib tape mastic between panel and eave gutter.
6. Attach panel w/ 1/4-14 x 1 1/4" WT long life self-drill screw w/ washer, (6) in the flat of the panel and one each side into the metal inside closure, (8 total).

- * Wall panel thickness.
- ** Field cut (2) 2" long strips of tri-bead tape mastic & center under 1/4-14 x 7/8" wt long-life self-drilling screws. Between gutter strap and roof panel.
- *** See isometric Trapezoid Plug Installation detail for installation instructions.

DRAFTING NOTE:



**** Inside closure provided on buildings with liner system insulation.

		REVISIONS		Notwithstanding the adjacent seal, neither the Engineer named nor Chief Buildings is acting as The Engineer of Record. The Engineer named and Chief Buildings responsibility is limited to the structural performance of the pre-engineered components designed by Chief Buildings. Chief Buildings 1821 S North Rd, Grand Island, NE 68803 (308) 389-7289 cs@chiefind.com	Drawing		DRAWINGS			
		4			Buyer		----			
		3			End Owner		----			
		2			Jobsite Address		----			
		1			Project Name		----			
RELEASED	04/23/26				DRAWN	CHECK	ORDER NO.		EGA	
SUPERSEDES	07/21/25				----	xxx	----			
					----	xx/xx/xx				

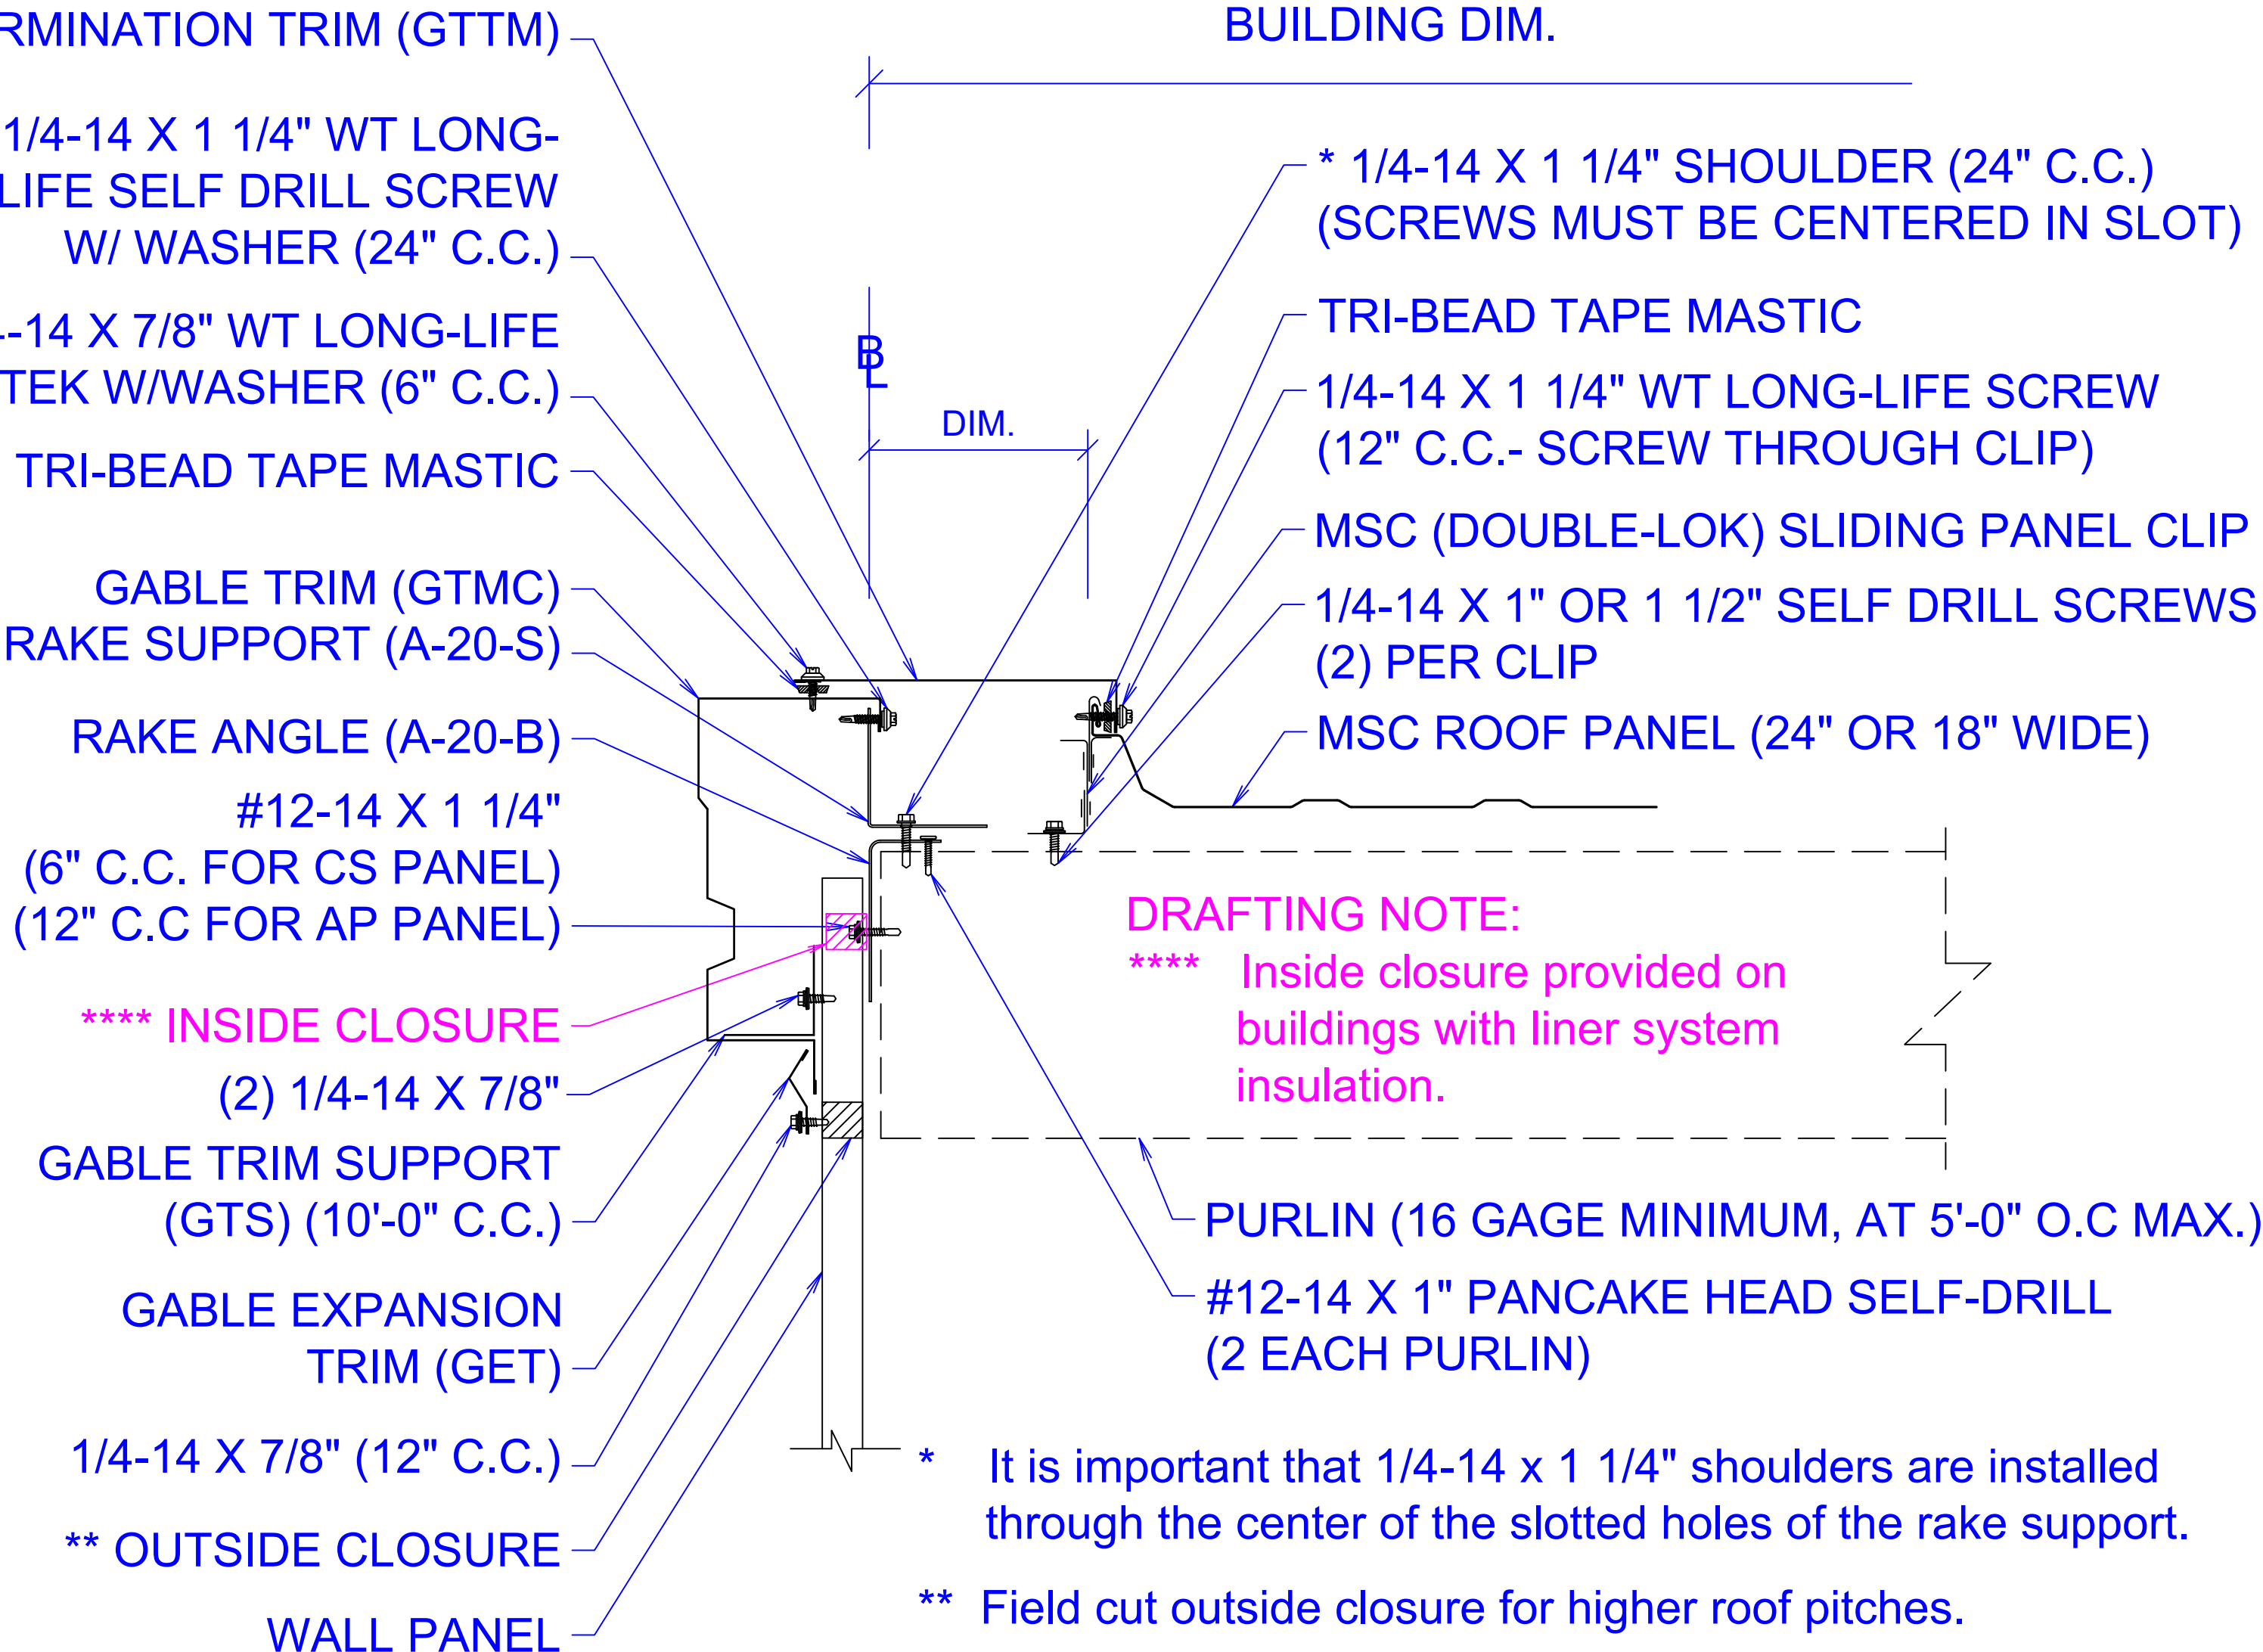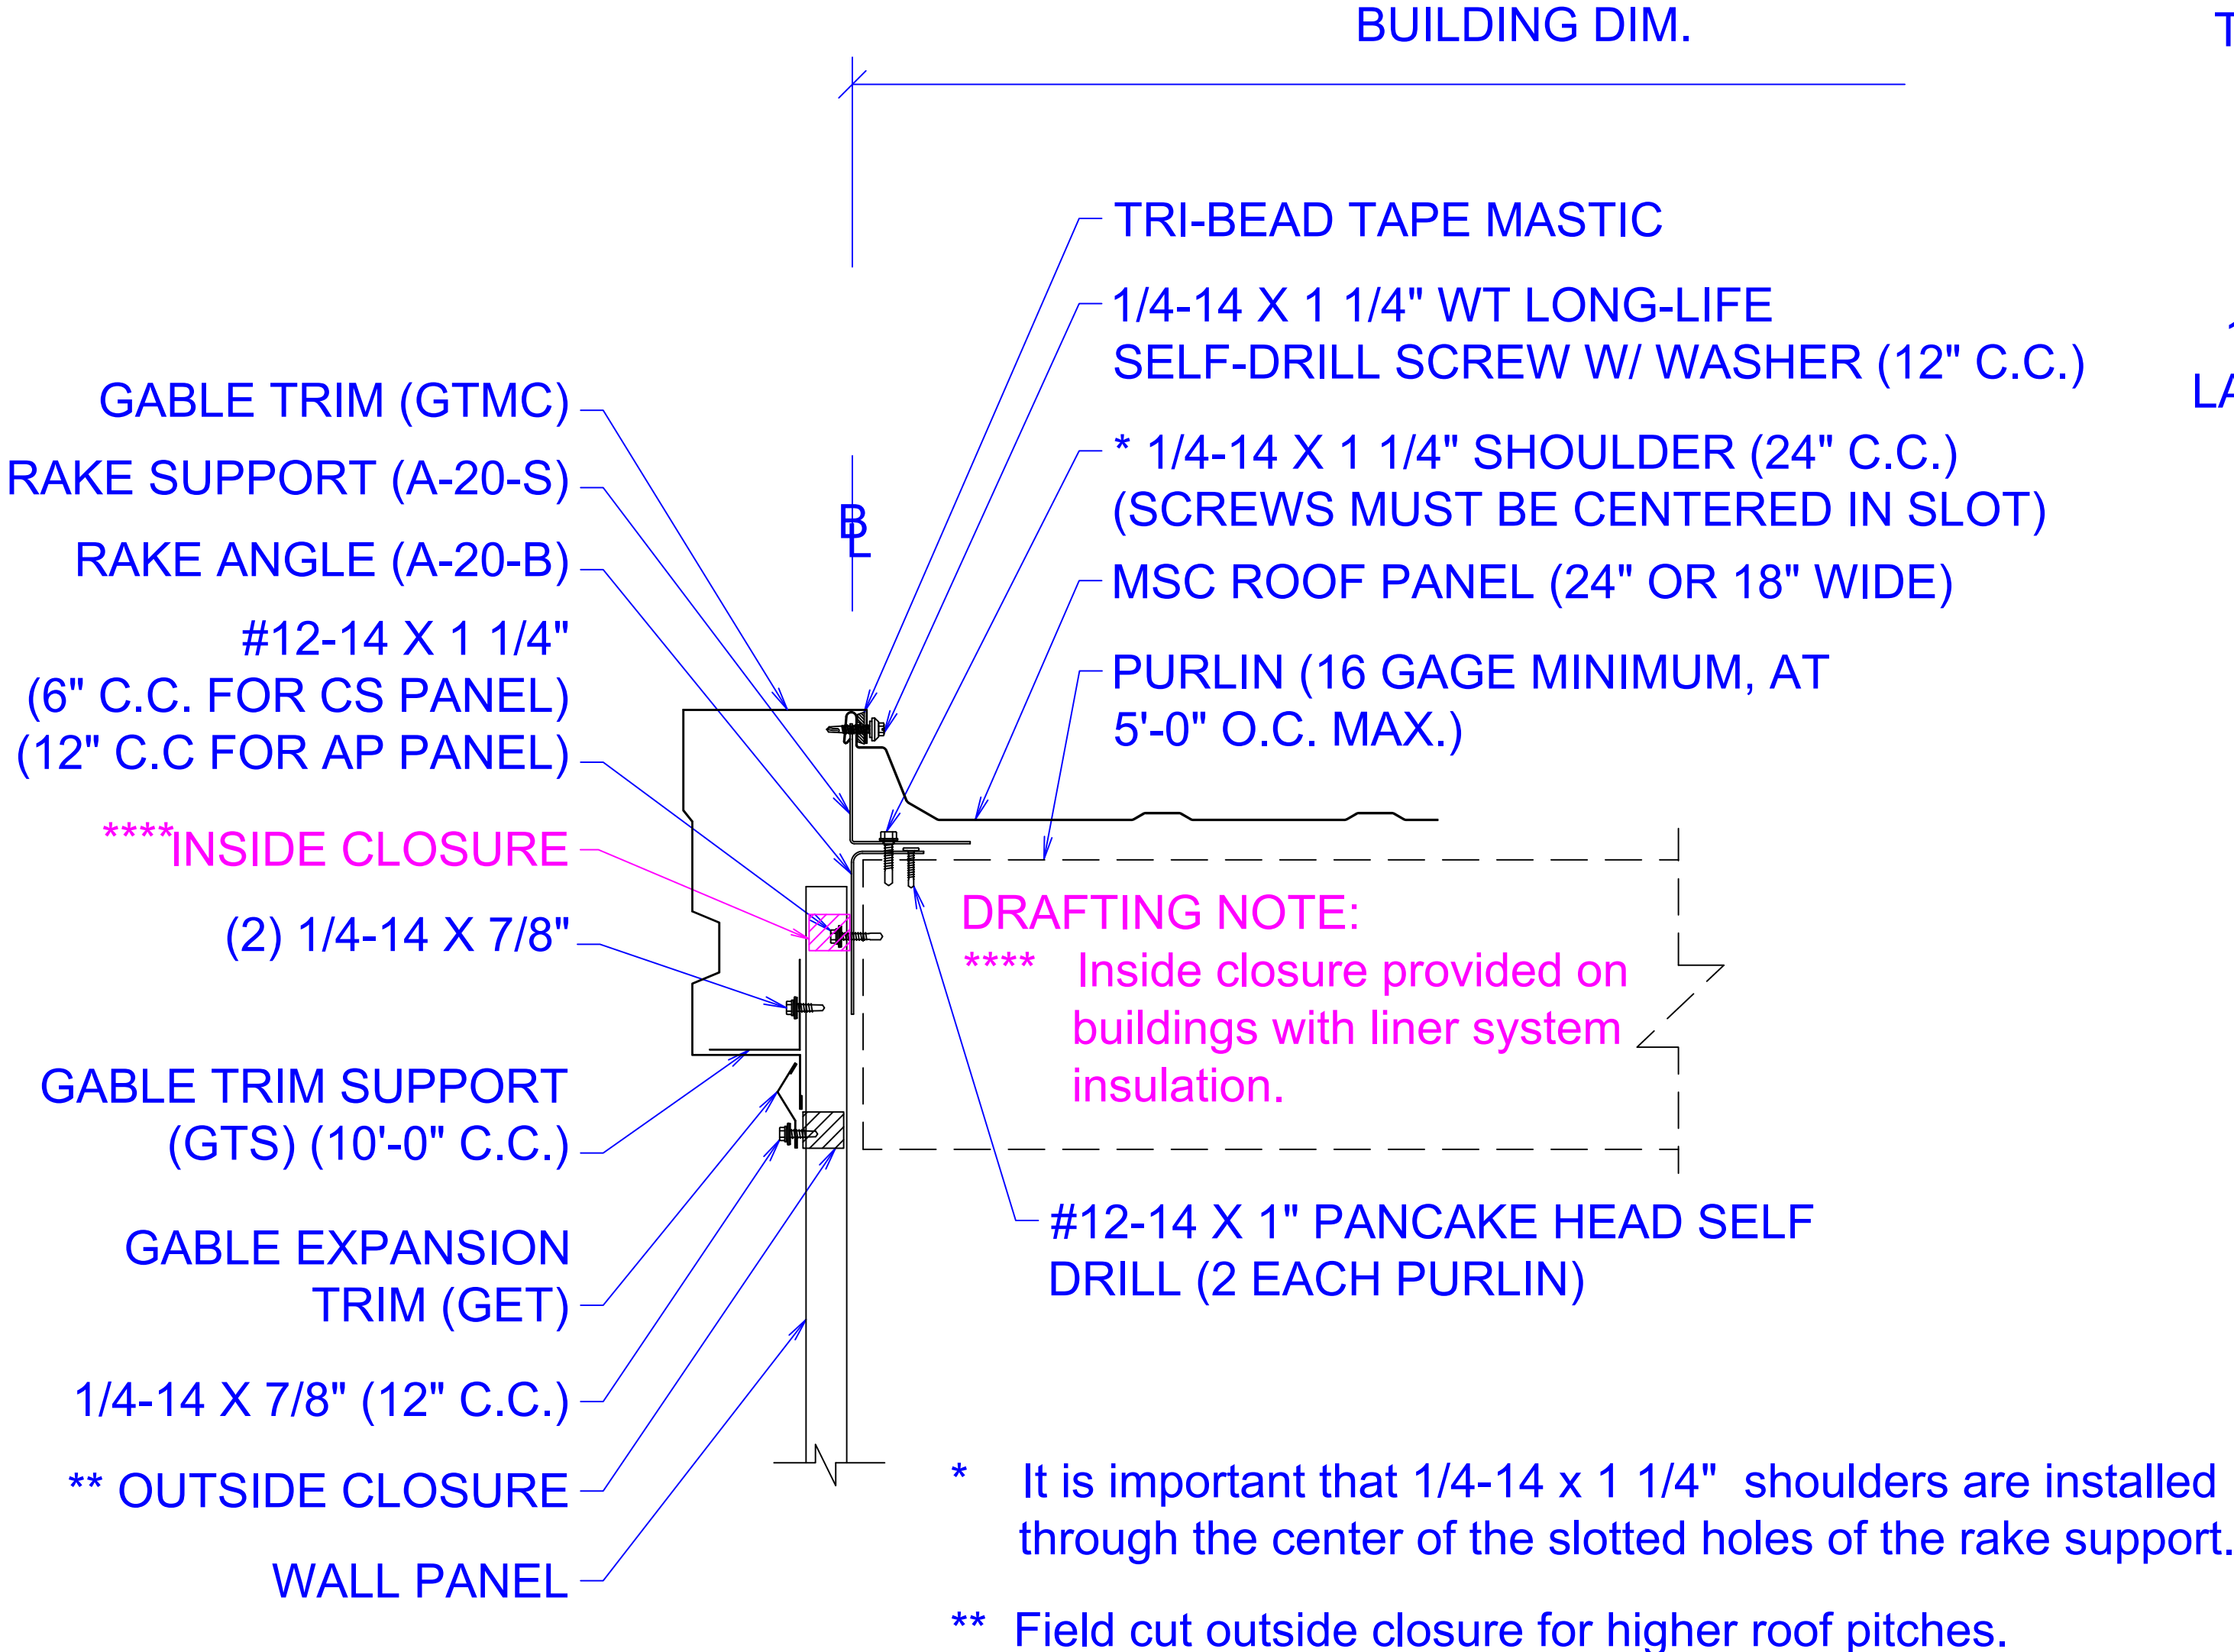


MSC ROOF WITH CS OR AP WALLS AND GABLE TRIM (LEAD END)

MSC ROOF WITH CS OR AP WALLS AND GABLE TRIM (TAIL END)

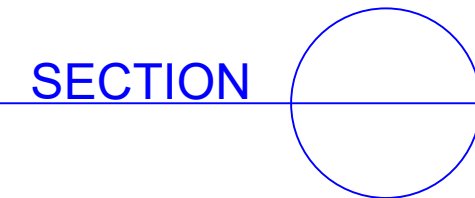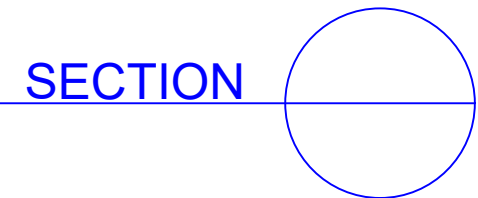


REVISIONS		Notwithstanding the adjacent seal, neither the Engineer named nor Chief Buildings is acting as The Engineer of Record. The Engineer named and Chief Buildings responsibility is limited to the structural performance of the pre-engineered components designed by Chief Buildings. Chief Buildings 1821 S North Rd, Grand Island, NE 68803 (308) 389-7289 cs@chiefind.com
4		
3		
2		
1		
RELEASED	04/23/26	
SUPERSEDES	07/21/25	

Drawing	DRAWINGS			
Buyer	----			
End Owner	----			
Jobsite Address	----			
Project Name	----			
	DRAWN	CHECK	ORDER NO.	GT
	----	xxx	----	

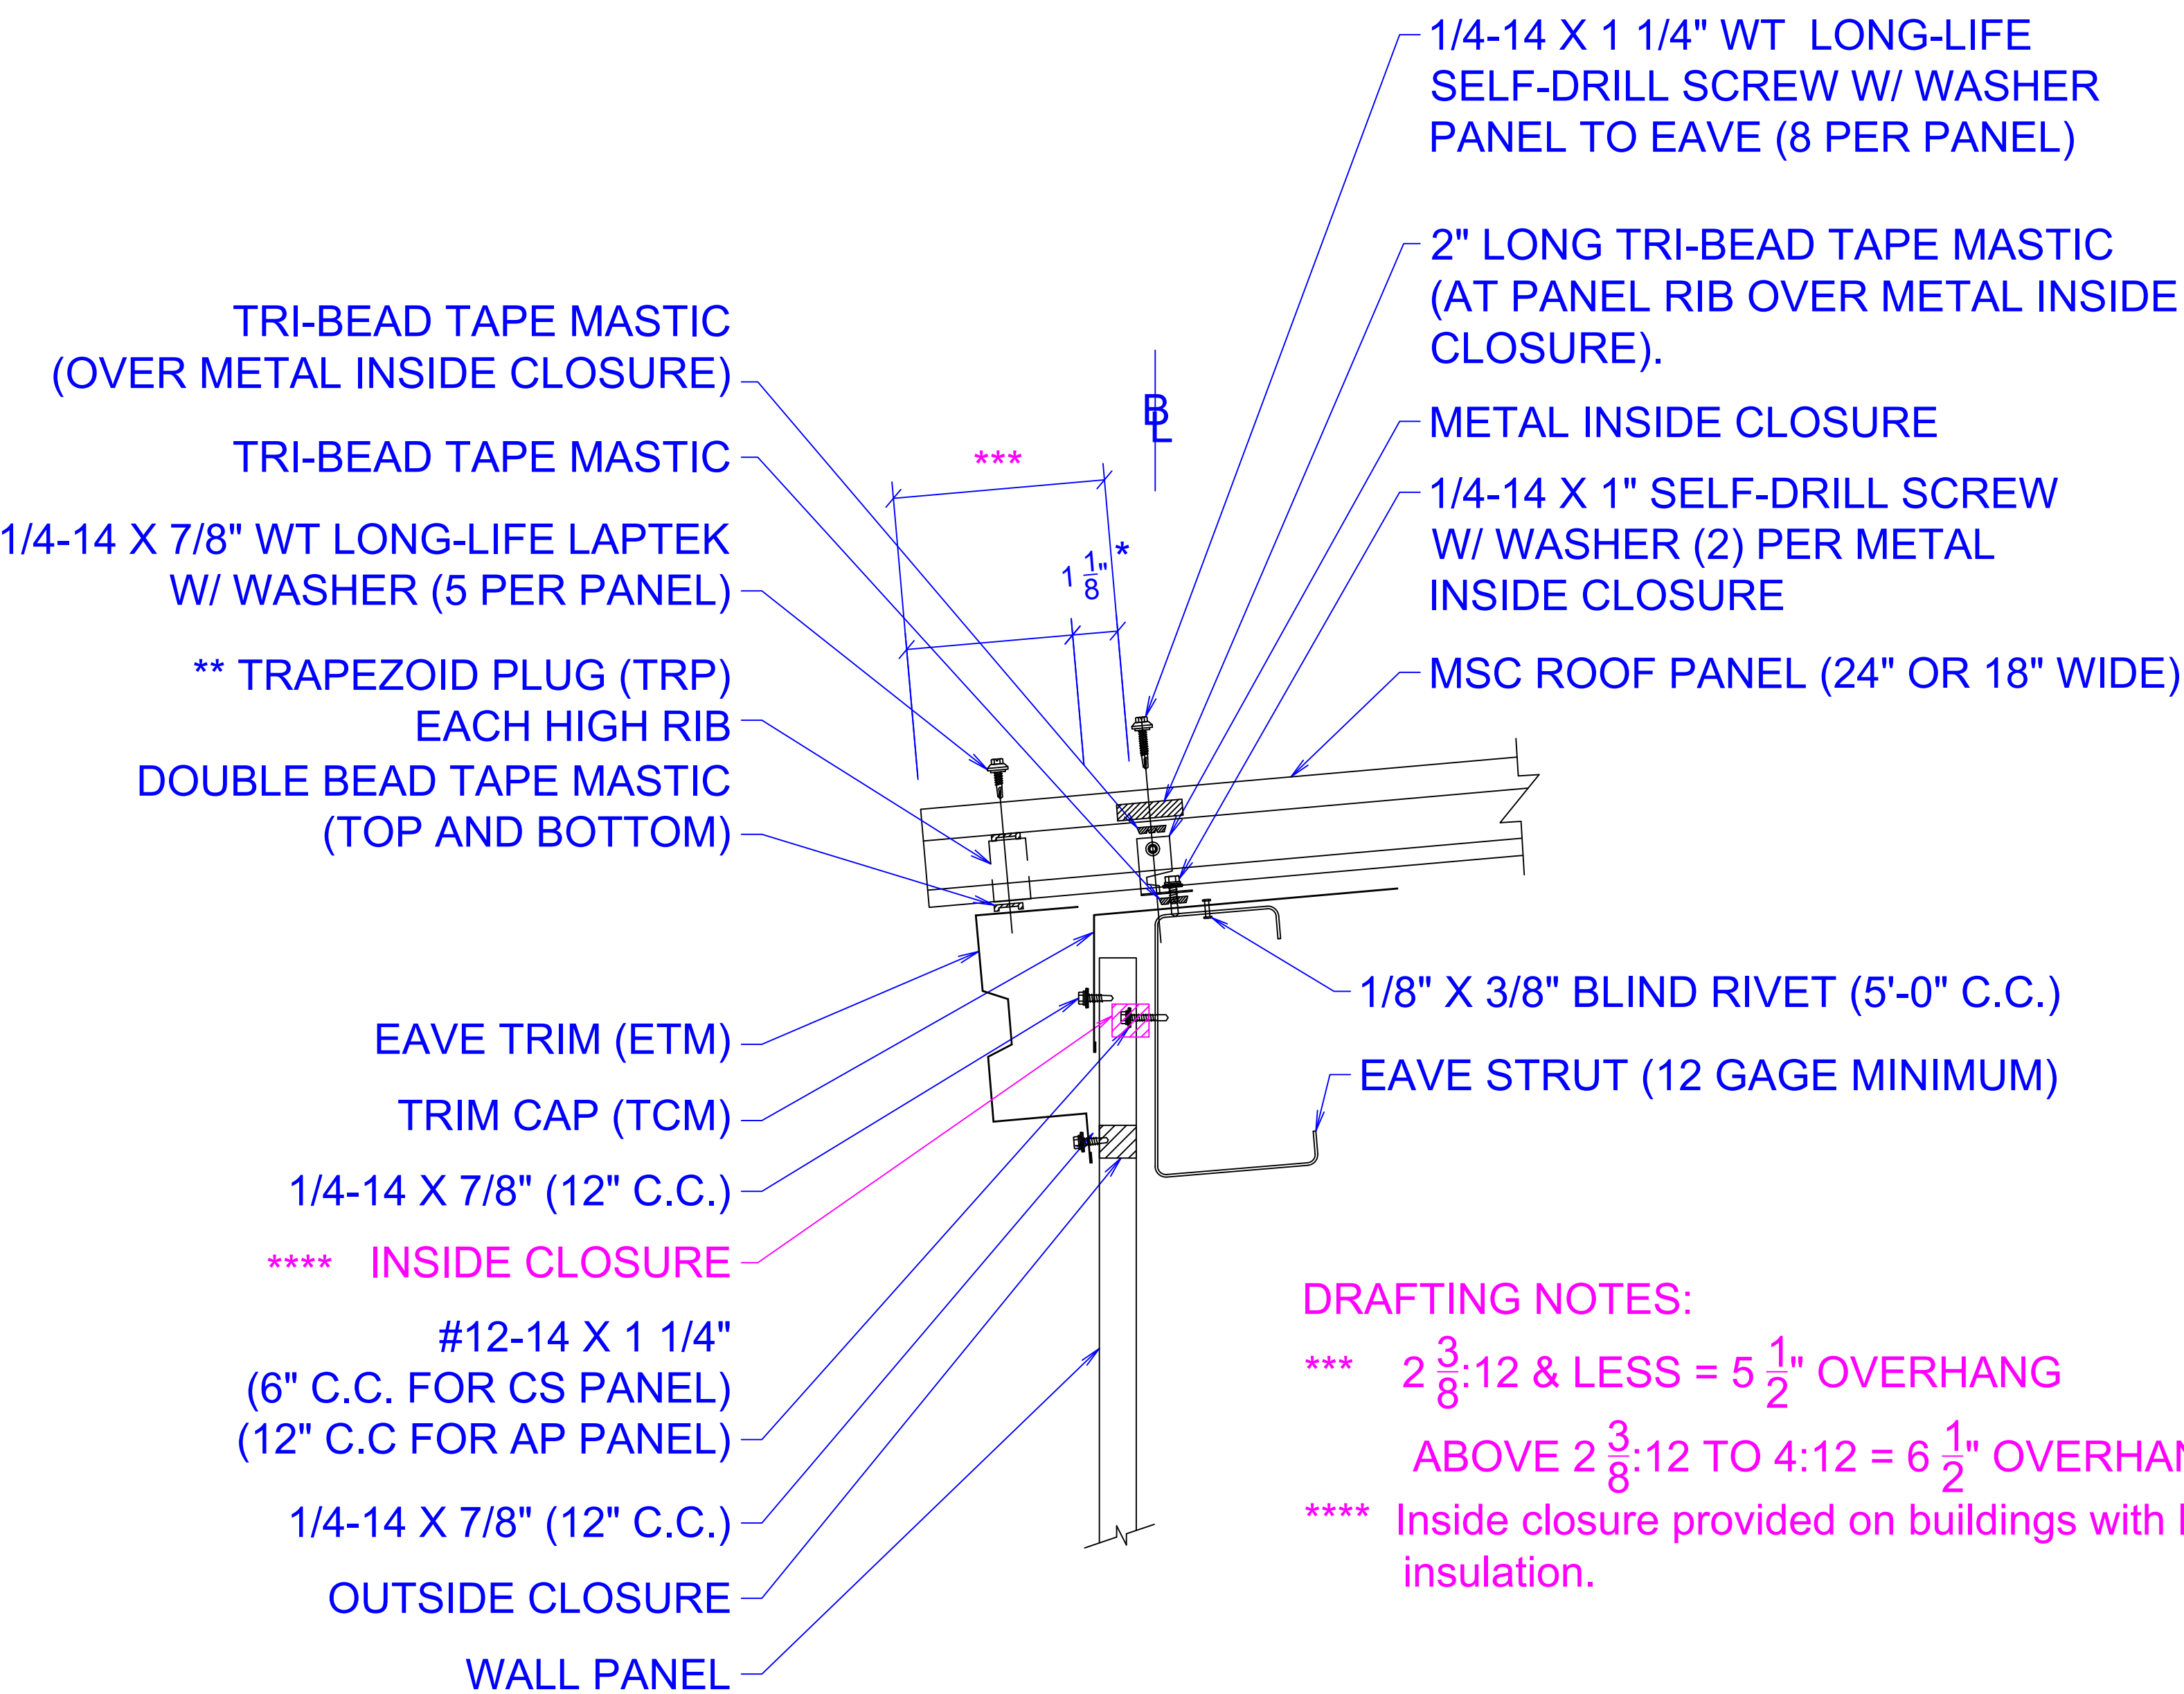

FIXED EAVE DETAIL

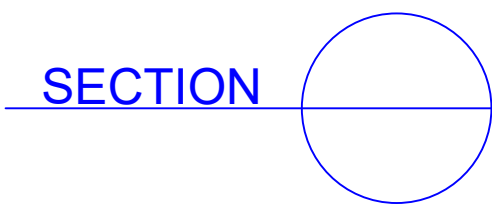

INSTALLATION NOTE:

- 1. Apply tri-bead tape mastic continuous over substrate.
- 2. Attach metal inside closure w/ 1/4-14 x 1" self-drill screw w/ washer.
- 3. Apply a 9" long piece of tri-bead tape mastic up and over the metal inside closure.
- 4. Apply a 2" long piece of tri-bead tape mastic in vertical leg of the panel seam.
- 5. If the panels have minor ribs, apply minor rib tape mastic between panel and eave gutter.
- 6. Attach panel w/ 1/4-14 x 1 1/4" WT long life self-drill screw w/ washer, (6) in the flat of the panel and one each side into the metal inside closure, (8 total).

MINOR RIB TAPE MASTIC
AT ALL MINOR RIBS

- * Wall panel thickness
- ** See isometric Trapezoid Plug Installation detail for installation instructions.


DRAFTING NOTES:
*** $2 \frac{3}{8}:12$ & LESS = $5 \frac{1}{2}$ " OVERHANG
ABOVE $2 \frac{3}{8}:12$ TO $4:12$ = $6 \frac{1}{2}$ " OVERHANG
**** Inside closure provided on buildings with liner system insulation.

RELEASED	04/23/26
SUPERSEDES	07/21/25


REVISIONS	
4	
3	
2	
1	

Notwithstanding the adjacent seal, neither the Engineer named nor Chief Buildings is acting as The Engineer of Record. The Engineer named and Chief Buildings responsibility is limited to the structural performance of the pre-engineered components designed by Chief Buildings.
Chief Buildings
1821 S. North Rd., Grand Island, NE 68803
(308) 389-7289 cs@chiefind.com

Drawing	DRAWINGS			
Buyer	----			
End Owner	----			
Jobsite Address	----			
Project Name	----			
CHIEF BUILDINGS	DRAWN	CHECK	ORDER NO.	ET
	----	xxx	----	
	----	xx/xx/xx		

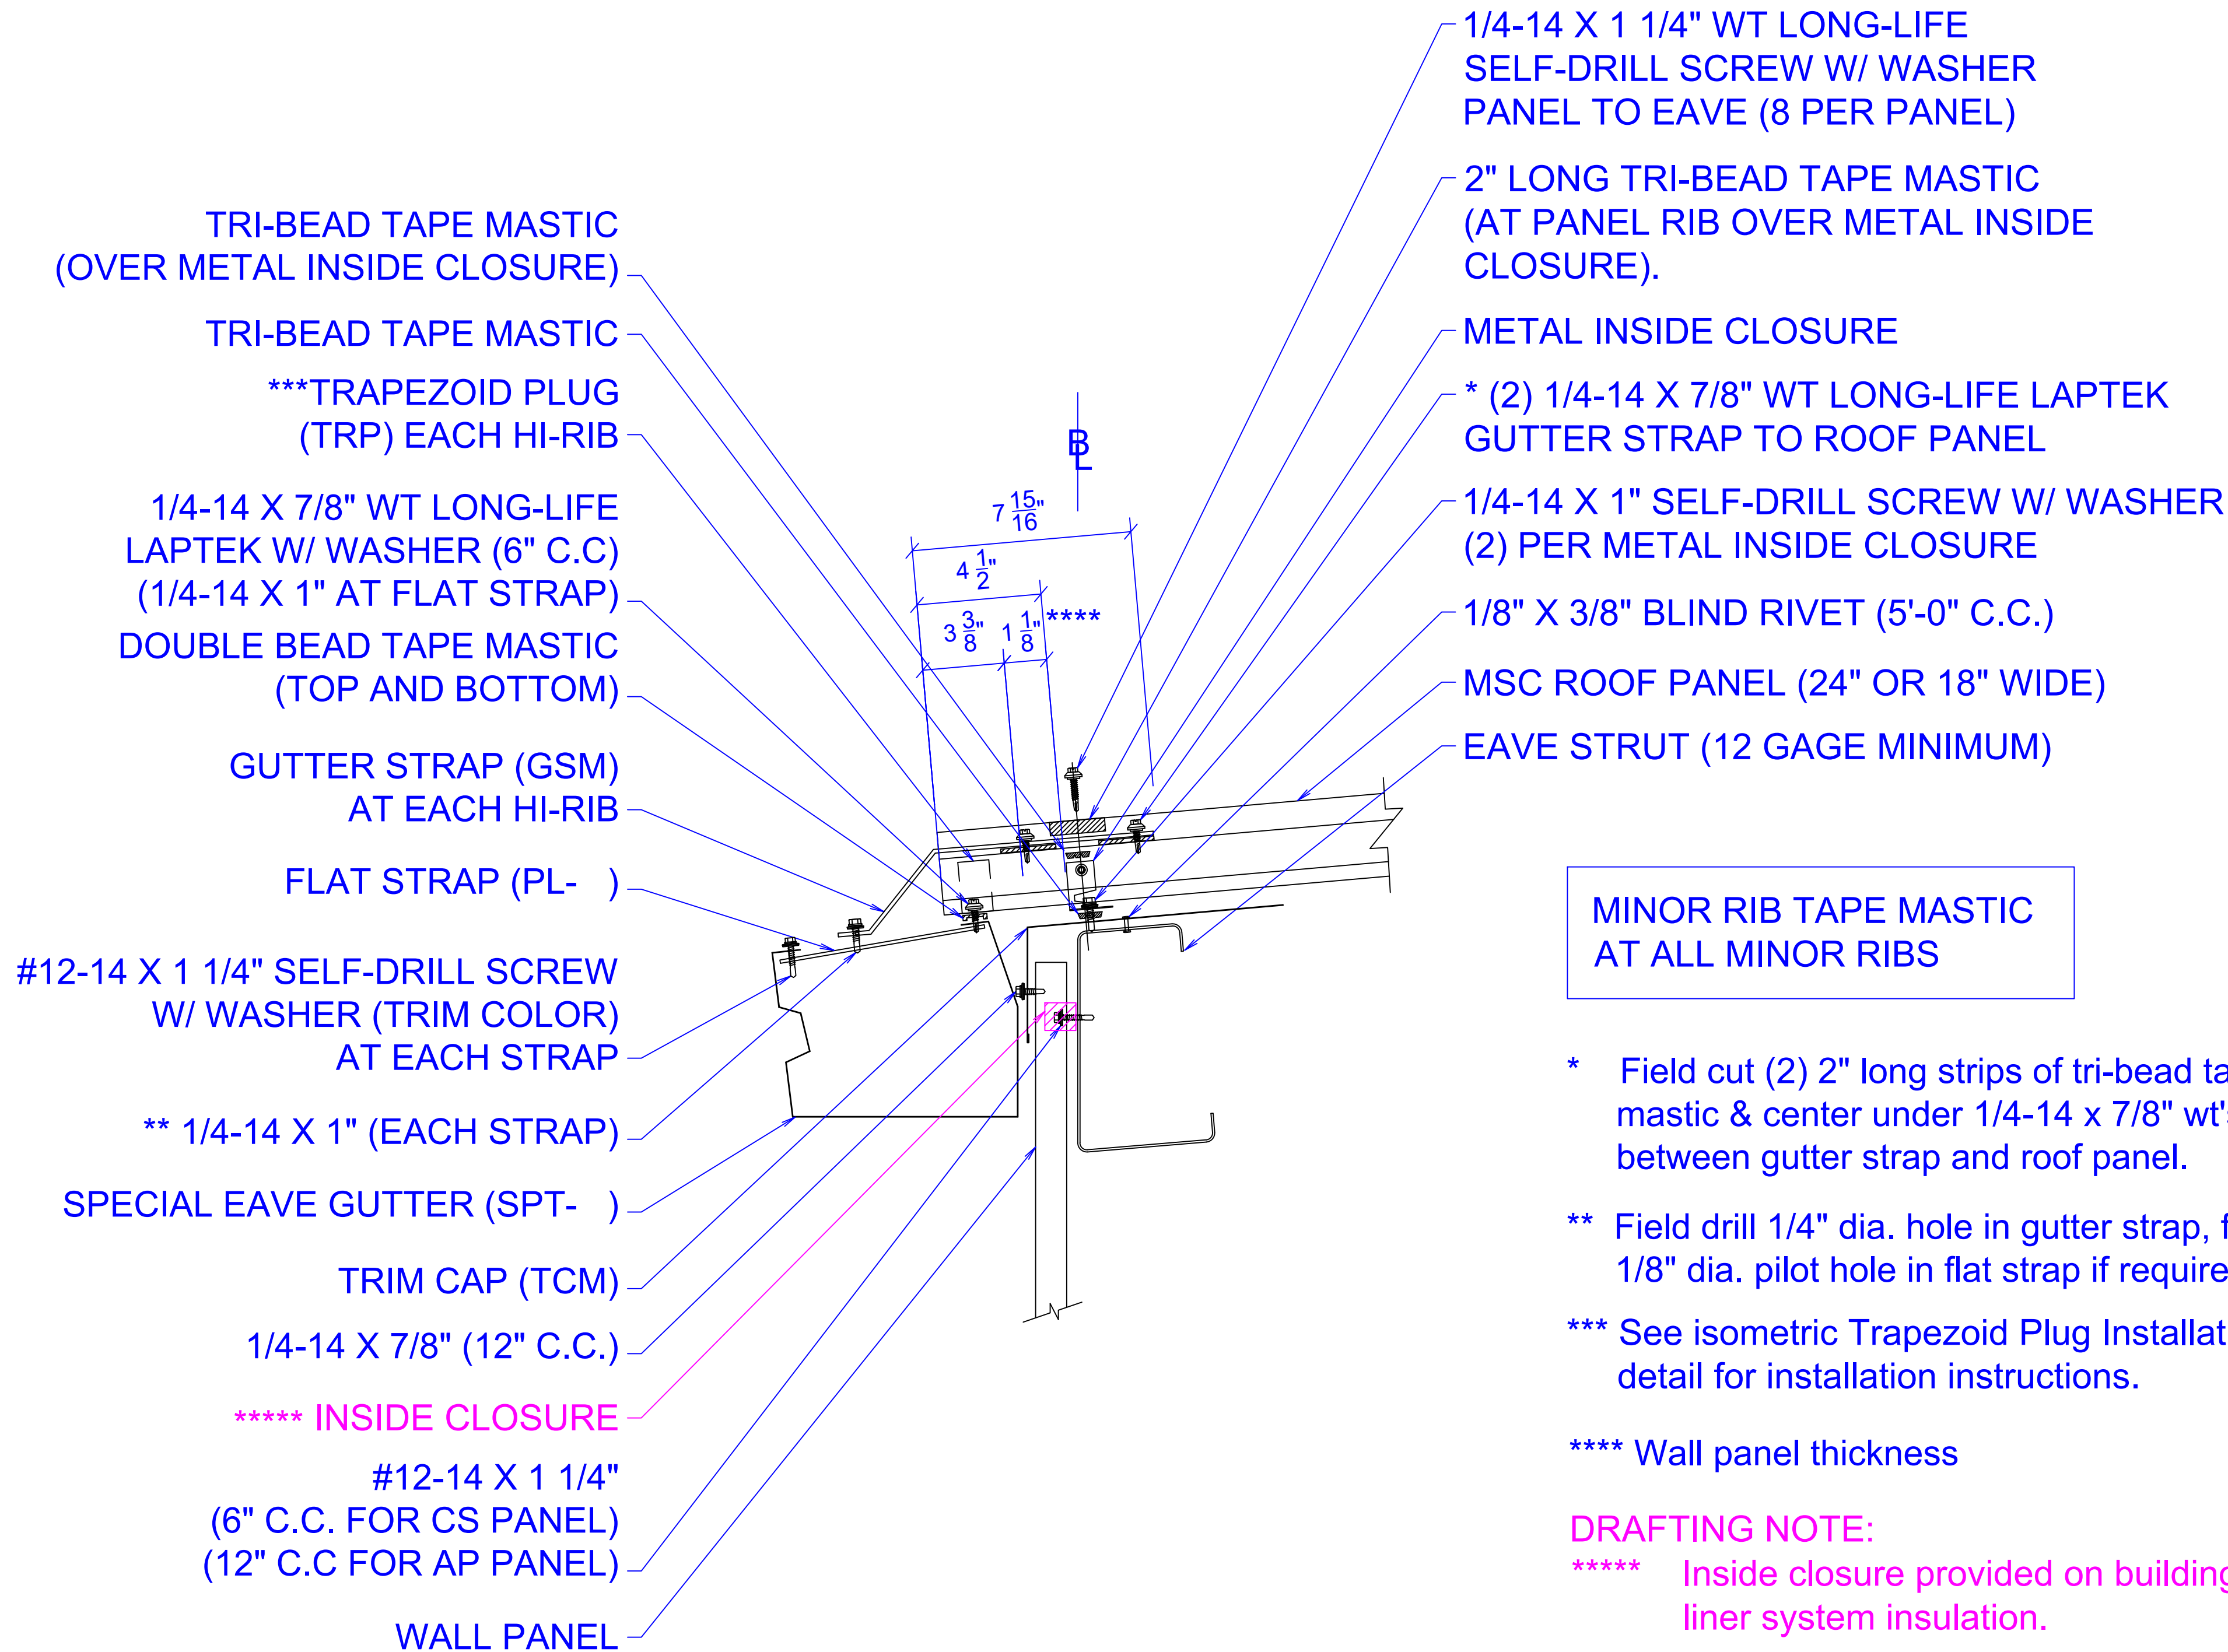

FIXED EAVE DETAIL

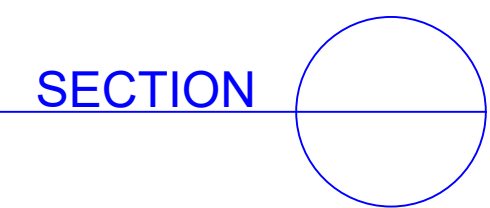

INSTALLATION NOTE:

1. Apply tri-bead tape mastic continuous over substrate.
2. Attach metal inside closure w/ 1/4-14 x 1" self-drill screw w/ washer.
3. Apply a 9" long piece of tri-bead tape mastic up and over the metal inside closure.
4. Apply a 2" long piece of tri-bead tape mastic in vertical leg of the panel seam.
5. If the panels have minor ribs, apply minor rib tape mastic between panel and eave gutter.
6. Attach panel w/ 1/4-14 x 1 1/4" WT long life self-drill screw w/ washer, (6) in the flat of the panel and one each side into the metal inside closure, (8 total).

DRAFTING NOTE:

***** Inside closure provided on buildings with liner system insulation.

RELEASED	04/23/26
SUPERSEDES	07/21/25

REVISIONS	
4	
3	
2	
1	

Notwithstanding the adjacent seal, neither the Engineer named nor Chief Buildings is acting as The Engineer of Record. The Engineer named and Chief Buildings responsibility is limited to the structural performance of the pre-engineered components designed by Chief Buildings.
Chief Buildings
1321 S North Rd, Grand Island, NE 68803
(308) 389-7289 cs@chiefind.com

Drawing	DRAWINGS			
Buyer	----			
End Owner	----			
Jobsite Address	----			
Project Name	----			
CHIEF BUILDINGS	DRAWN	CHECK	ORDER NO.	OEGA
	----	xxx	----	
	----	xx/xx/xx		