


ANCHOR DETAILS VDS HI CURTAIN WALL SYSTEM


THIS DRAWING AND THE INFORMATION THEREON
IS THE PROPERTY OF

VETROTECH SAINT-GOBAIN, N.A

ANY REPRODUCTION WITHOUT PERMISSION IS PROHIBITED.

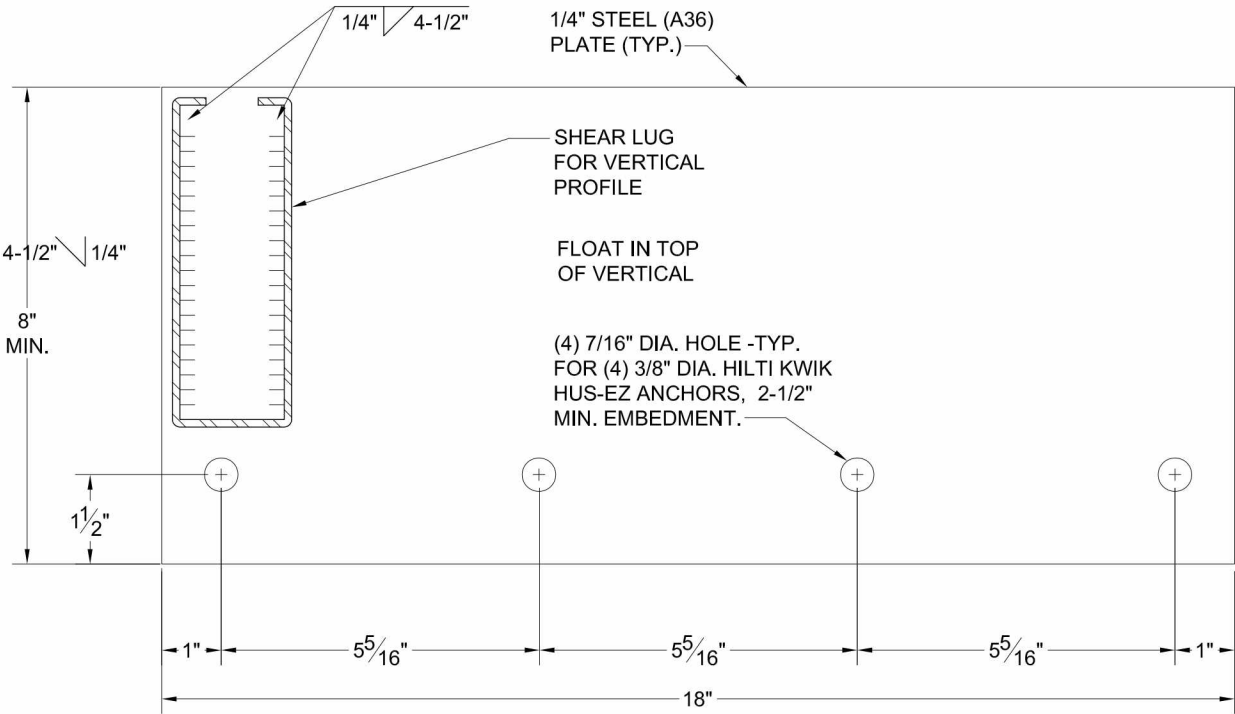


A
ANCHOR PLATE WIDE LEFT

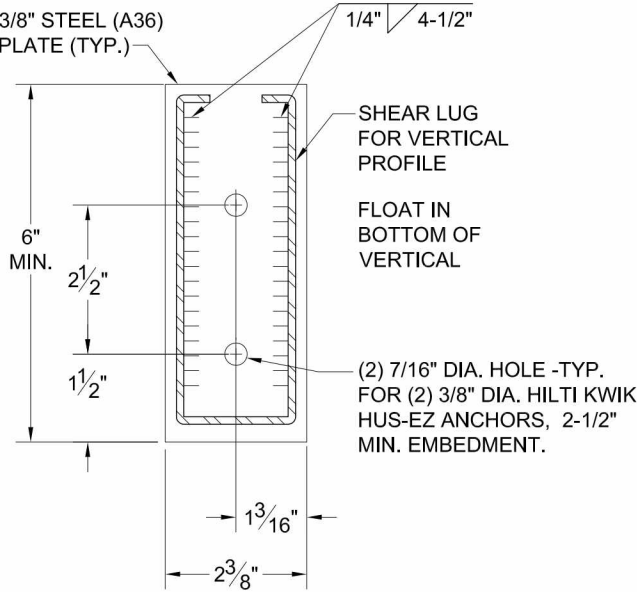


B
ANCHOR PLATE NARROW DOOR

****NOTE:**
- FOR OTHER ANCHORING METHODS TO
DIFFERENT SUBSTRATES CONTACT
VETROTECH OR YOUR LOCAL AUTHORITY
HAVING JURSDICTION

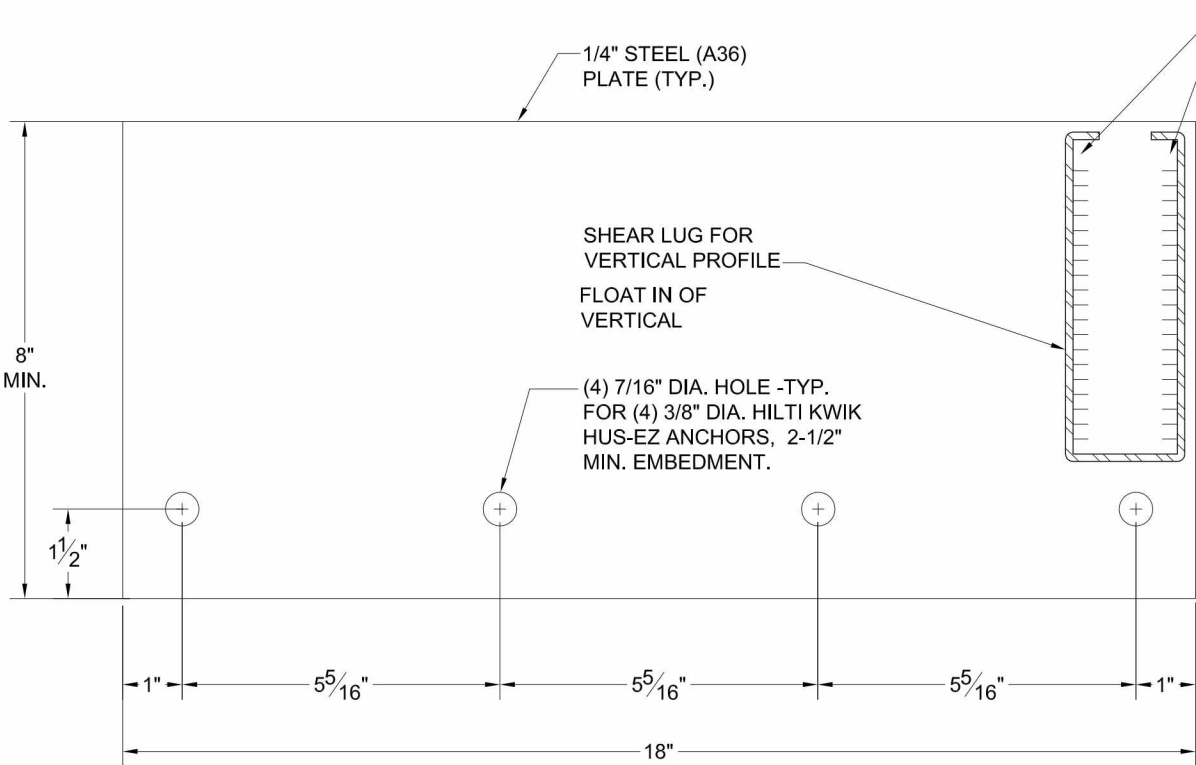

C
ANCHOR PLATE WIDE RIGHT

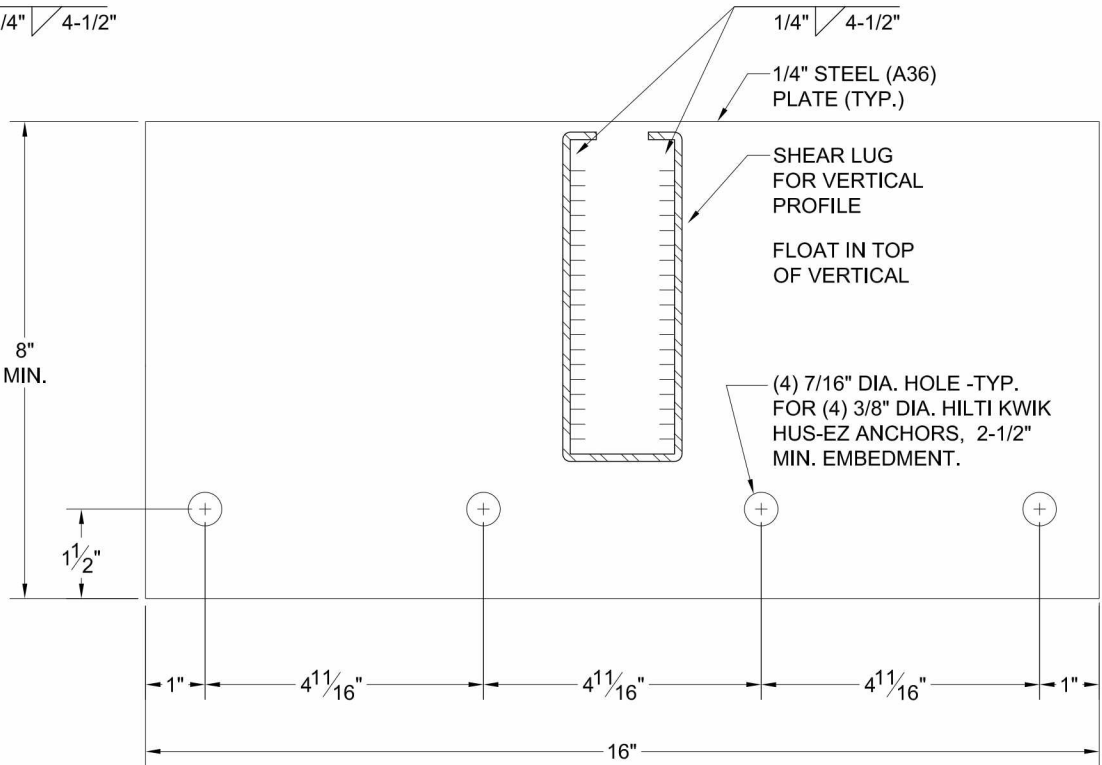

D
ANCHOR PLATE CENTER


DOOR PERIMETER ANCHORING

PERIMETER ANCHORING:

TO ANCHOR THE PERIMETER, USE #12 x 3" PHILLIPS FLAT HEAD SCREWS SPACED APPROX. 18-20" O.C.

FOR OTHER ANCHORING METHODS IN DIFFERENT SUBSTRATES (STEEL, CONCRETE, ETC.) CONTACT VETROTECH SAINT-GOBAIN OR YOUR LOCAL AUTHORITY HAVING JURISDICTION (AJH) FOR OTHER OPTIONS.

ANCHORING LOCATIONS FOR DOORS WILL BE PRE-DRILLED AND COMPLETED AT THE FACTORY BEFORE SHIPPING.

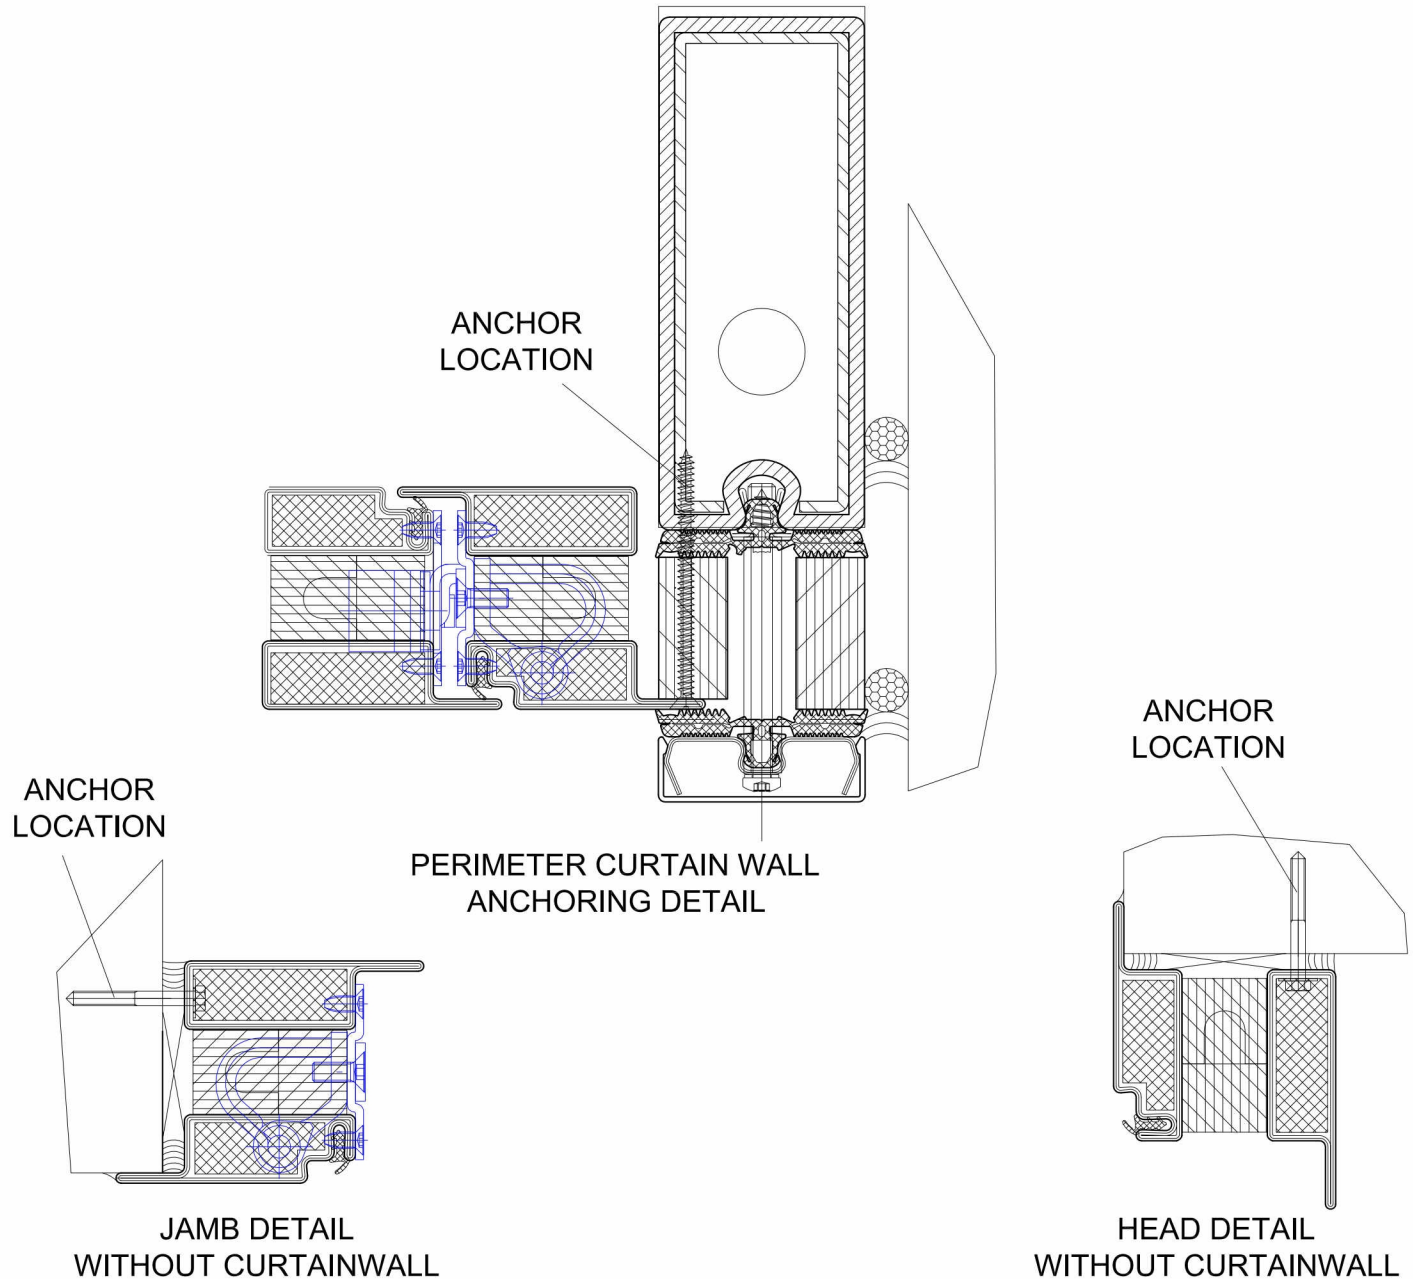

© Vetrotech Saint-Gobain, 2014 Vetrotech Saint-Gobain reserves the right to change configuration without prior notice when deemed necessary for product improvement. Laws and building and safety codes governing the design and use of glazed entrance, window, and curtain wall products vary widely. Vetrotech does not control the selection of product configurations, operating hardware, or glazing materials, and assumes no responsibility therefor. www.vetrotechUSA.com