
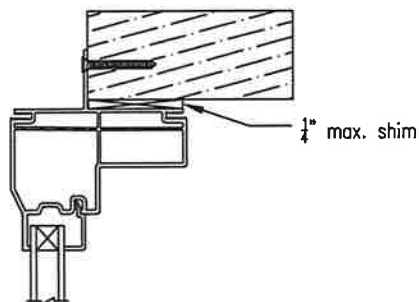
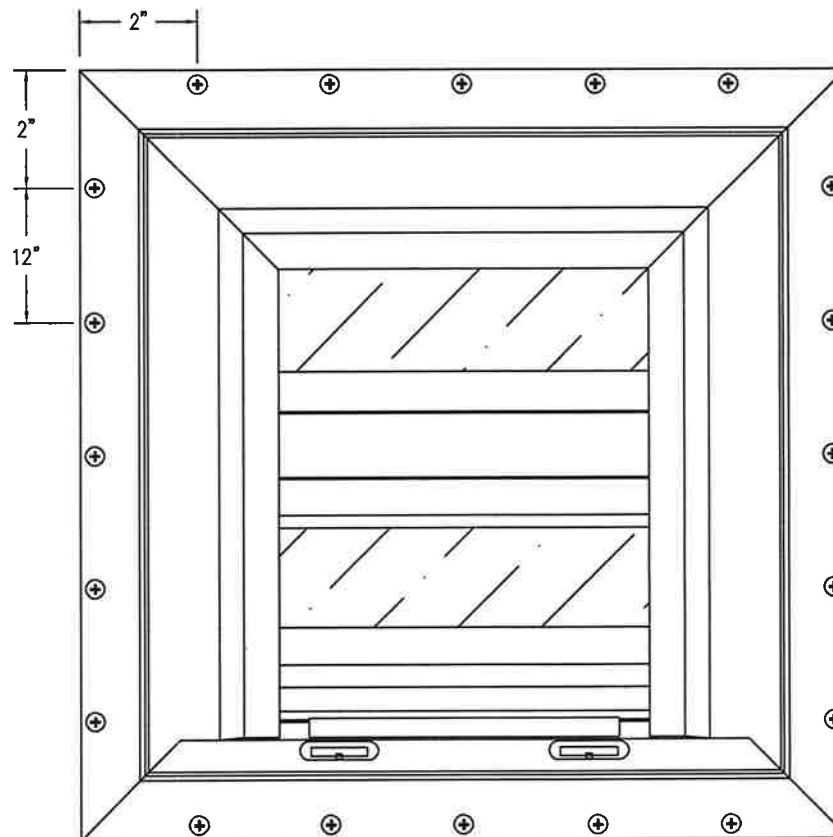
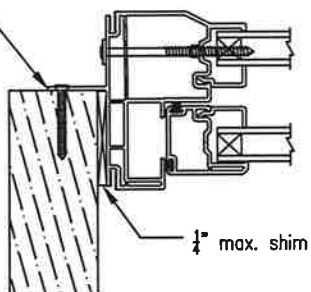


Fasten in 2 By Wood Frame with #8 x 1 1/4" Screw or Larger, 2" from Each Tip of Fin and Spaced Every 12" (Max) Between Fasteners. Apply Silicone Between Frame Nail Fin and 2 By Wood Around Full Perimeter Before Installation.


Make Sure that Window is in the Closed and Locked Position During Installation. Make Sure that the Sill is Level and that Jamb is Plumb.

Note: Fasteners must have a minimum of 1" embedment into framing and be a minimum of 1/2" from edge of rough opening.

Apply Silicone Between Frame Nail Fin and 2 By Wood Around Full Perimeter

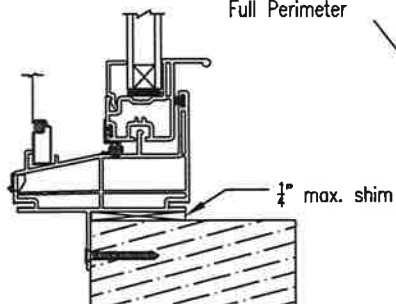

MAXIMUM SIZE: 36" X 84" DP +/- 55
44" X 72" DP +/- 50

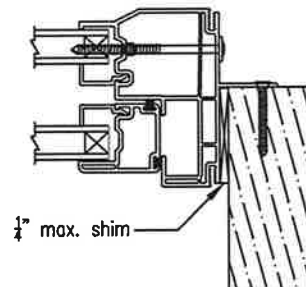

Krestmark Ind. L.P.
3950 Bastille Rd. Suite 100
Dallas, Texas 75212

200/275 Series S. H.
Installation Instructions