

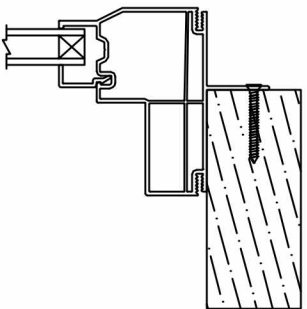
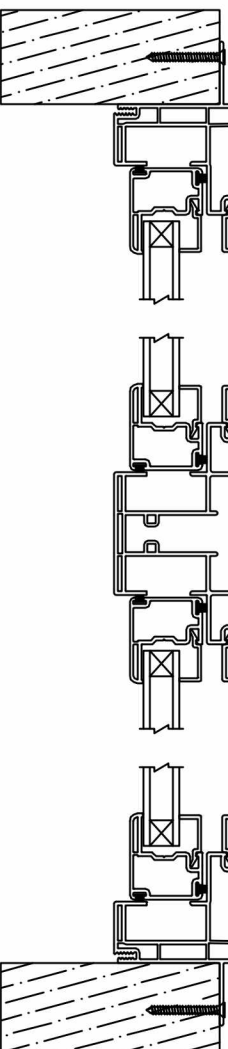
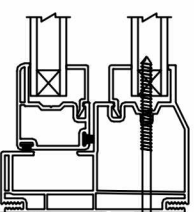
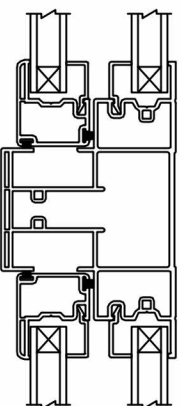
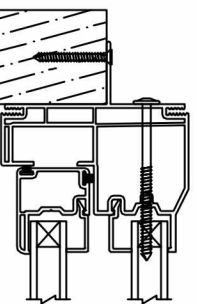
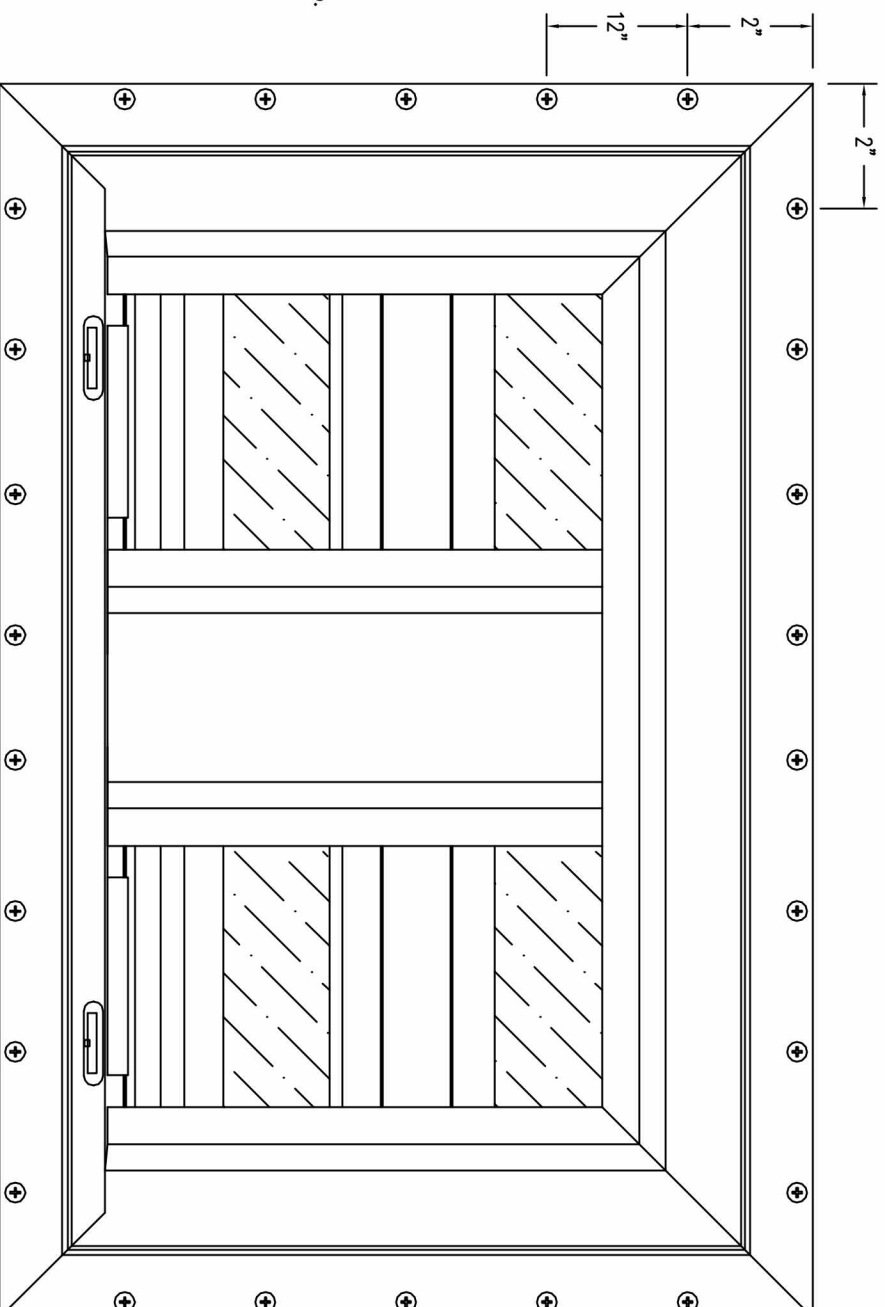


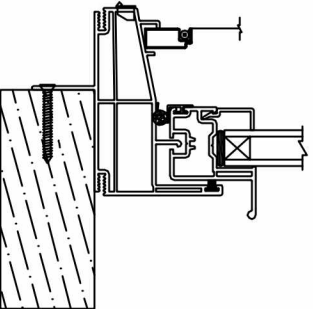

Fasten in 2 By Frame with
#8 x 1 1/4" Screw or Larger,
2" from Each Tip of Fin and
Spaced Every 12" (Max) Between
Fasteners

Make Sure that Window is in the
Closed and Locked Position During
Installation. Make Sure that the Sill
is Level and that Jambs are Plumb.

NOTE: Installation screws should be
long enough for a 1" minimum
embedment into framing member.

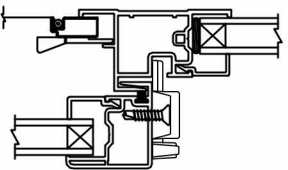

Kresmark Ind. L.P.
3950 Bosille Rd. Suite 100
Dallas, Texas 75212

200/275 Series S. H. Twin and Triple Cont.
Head and Sill Installation Instructions