

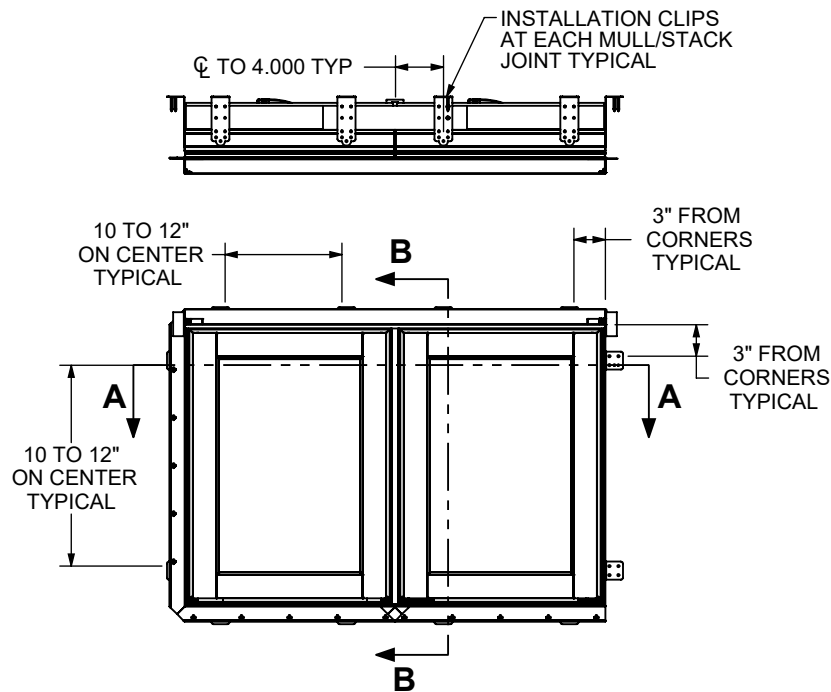


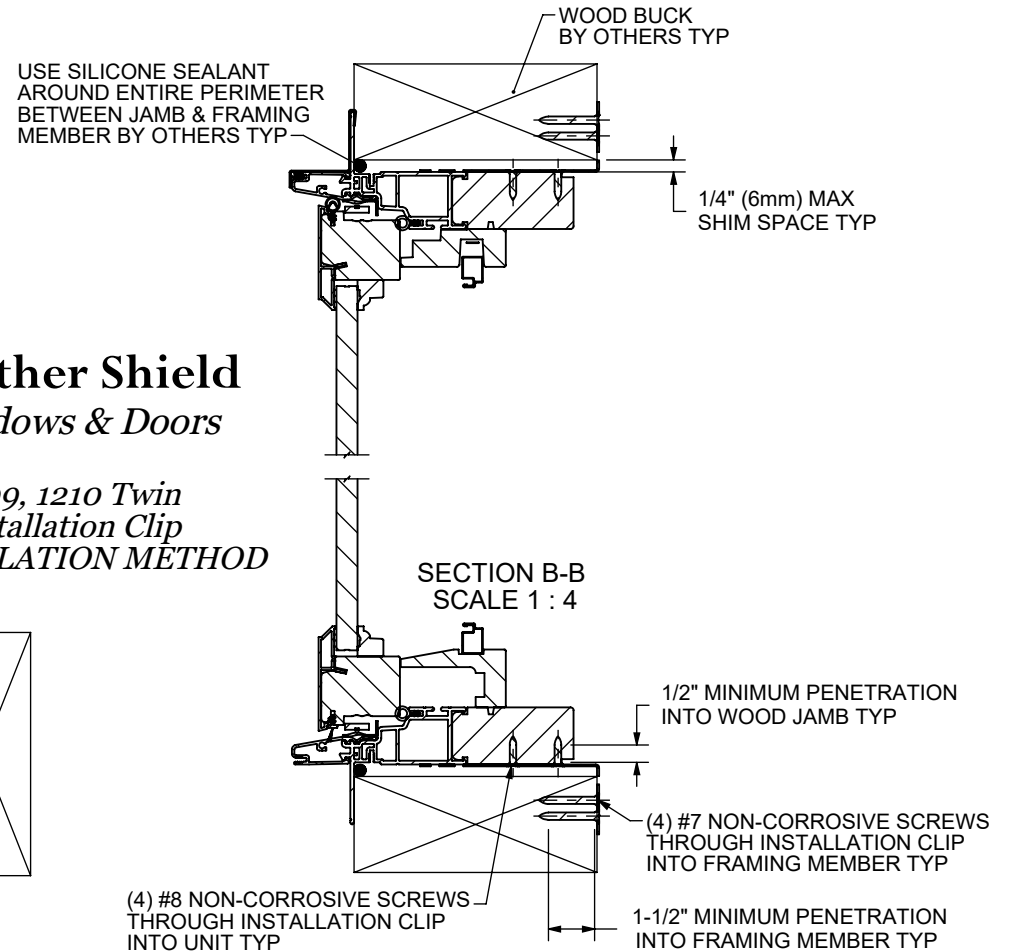

Weather Shield Windows & Doors

1209, 1210 Twin Installation Clip INSTALLATION METHOD

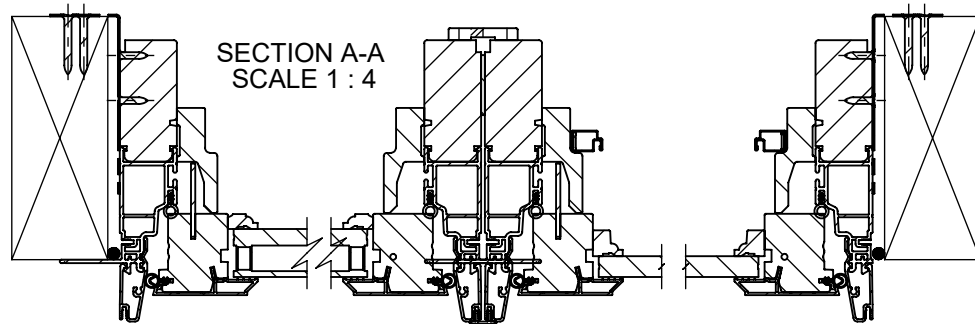

1. THIS SCHEDULE ADDRESSES ONLY THE FASTENERS REQUIRED TO ANCHOR THE WINDOW(S) TO ACHIEVE THE RATED DESIGN PRESSURE. THOROUGHLY READ AND FOLLOW MANUFACTURERS INSTALLATION INSTRUCTIONS RECEIVED WITH UNIT. THIS GUIDE DOES NOT ADDRESS THE SEALING CONSIDERATIONS THAT MAY ARISE IN DIFFERENT WALL CONDITIONS.
2. FASTENERS, ANCHORS, AND CONNECTORS SHALL COMPLY WITH THE CORROSION RESISTANCE REQUIREMENTS OF THE 2026 FLORIDA BUILDING CODE, SECTION 1711, BASED ON EXPOSURE CONDITIONS AND PROXIMITY TO A SALTWATER SHORELINE AND NOT ALL THE ONES SHOWN HERE NECESSARILY APPLY.

PROPERTY OF WEATHER SHIELD MFG., INC. DRAWING IS NOT TO BE REPRINTED OR SUBMITTED FOR USE OUTSIDE OF WEATHER SHIELD MFG., INC. ALL RIGHTS RESERVED. DIE #, X-REF #, COMPARATOR #:		MATERIAL:		Weather Shield Windows & Doors PRODUCTS: 1209, 1210 TWIN	
		DIV./ORDER #:			
		DATE ORDERED:			
		Q.C. COMPARATOR CHECK: ☐			
TYP. WALL THICKNESS:		FINISH:		DWG. NO. 85-7815-17	
AREA:		CUT STOCK SIZE:			
WT./FT.:		ECO OR W.S. #:		TITLE:	
FILE PATH:				REV. A	
DO NOT SCALE DRAWING		DRAWN BY: JK/EB	DATE: 10-30-14	SCALE: 1:12 SHEET NAME: Sheet1	
				SHEET 1 OF 1	

REVISION	DATE	DESCRIPTION	WHITE SLIP NUMBER	ENG.