



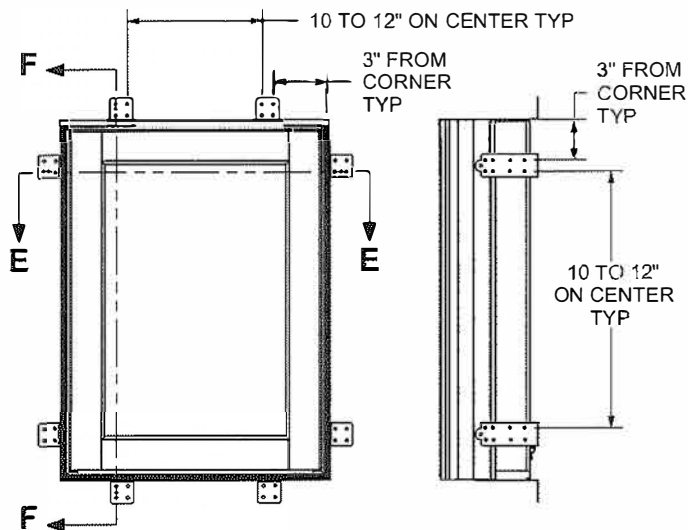


Weather Shield Windows & Doors

1209, 1210, 8211
CASEMENT, AWNING, AND PICTURE
Installation Clip
INSTALLATION METHOD

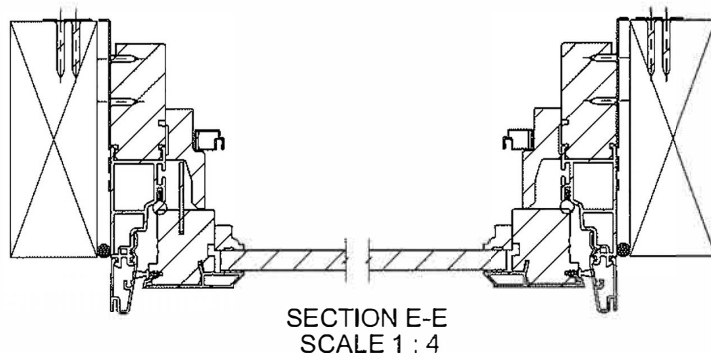

USE SILICONE SEALANT
AROUND ENTIRE PERIMETER
BETWEEN JAMB & FRAMING
MEMBER BY OTHERS TYP

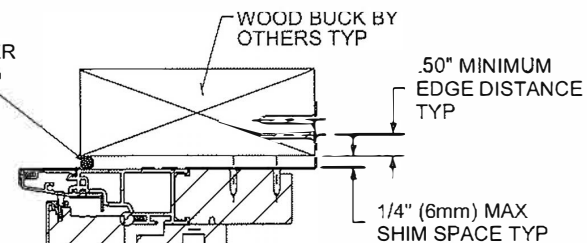

SECTION F-F
SCALE 1:4

(4) #8 NON-CORROSIVE
SCREWS THROUGH
INSTALLATION CLIP INTO UNIT
TYP

1/2" MINIMUM PENETRATION
INTO JAMB TYP

(4) #6 NON-CORROSIVE
SCREWS THROUGH
INSTALLATION CLIP INTO
FRAMING MEMBER TYP

1-1/2" MINIMUM EMBEDMENT
INTO SUBSTRATE TYP

NOTE(S):

1. DIMENSIONED VIEWS ARE TYPICAL FOR ALL CROSS SECTION DETAILS.

THIS SCHEDULE ADDRESSES ONLY THE FASTENERS REQUIRED TO ANCHOR THE WINDOW(S) TO ACHIEVE THE RATED DESIGN PRESSURE. THOROUGHLY READ AND FOLLOW MANUFACTURERS INSTALLATION INSTRUCTIONS RECEIVED WITH UNIT. THIS GUIDE DOES NOT ADDRESS THE SEALING CONSIDERATIONS THAT MAY ARISE IN DIFFERENT WALL CONDITIONS.

MATERIAL:		Weather Shield Windows & Doors	
DIV./ORDER #:			
DATE ORDERED:		PRODUCTS:	
Q.C. COMPARATOR CHECK: ☐		1209, 1210, 8211	
FINISH:		TITLE:	
CUT STOCK SIZE:		INSTALLATION INSTRUCTIONS	
ECO OR W.S. #: 30166		DWG. NO.	
FILE PATH:		85-7438-37	
DRAWN BY: JK/EB		DATE: 10-30-14	
DO NOT SCALE DRAWING		SCALE: 1:12 SHEET NAME: Sheet1	
REVISION		SHEET 1 OF 1	

REVISION	DATE	DESCRIPTION	WHITE SLIP NUMBER	ENG.