


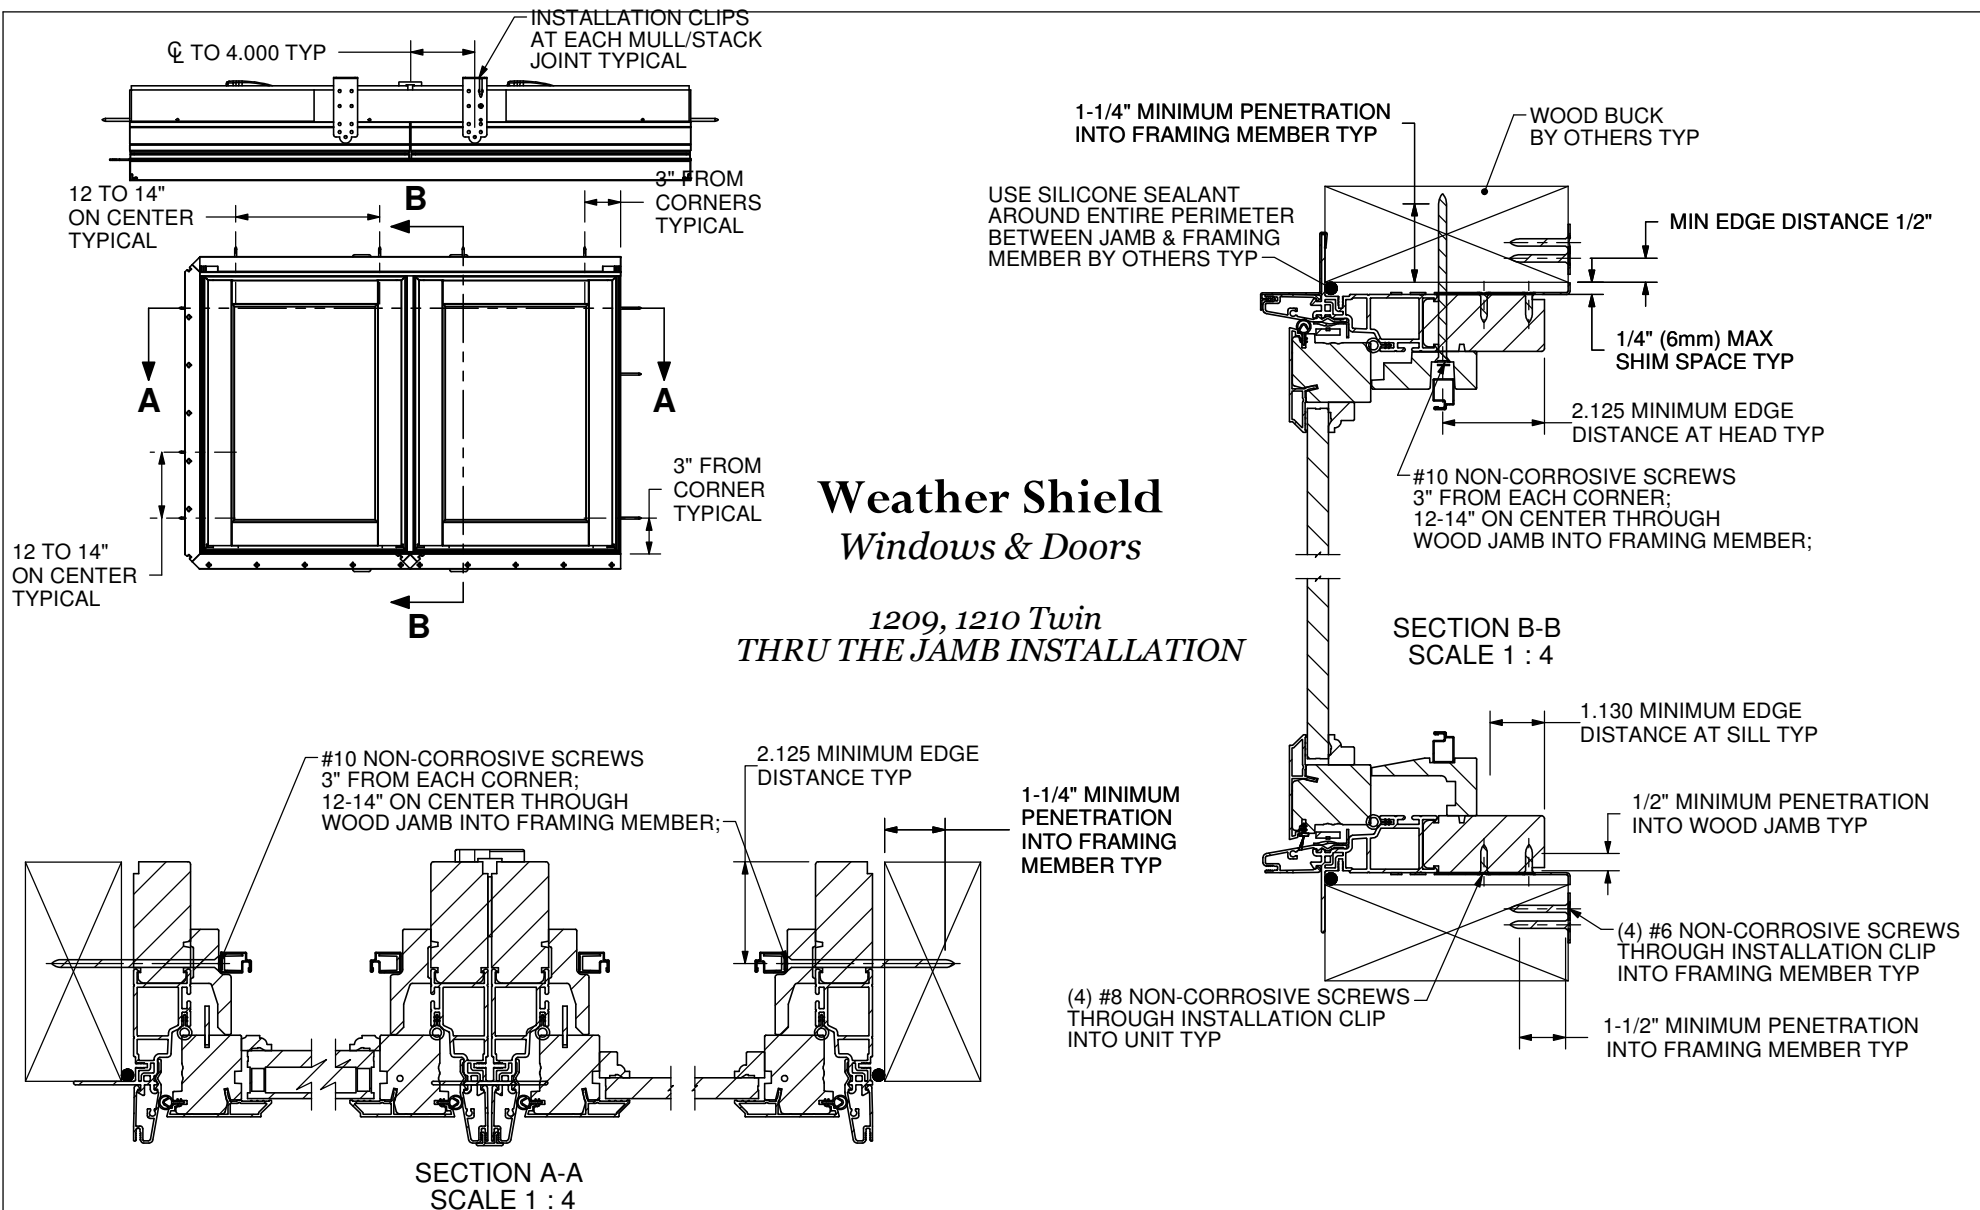

THIS SCHEDULE ADDRESSES ONLY THE FASTENERS REQUIRED TO ANCHOR THE WINDOW(S) TO ACHIEVE THE RATED DESIGN PRESSURE. THOROUGHLY READ AND FOLLOW MANUFACTURERS INSTALLATION INSTRUCTIONS RECEIVED WITH UNIT. THIS GUIDE DOES NOT ADDRESS THE SEALING CONSIDERATIONS THAT MAY ARISE IN DIFFERENT WALL CONDITIONS.						TOLERANCES UNLESS SPECIFIED: <table><tr><td>INCHES</td><td>ANGLE</td></tr><tr><td>.X ± .1"</td><td>xx ± 1°</td></tr><tr><td>.xx ± .03"</td><td>xx.x ± .5° (1/2°)</td></tr><tr><td>.xxx ± .015"</td><td>xx.xx ± .25° (1/4°)</td></tr></table>		INCHES	ANGLE	.X ± .1"	xx ± 1°	.xx ± .03"	xx.x ± .5° (1/2°)	.xxx ± .015"	xx.xx ± .25° (1/4°)	WEATHER SHIELD. WINDOWS & DOORS	
						INCHES	ANGLE										
						.X ± .1"	xx ± 1°										
						.xx ± .03"	xx.x ± .5° (1/2°)										
.xxx ± .015"	xx.xx ± .25° (1/4°)																
PRODUCTS: 1209, 1210 TWIN																	
DRAWN BY: JK/EB	DATE: 10-30-14	TITLE:															
DWG NO.: 85-7815-16		REV B															
						SCALE: 1:12		SHEET NAME: Sheet1		SHEET 1	OF 1						
REV	DATE	DESCRIPTION				PCR NO.	ENG	PDR #:	PROFILE #:								