



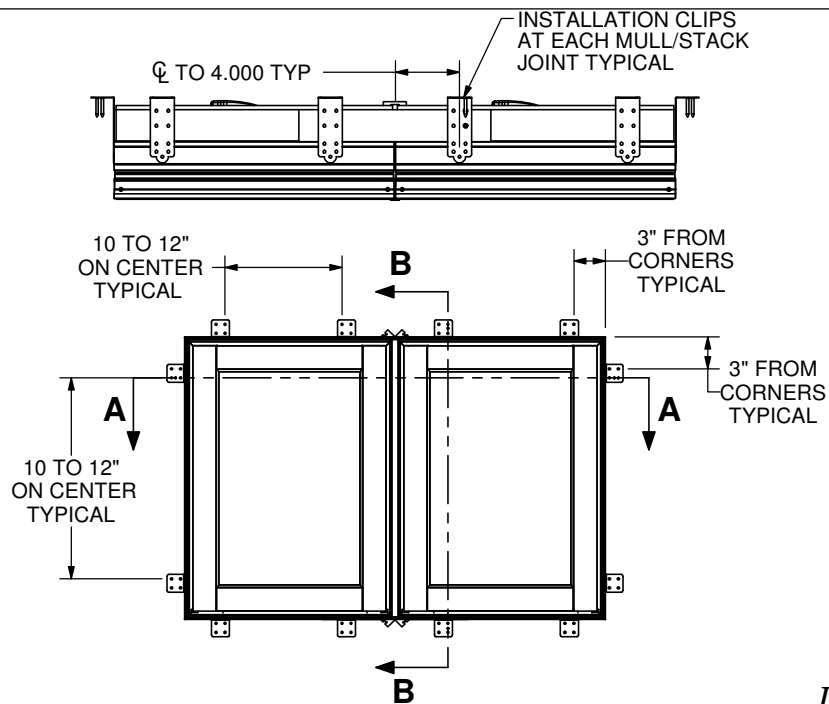


Weather Shield Windows & Doors

1209, 1210 Twin Installation Clip INSTALLATION METHOD

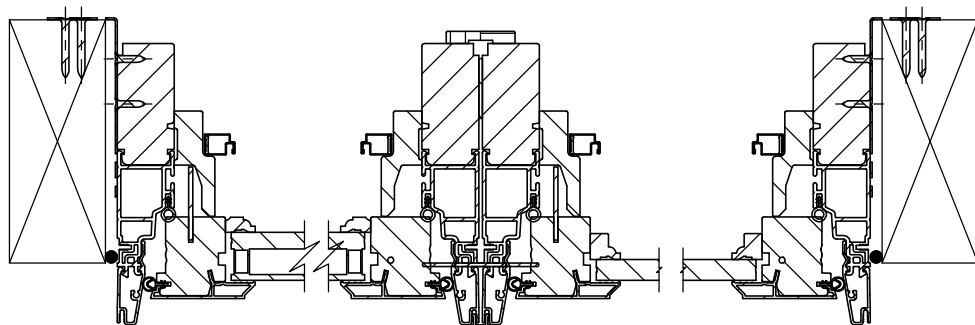

THIS SCHEDULE ADDRESSES ONLY THE FASTENERS REQUIRED TO ANCHOR THE WINDOW(S) TO ACHIEVE THE RATED DESIGN PRESSURE. THOROUGHLY READ AND FOLLOW MANUFACTURERS INSTALLATION INSTRUCTIONS RECEIVED WITH UNIT. THIS GUIDE DOES NOT ADDRESS THE SEALING CONSIDERATIONS THAT MAY ARISE IN DIFFERENT WALL CONDITIONS.

USE SILICONE SEALANT AROUND ENTIRE PERIMETER BETWEEN JAMB & FRAMING MEMBER BY OTHERS TYP

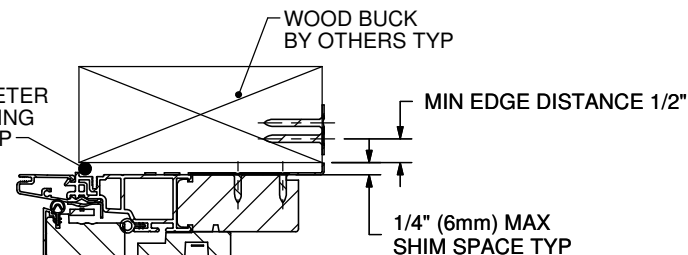

(4) #8 NON-CORROSIVE SCREWS THROUGH INSTALLATION CLIP INTO UNIT TYP

1/2" MINIMUM PENETRATION INTO WOOD JAMB TYP

(4) #6 NON-CORROSIVE SCREWS THROUGH INSTALLATION CLIP INTO FRAMING MEMBER TYP

1-1/2" MINIMUM PENETRATION INTO FRAMING MEMBER TYP

TOLERANCES UNLESS SPECIFIED:	
INCHES	ANGLE
.X ± .1"	XX ± 1°
.XX ± .03"	XX.X ± .5° (1/2°)
.XXX ± .015"	XX.XX ± .25° (1/4°)

PRODUCTS:
1209, 1210 TWIN

DRAWN BY:
JK/EB

DATE:
10-30-14

TITLE:

WEATHER SHIELD.
WINDOWS & DOORS

DWG NO.:
85-7815-17

REV

SCALE: 1:12 SHEET NAME: Sheet1

SHEET 1 OF 1

DO NOT SCALE DRAWING

					TYP. WALL THICKNESS:
					WT/FT:
					AREA:
					MAT:
					FINISH:
REV	DATE	DESCRIPTION	PCR NO.	ENG	PDR #:
					PROFILE #: