




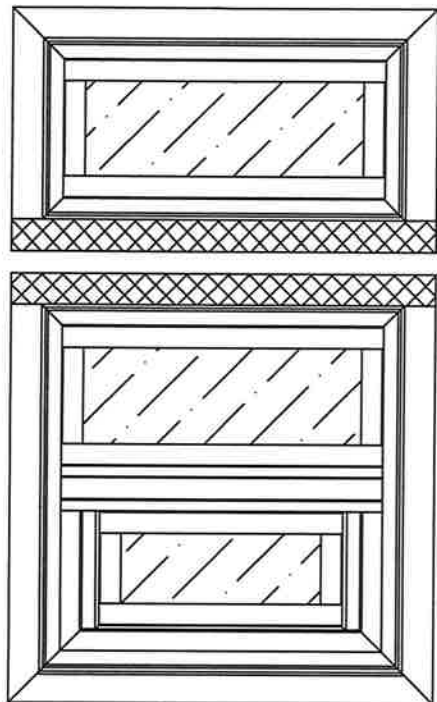

Make Sure that Windows are in the Closed and Locked Position During Installation. Make Sure that the Sills are Level and that Jambs are Plumb.

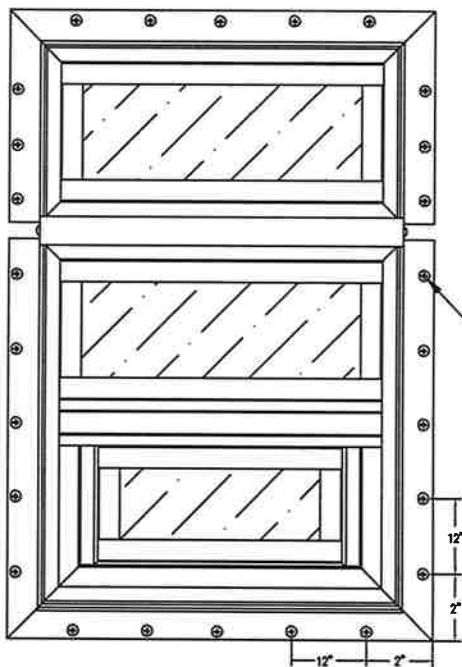

MAXIMUM SIZE: 44" X 96" DP +/-50

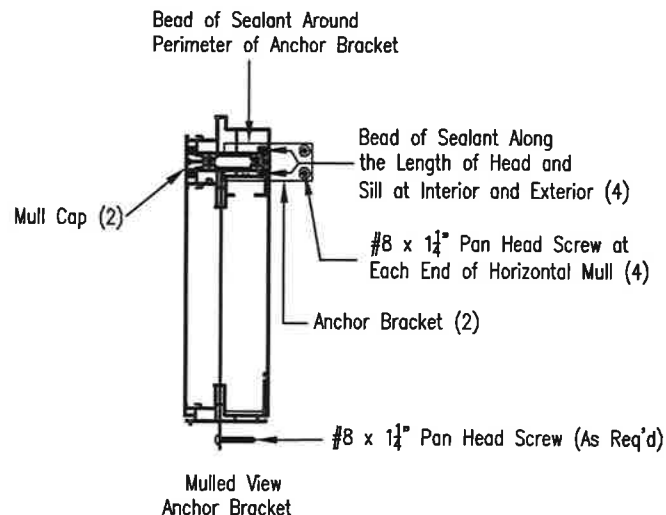

#8 x 1 1/4" or Longer Phillips Pan Head Screw, 2" from Each Tip of Fin and Spaced Every 12" (Max) Between Fasteners. Apply Silicone Between Nailing Fin and 2x Wood Full Perimeter. 1/4" max. shims as required.

NOTE: Installation screws should be long enough for a 1" minimum embedment into framing member and be located a minimum of 1/2" from edge of rough opening.



Krestmark Ind. L.P.
3950 Bastille Rd. Suite 100
Dallas, Texas 75212

200/275 Series Single Hung with 200/275 Series Transom
Installation Instructions