


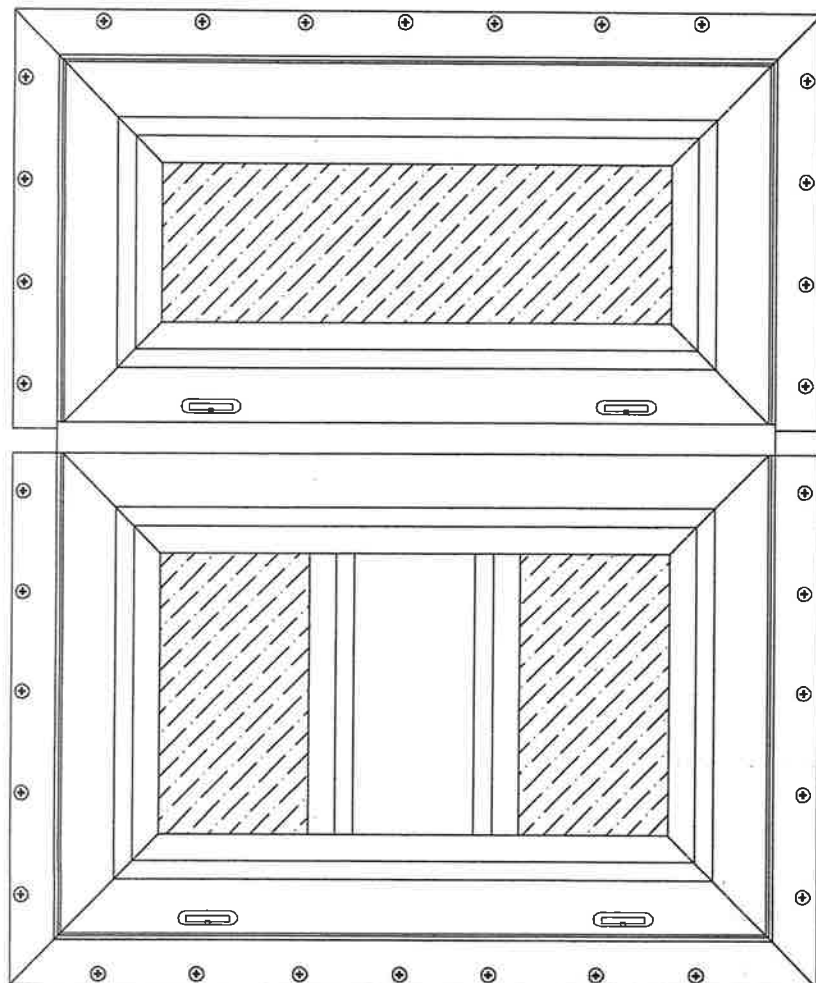



MAXIMUM SIZE: 71 1/2" X 96"

Remove Transom Sill and Twin Head Nailing Fins. Place mull between unit and follow mulling instructions. Use #8 x 1 1/4" or Longer Phillips Pan Head Screw, 2" from Each Tip of Fin and Spaced Every 12" (Max) Between Fasteners. Apply Silicone Between Nailing Fin and Rough Opening Full Perimeter. Make Sure Sill is Level and Jambs are Plumb.

NOTE: Installation screws should be long enough for a 1" minimum embedment into framing member and be located a minimum of 1/2" from edge of rough opening.

1/4" max. shims as required.

Window to be installed in a Wood 2X Rough Opening.

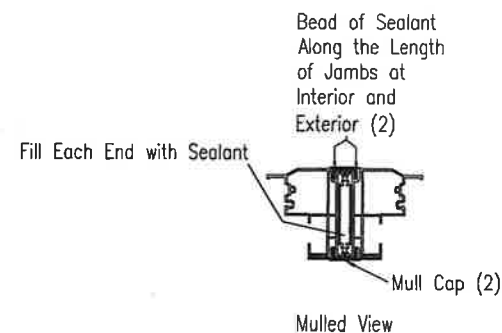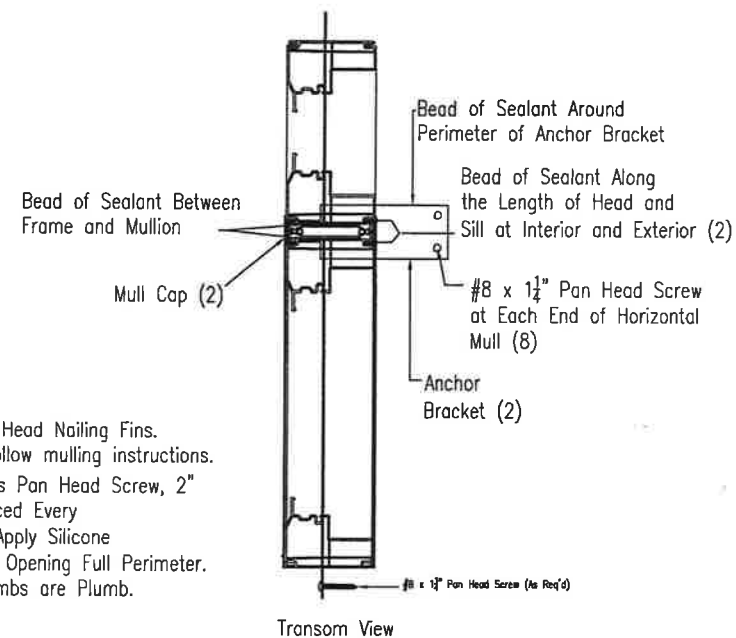

Krestmark Ind. L.P.
3950 Bastille Rd. Suite 100
Dallas, Texas 75212

200/275 Series S. H. Mull/Transom
Installation Instructions