



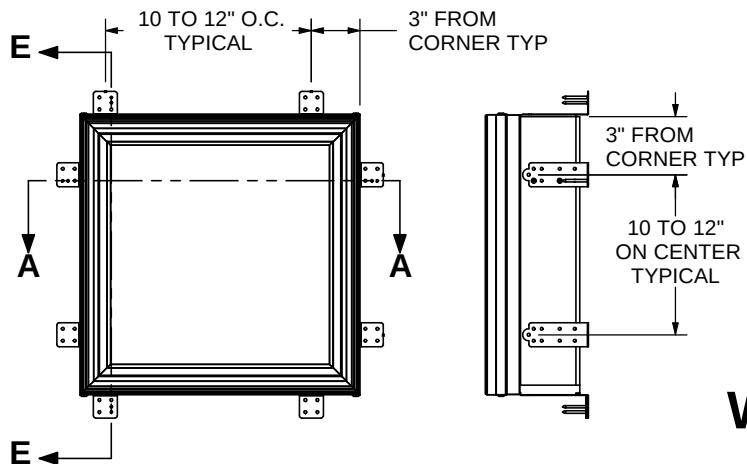


USE SILICONE SEALANT
AROUND ENTIRE PERIMETER
BETWEEN JAMB & FRAMING
MEMBER BY OTHERS TYP

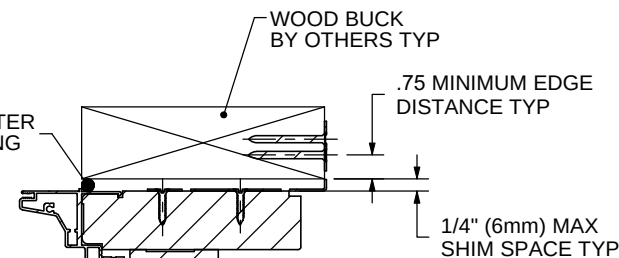

Weather Shield Windows & Doors


1309, 1310, 8306 Direct Set
Installation Clip
INSTALLATION METHOD

SECTION E-E
SCALE 1 : 4

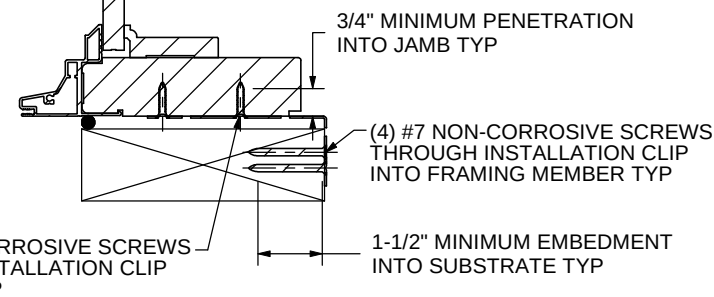

(4) #7 NON-CORROSIVE SCREWS
THROUGH INSTALLATION CLIP
INTO UNIT TYP

1-1/2" MINIMUM EMBEDMENT
INTO SUBSTRATE TYP

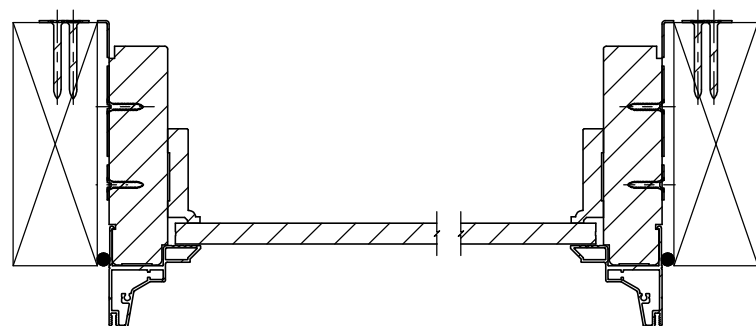

SECTION A-A
SCALE 1 : 4

NOTE(S):

1. DIMENSIONED VIEWS ARE TYPICAL FOR ALL CROSS SECTION DETAILS.

THIS SCHEDULE ADDRESSES ONLY THE FASTENERS REQUIRED TO ANCHOR THE WINDOW(S) TO ACHIEVE THE RATED DESIGN PRESSURE. THOROUGHLY READ AND FOLLOW MANUFACTURERS INSTALLATION INSTRUCTIONS RECEIVED WITH UNIT. THIS GUIDE DOES NOT ADDRESS THE SEALING CONSIDERATIONS THAT MAY ARISE IN DIFFERENT WALL CONDITIONS.

					TYP. WALL THICKNESS:	CUT STOCK SIZE:	1309, 1310, 8306				
					AREA:	ECO OR W.S. #:	TITLE:				
					WT./FT.:		INSTALLATION INSTRUCTIONS				
					FILE PATH:			DWG. NO.			REV.
							85-7849-13				
REVISION	DATE	DESCRIPTION	WHITE SLIP NUMBER	ENG.	DO NOT SCALE DRAWING		DRAWN BY: JK/SB	DATE: 9-9-14	SCALE: 1:12 SHEET NAME: Sheet1		SHEET 1 OF 1