



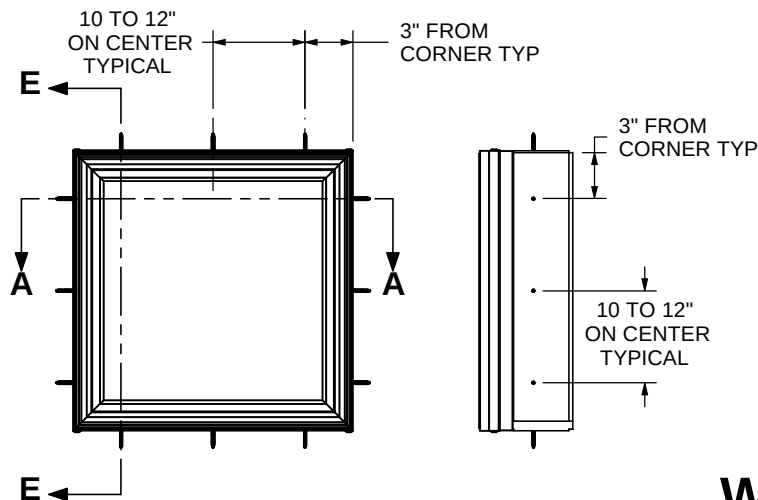

Weather Shield Windows & Doors


*1309, 1310, 8306 Direct Set
THROUGH JAMB
INSTALLATION METHOD*

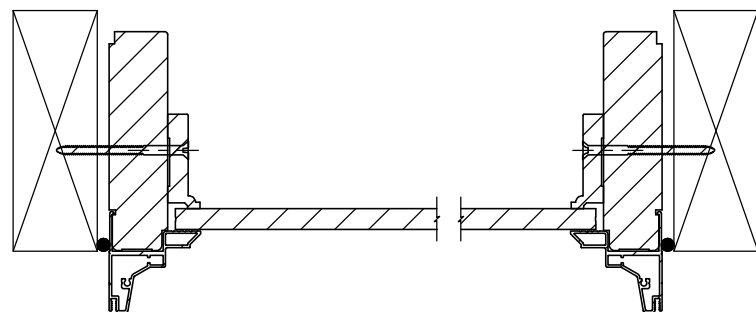


SECTION A-A
SCALE 1 : 4

THIS SCHEDULE ADDRESSES ONLY THE FASTENERS REQUIRED TO ANCHOR THE WINDOW(S) TO ACHIEVE THE RATED DESIGN PRESSURE. THOROUGHLY READ AND FOLLOW MANUFACTURERS INSTALLATION INSTRUCTIONS RECEIVED WITH UNIT. THIS GUIDE DOES NOT ADDRESS THE SEALING CONSIDERATIONS THAT MAY ARISE IN DIFFERENT WALL CONDITIONS.

USE SILICONE SEALANT
AROUND ENTIRE PERIMETER
BETWEEN JAMB & FRAMING
MEMBER BY OTHERS TYP

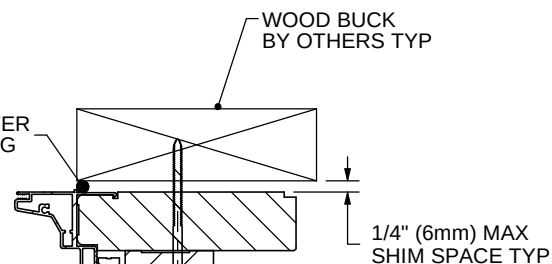

SECTION E-E
SCALE 1 : 4

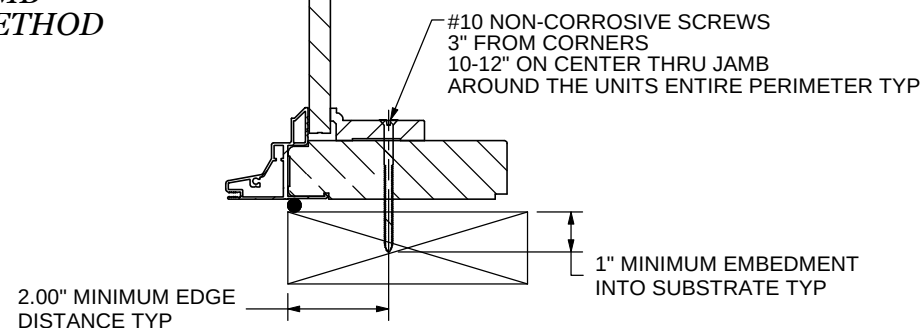

NOTE(S):
1. DIMENSIONED VIEWS ARE TYPICAL FOR ALL CROSS SECTION DETAILS.

MATERIAL:		Weather Shield <i>Windows & Doors</i>	
DIV./ORDER #:		PRODUCTS: 1309, 1310, 8306	
DATE ORDERED:			
DIE #,X-REF #,COMPARATOR #:		Q.C. COMPARATOR CHECK: ☐	
FINISH:		TITLE: INSTALLATION INSTRUCTIONS	
CUT STOCK SIZE:			
ECO OR W.S. #:		DWG. NO. 85-7849-14	
FILE PATH:		REV.	
DO NOT SCALE DRAWING		DRAWN BY: JK/SB	DATE: 9-9-14
SCALE: 1:12		SHEET NAME: Sheet1	
SHEET 1		OF 1	

REVISION	DATE	DESCRIPTION	WHITE SLIP NUMBER	ENG.