

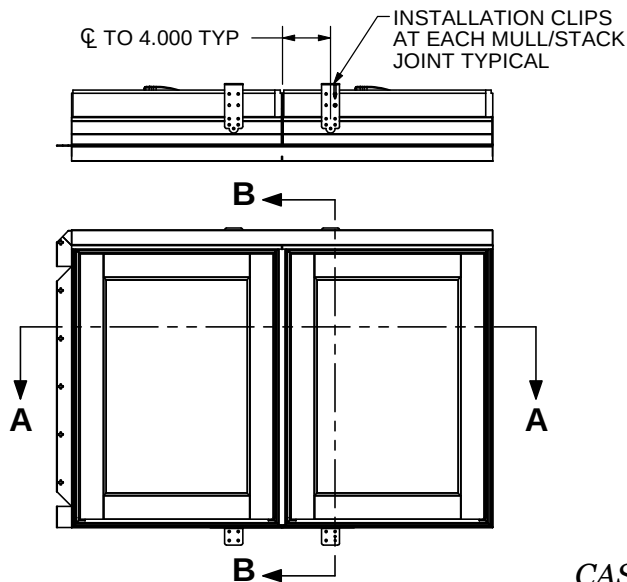


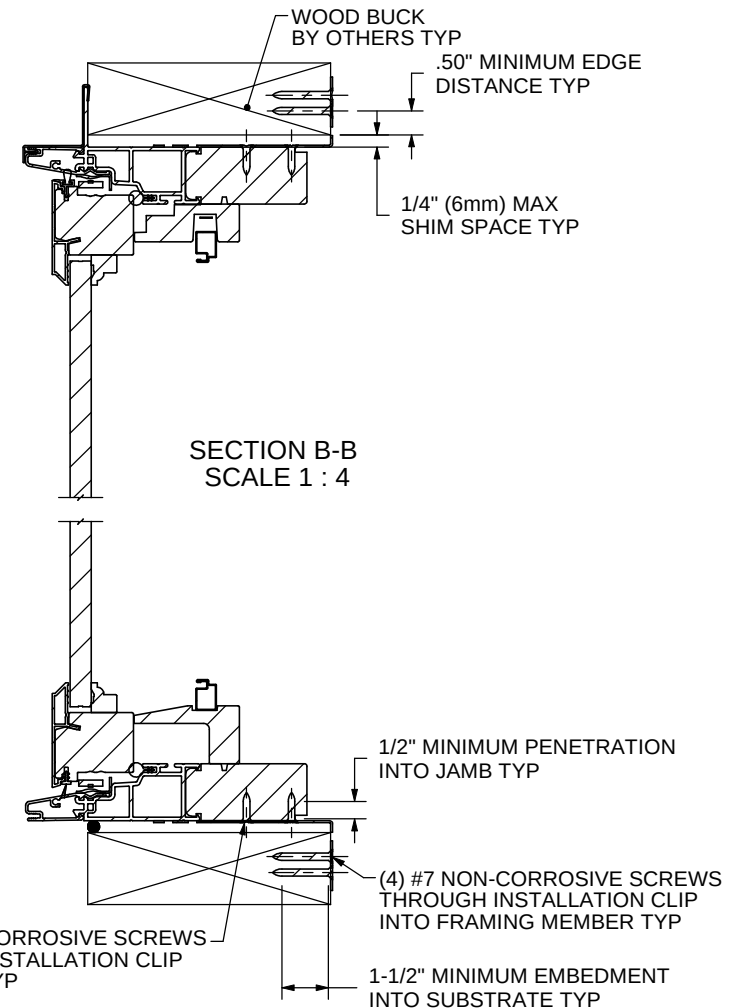

REFERENCE DRAWING NUMBER 85-7438-36 FOR THE INDIVIDUAL UNIT NAIL FIN INSTALLATION METHOD.
 REFERENCE DRAWING NUMBER 85-7438-37 FOR THE INDIVIDUAL UNIT INSTALLATION CLIP INSTALLATION METHOD.
 REFERENCE DRAWING NUMBER 85-7438-38 FOR THE INDIVIDUAL UNIT THROUGH THE JAMB INSTALLATION METHOD.

Weather Shield Windows & Doors

1209, 1210, 8211
 CASEMENT, AWNING, AND PICTURE
 MULLION INSTALLATION

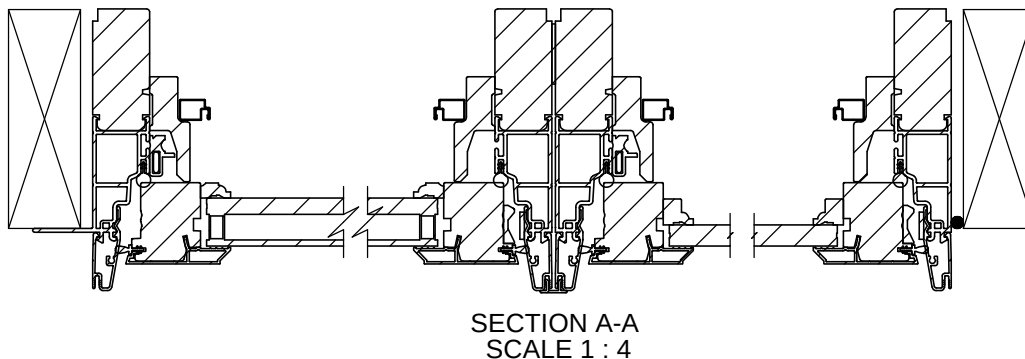

NOTE(S):
 1. DIMENSIONED VIEWS ARE TYPICAL FOR ALL CROSS SECTION DETAILS.

THIS SCHEDULE ADDRESSES ONLY THE FASTENERS REQUIRED TO ANCHOR THE WINDOW(S) TO ACHIEVE THE RATED DESIGN PRESSURE. THOROUGHLY READ AND FOLLOW MANUFACTURERS INSTALLATION INSTRUCTIONS RECEIVED WITH UNIT. THIS GUIDE DOES NOT ADDRESS THE SEALING CONSIDERATIONS THAT MAY ARISE IN DIFFERENT WALL CONDITIONS.

PROPERTY OF WEATHER SHIELD MFG., INC. DRAWING IS NOT TO BE REPRINTED OR SUBMITTED FOR USE OUTSIDE OF WEATHER SHIELD MFG., INC. ALL RIGHTS RESERVED.		MATERIAL:		Weather Shield Windows & Doors
DIE #, X-REF #, COMPARATOR #:		DIV./ORDER #:		
TYP. WALL THICKNESS:		DATE ORDERED:		
AREA:		Q.C. COMPARATOR CHECK: ☐		
WT./FT.:		FINISH:		PRODUCTS:
FILE PATH:		CUT STOCK SIZE:		1209, 1210, 8211 TWIN
		ECO OR W.S. #:		TITLE:
				INSTALLATION INSTRUCTIONS
				DWG. NO.
				85-7815-21
		DRAWN BY: JK/EB		SCALE: 1:12
		DATE: 10-30-14		SHEET NAME: Sheet1
				SHEET 1 OF 1

REVISION	DATE	DESCRIPTION	WHITE SLIP NUMBER	ENG.