

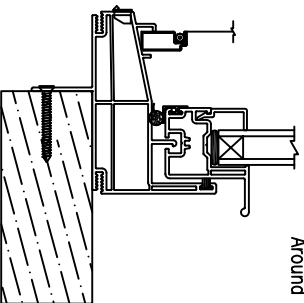
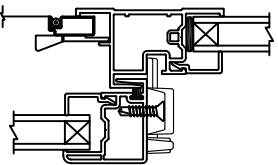


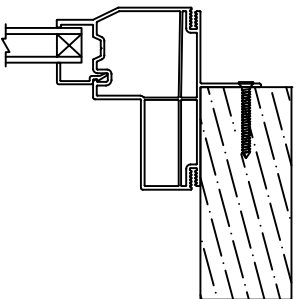



Apply Silicone Between
Frame Nail Fin and 2 By
Around Full Perimeter

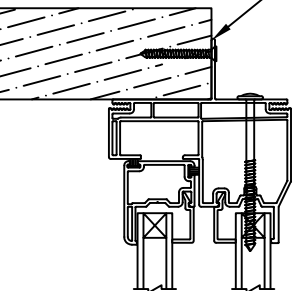

Fasten in 2 By Frame with
#8 x 1/4" Screw or Larger,
2" from Each Tip of Fin and
Spaced Every 12"(Max) Between
Fasteners. Apply Silicone Between
Frame Nail Fin and 2 By Around
Full Perimeter Before Installation.

Make Sure that Window is in the
Closed and Locked Position During
Installation. Make Sure that the Sill
is Level and that Jamb is Plumb.

NOTE: Installation screws should be
long enough for 1" embedment into
framing member. Fasteners must be
located a minimum of 1/2" from
rough opening.

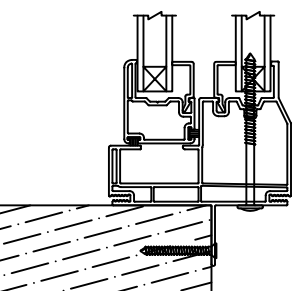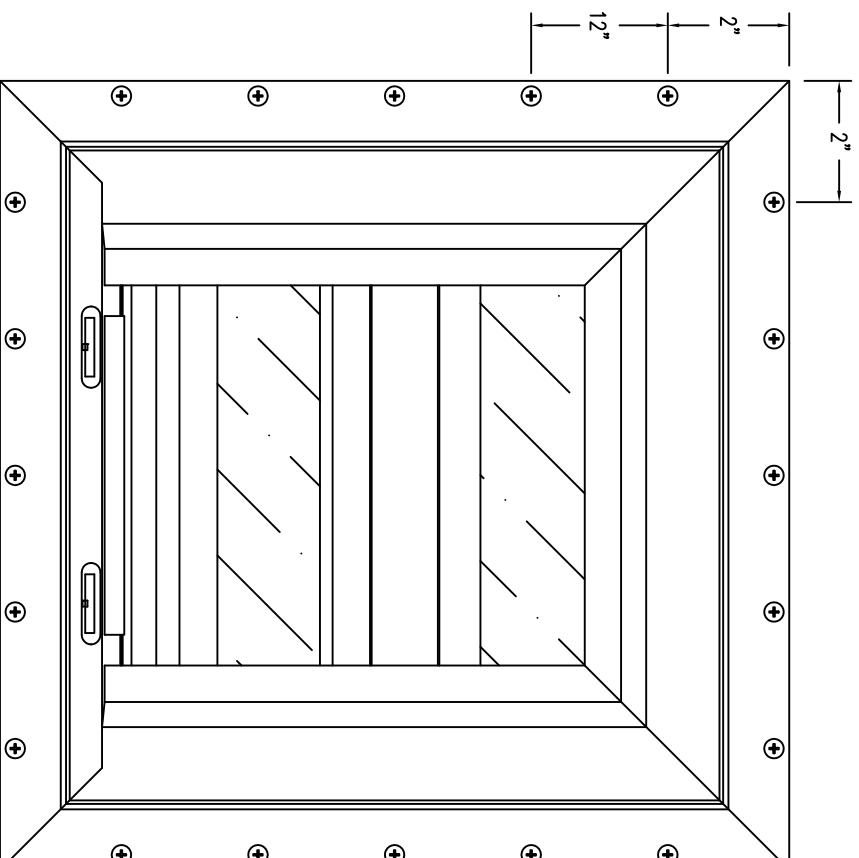

Legacy Vinyl Windows L.P.
1813 Kelly Blvd.
Carrollton, TX 75006

450 Series S. H.
Installation Instructions