

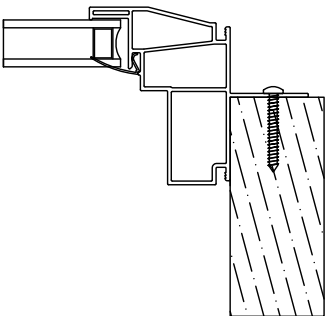


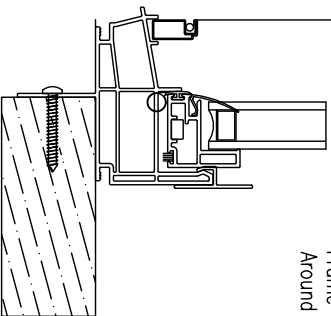



Fasten in 2 By Frame with #8 x 1/4" Screw or Larger, 2" from Each Tip of Fin and Spaced Every 12"(Max) Between Fasteners. Apply Silicone Between Frame Nail Fin and 2 By Around Full Perimeter Before Installation.

Make Sure that Window is in the Closed and Locked Position During Installation. Make Sure that the Sill is Level and that Jambs are Plumb.

Note: Fasteners require minimum of 1" embedment into framing members and must be a minimum of 1/2" from edge of rough opening.

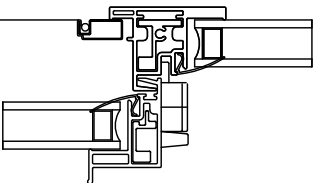

Apply Silicone Between Frame Nail Fin and 2 By Around Full Perimeter

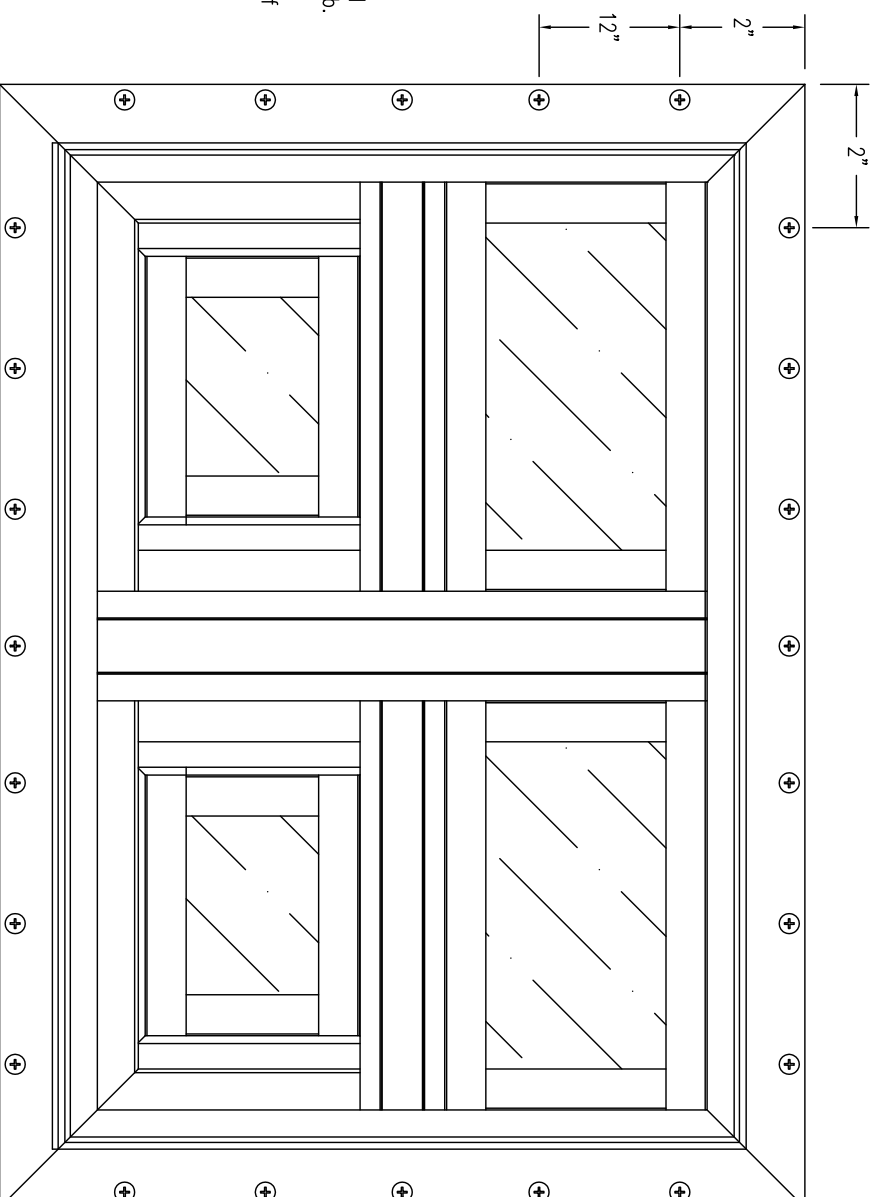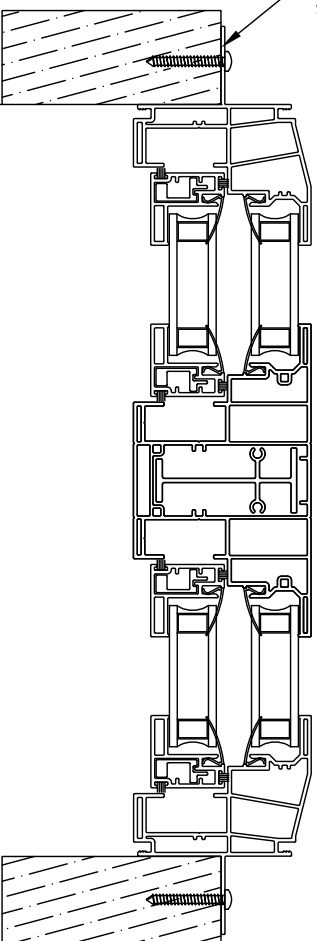

Legacy Vinyl Windows L.P.
1813 Kelly BLVD
Carrollton, TX 75006

450 Series S. H. Continuos Head and Sill
Installation Instructions