

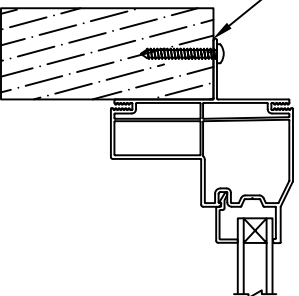


Apply Silicone Between
Frame Nail Fin and 2 By
Around Full Perimeter

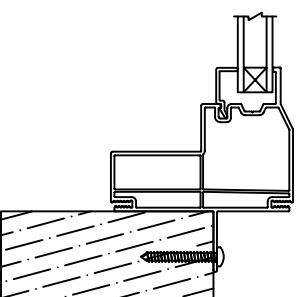

Fasten in 2 By Frame with
#8 x 1 1/4" Screw or Larger,
2" from Each Tip of Fin and
Spaced Every 12"(Max) Between
Fasteners. Apply Silicone Between
Frame Nail Fin and 2 By Around
Full Perimeter Before Installation.
Make Sure that the Sill is Level and
that Jambes are Plumb.
NOTE: Installation screws should be
long enough for 1" embedment into
framing member. Fasteners must be
located a minimum of 1/2" from
rough opening.

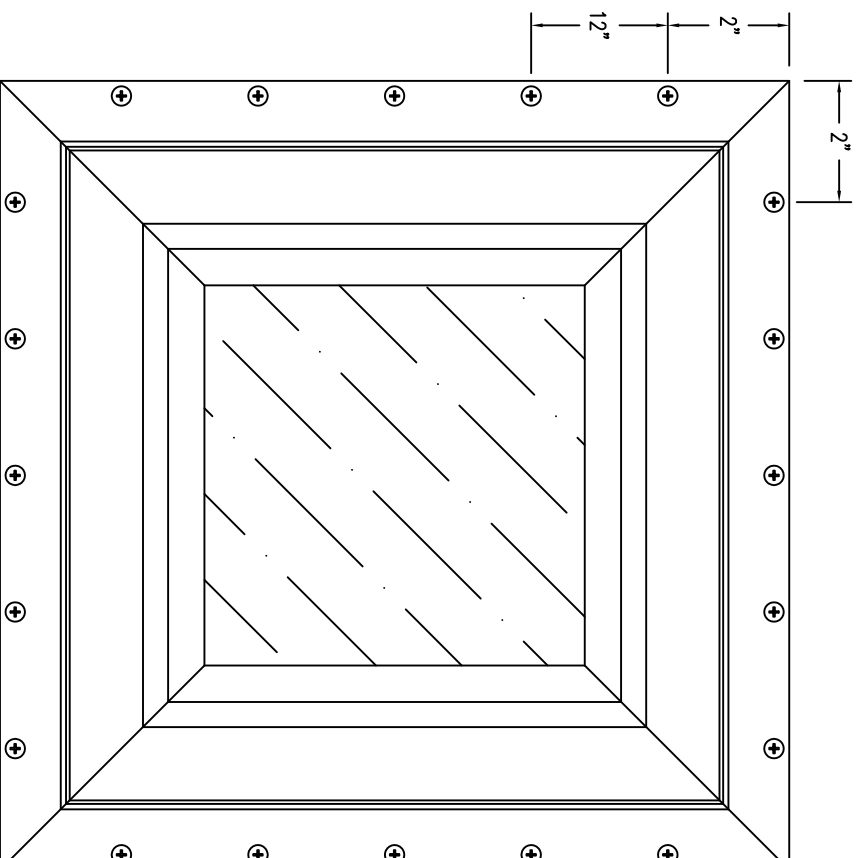

Legacy Vinyl Windows L.P.
1813 Kelly Blvd.
Carrollton, TX 75006
450 Series P. W.
Installation Instructions