

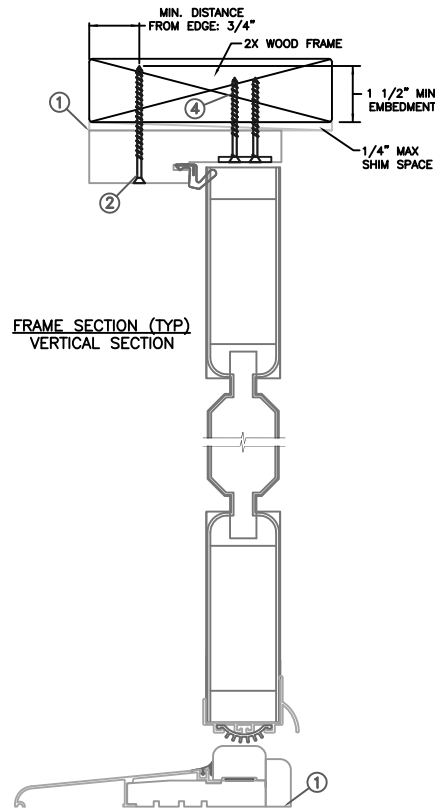


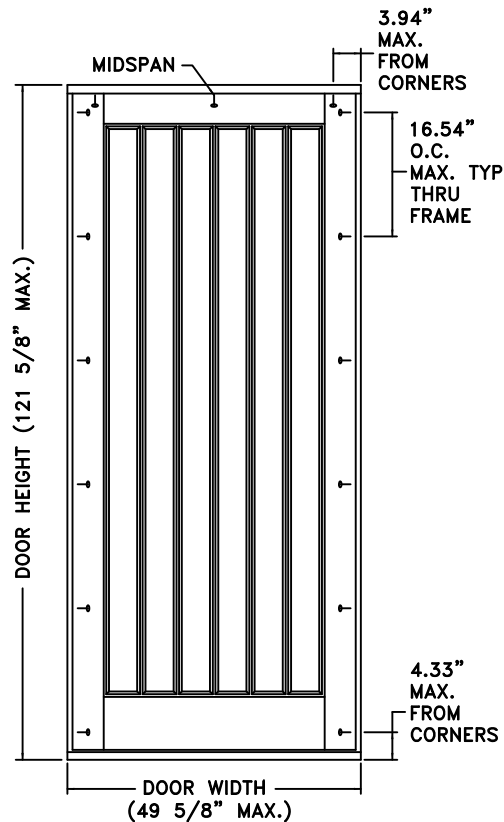

THROUGH FRAME INSTALLATION

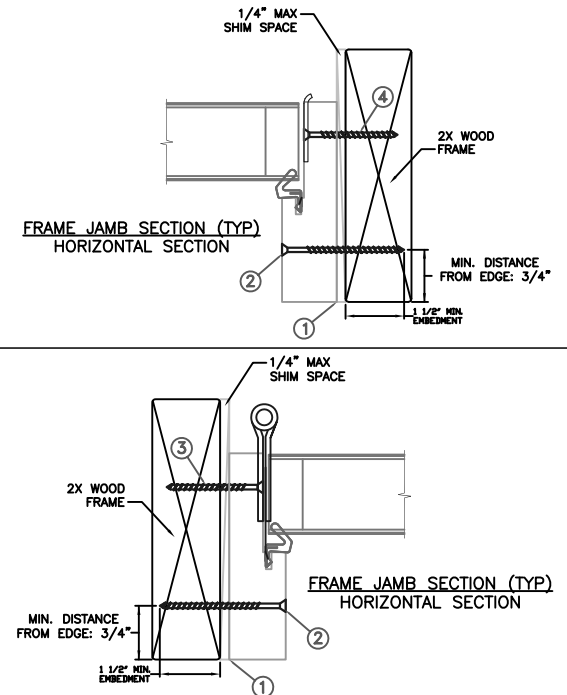

Max Frame	DP Rating	Impact
49 5/8" x 121 5/8"	+50/-65	NO

Installed Fastener Schedule:

1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk (typ.).
2. Use #8 PH or greater fasteners through frame with sufficient length to penetrate a minimum of 1 1/2" into the wood framing. For 2X wood frame substrate (min. S.G. = 0.42).
3. Install corrosion resistant 1-#8 X 2" screws through each hinge into rough opening.
4. Install corrosion resistant 2-#8 X 2" screws through each strike plate into rough opening.

This schedule addresses only the fasteners required to anchor the window to achieve the rated design pressure up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the door or go to www.jeld-wen.com.

DISCLAIMER:

This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.

General Notes:

1. The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the Florida Building Code (FBC) and the industry standard requirement for the stated conditions.
2. Buck, framing and masonry by others and is responsibility of architect or engineer of record.
3. Product has not been rated for water infiltration. If authority having jurisdiction requires that product meets this requirement, product shall be used when installed at location protected by overhang such that overhang (OH) ratio = OH length/OH height is greater or equal to 1.0.

'AS TESTED'

PROJECT ENGINEER: --	DATE: 01/29/2017	JELD-WEN 3737 Lakeport Blvd Klamath Falls, OR. 97601 Phone: (800) 535-3936			
DRAWN BY: D. Vezo	SCALE: NTS				
CHECKED BY: ----	TITLE: Aurora Inswing Opaque Door				
APPROVED BY: ----					
PART/PROJECT No.: D014325					
IDENTIFIER No. NCTL-110-17-002	PLANT NAME AND LOCATION: ----	CAD DWG. No.:	REV: 00	SHEET	