

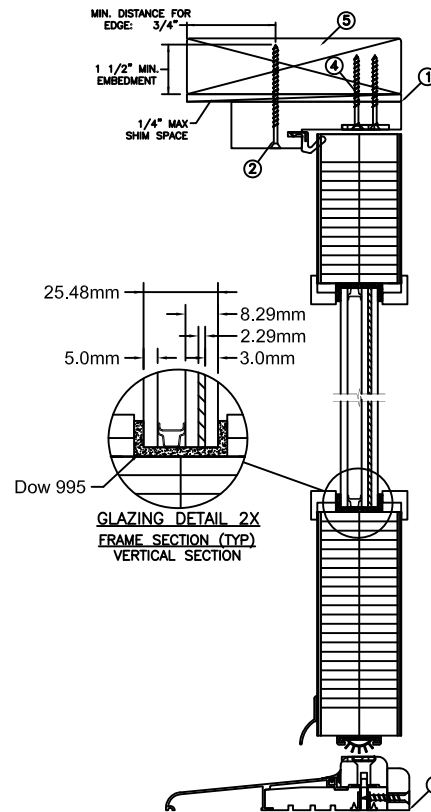
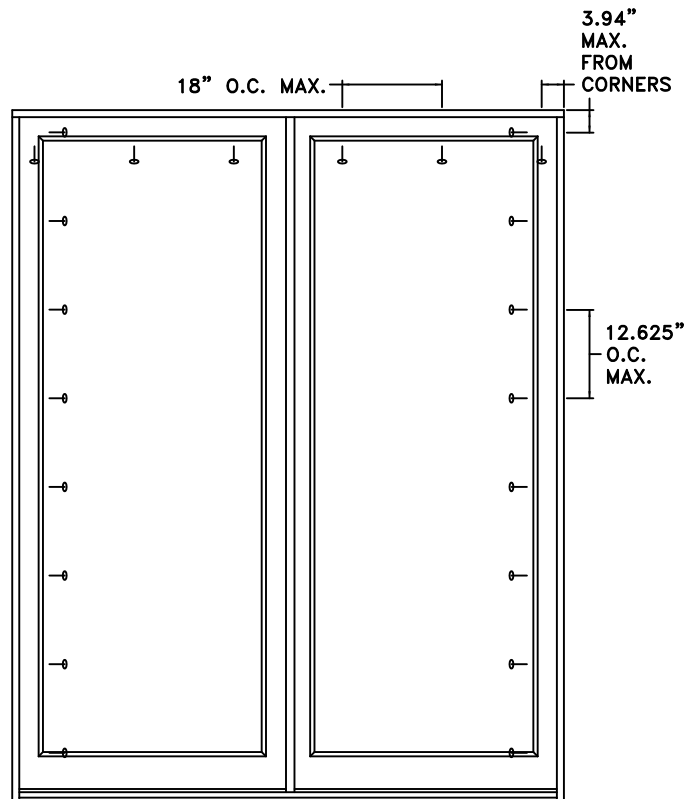


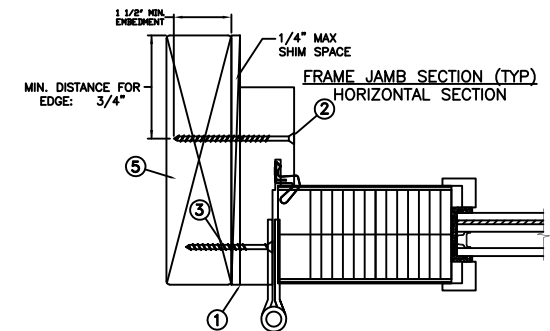

THROUGH FRAME INSTALLATION

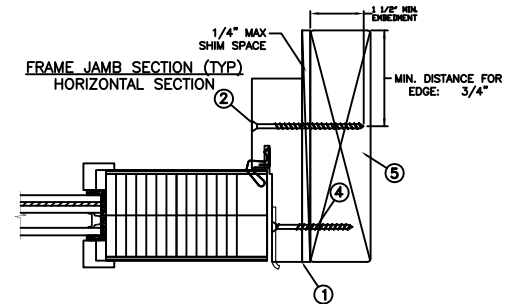

Max Frame	DP Rating	Impact
97 3/4" x 121 5/8"	+50/-65	WZ3
LARGE MISSILE IMPACT		

Installed Fastener Schedule:

1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk (typ.).
2. Use #8 PH or greater fasteners through frame with sufficient length to penetrate a minimum of 1 1/2" into the wood framing. For 2X wood frame substrate (min. S.G. = 0.42).
3. Install corrosion resistant 1-#12 X 3" screws through each hinge into rough opening.
4. Install corrosion resistant 2-#12 X 3" screws through each strike plate into rough opening.
5. Host structure (wood buck, stud framing and opening) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.

This schedule addresses only the fasteners required to anchor the door to achieve the rated design pressure up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the door or go to www.jeld-wen.com.


DISCLAIMER:

This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.




General Notes:

1. The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the Florida Building Code (FBC) excluding HVHZ and the industry standard requirement for the stated conditions.
2. Buck, framing and masonry by others and is responsibility of architect or engineer of record.
3. All glazing shall conform to ASTM E1300.
4. At minimum, glazing shall be 5.0mm tempered - 12.47mm airspace - 3.0mm annealed - 2.29mm PVB Interlayer by DuPont - 3.0mm annealed insulating glass.

Digitally signed by Hermes F. Norero, P.E.
Reason: I am approving this document
Date: 2018.04.06 12:16:17 -04'00'

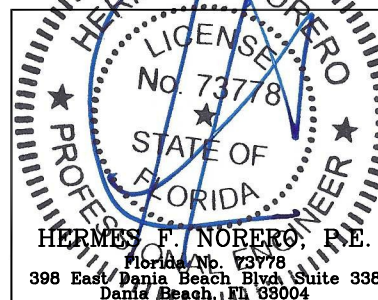

PROJECT ENGINEER: --	DATE: 02/27/2018	JELD-WEN 3737 Lakeport Blvd Klamath Falls, OR. 97601 Phone: (800) 535-3936	
DRAWN BY: D. Vezo	SCALE: NTS		
CHECKED BY: J. Hawkins	TITLE: Aurora Inswing Full Lite Door Impact		
APPROVED BY: D. Vezo			
PART/PROJECT No.: D014951			
IDENTIFIER No. 110-17-138-IS	PLANT NAME AND LOCATION: ----	CAD DWG. No.:	REV: 00 SHEET 1 OF 6

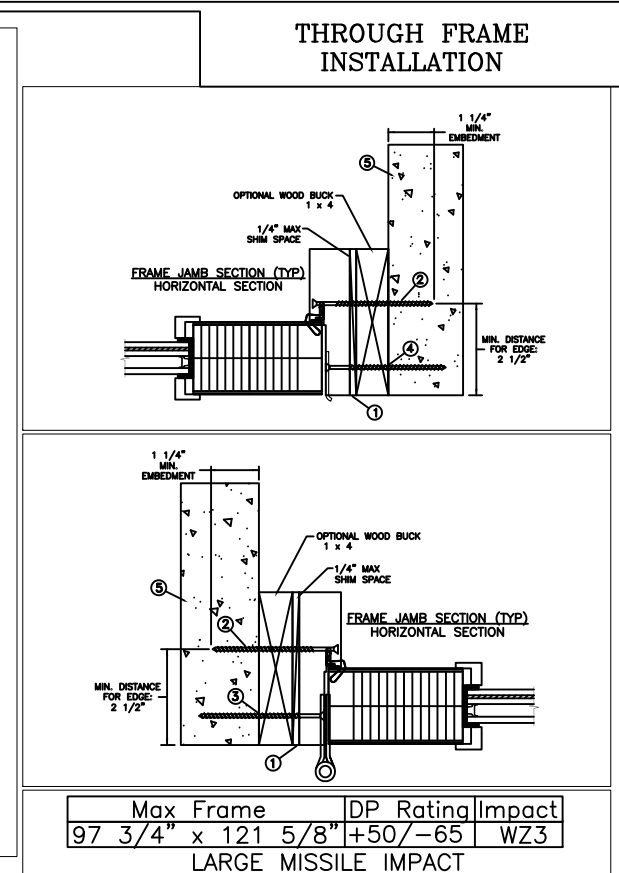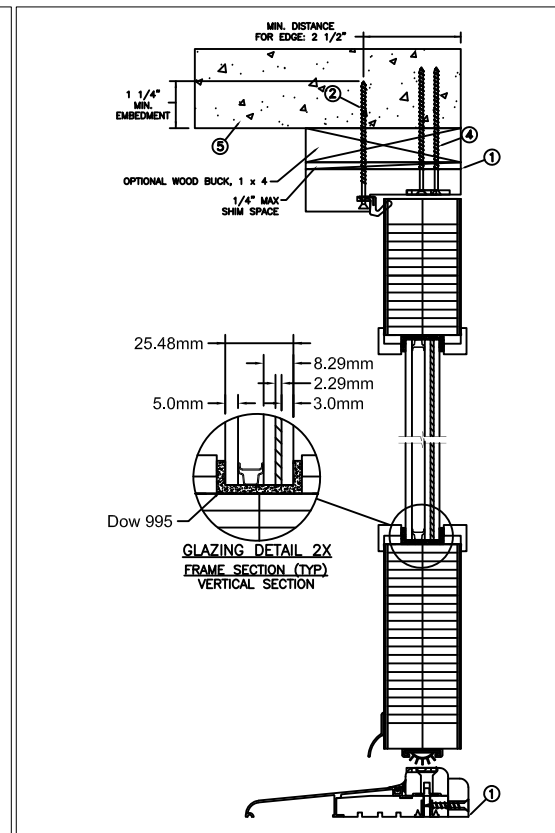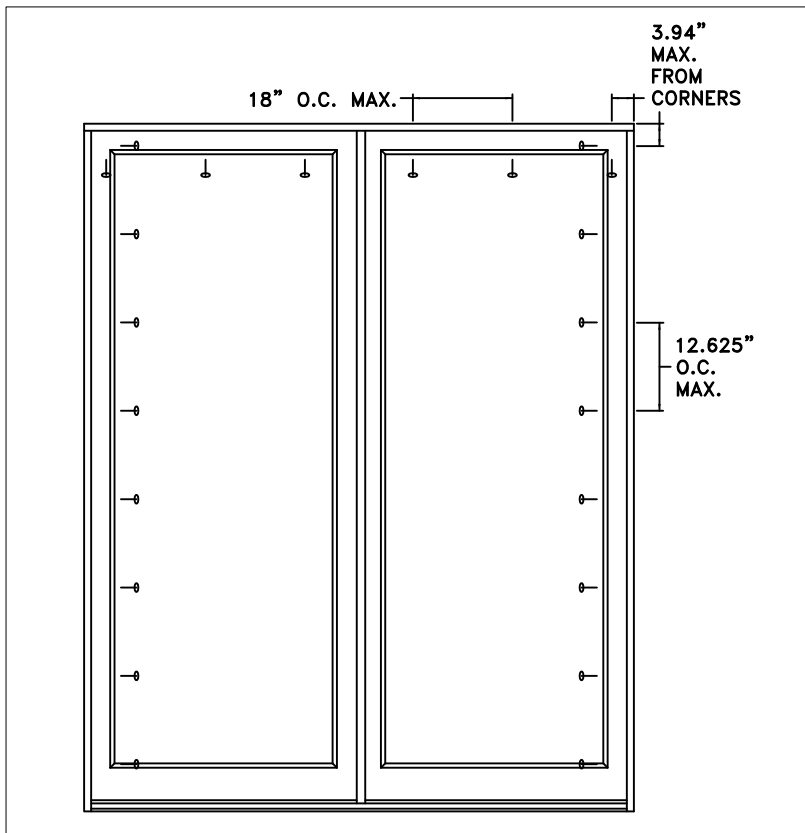

Installed Fastener Schedule:

1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk (typ.).
2. Use 3/16\" Tapcon or equivalent fasteners through frame with sufficient length to penetrate a minimum of 1 1/4\" into concrete or masonry at each location with a 2 1/2\" min. from edge distance. For concrete (min. fc = 3000 psi) or masonry substrate (min fc = 2000 psi) (CMU shall adhere to ASTM C90).
3. Install corrosion resistant 2-3/16 X 3\" tapcon screws through each hinge into rough opening.
4. Install corrosion resistant 2-3/16 X 3\" tapcon screws through each strike plate into rough opening.
5. Host structure (wood buck, stud framing and opening) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.


This schedule addresses only the fasteners required to anchor the door to achieve the rated design pressure up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the door or go to www.jeld-wen.com.

DISCLAIMER:


This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.

General Notes:

1. The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the Florida Building Code (FBC) excluding HVHZ and the industry standard requirement for the stated conditions.
2. Buck, framing and masonry by others and is responsibility of architect or engineer of record.
3. All glazing shall conform to ASTM E1300.
4. At minimum, glazing shall be 5.0mm tempered - 12.47mm airspace - 3.0mm annealed - 2.29mm PVB Interlayer by DuPont - 3.0mm annealed insulating glass.

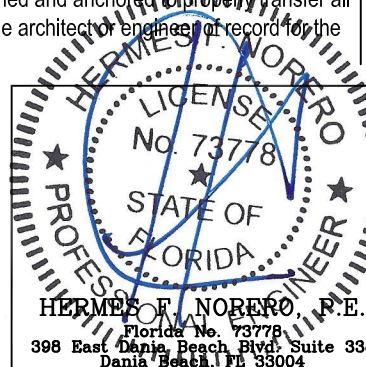

PROJECT ENGINEER: ---	DATE: 02/27/2018	JELD-WEN 3737 Lakeport Blvd Klamath Falls, OR. 97601 Phone: (800) 535-3936		
DRAWN BY: D. Vezo	SCALE: NTS			
CHECKED BY: J. Hawkins	Aurora Inswing Full Lite Door Impact			
APPROVED BY: D. Vezo				
PART/PROJECT No.: D014951				
IDENTIFIER No. 110-17-138-IS	PLANT NAME AND LOCATION: ----	CAD DWG. No.:	REV: 00	SHEET 2 OF 6

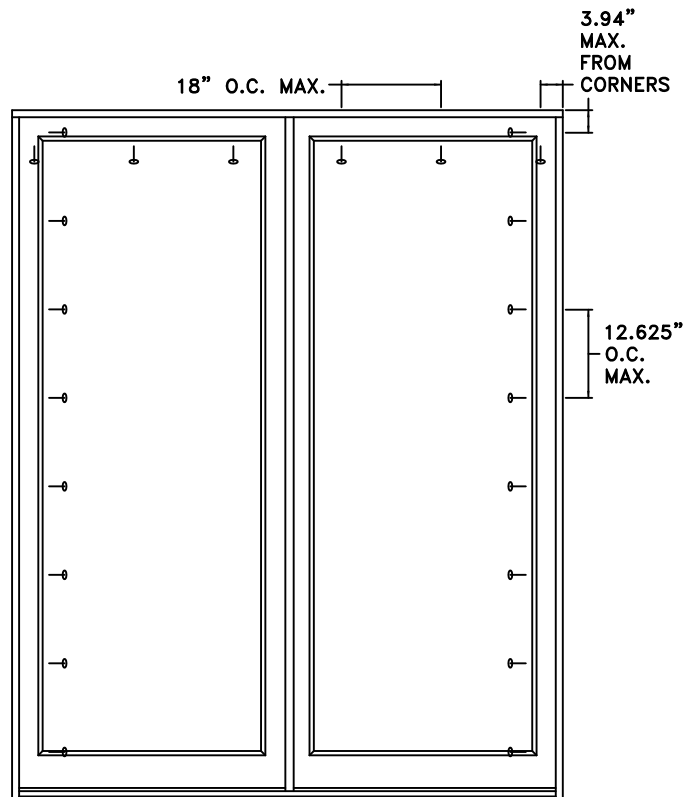



Installed Fastener Schedule:

1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk (typ.).
2. Install masonry straps to wood frame using 2-#8 corrosion resistant fasteners no more than 3.94" from each corner and 15.75" o.c. along the jambs and 18" o.c. along the head. Fasten straps to buck and secure with #8 fastener thru masonry strap into buck. Fasteners must be long enough to penetrate at least 1 1/2" into framing members. For concrete (min. fc = 3000 psi) or masonry substrate (min fc = 2000 psi) (CMU shall adhere to ASTM C90).
3. Install corrosion resistant 2-3/16 X 3" tapcon screws through each hinge into rough opening.
4. Install corrosion resistant 2-3/16 X 3" tapcon screws through each strike plate into rough opening.
5. Host structure (wood buck, stud framing and opening) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.



This schedule addresses only the fasteners required to anchor the door to achieve the rated design pressure up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the door or go to www.jeld-wen.com.

DISCLAIMER:

This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.

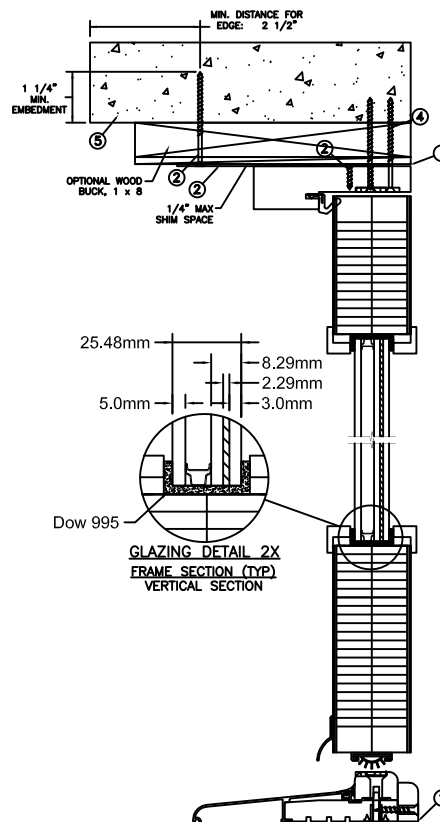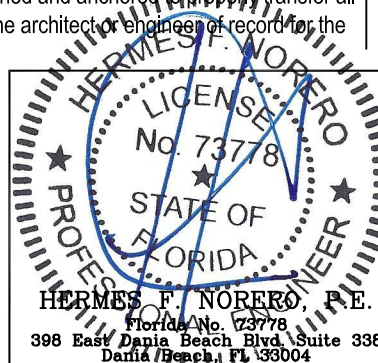

MASONRY STRAP INSTALLATION

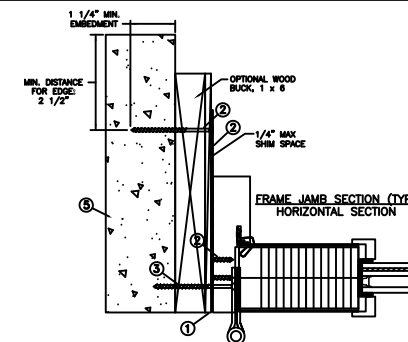
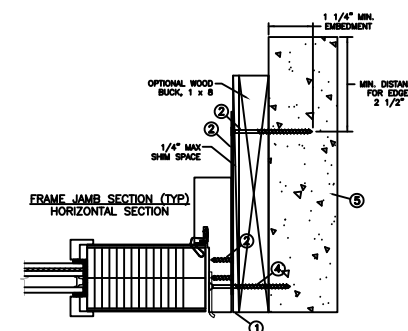


Max Frame	DP Rating	Impact
97 3/4" x 121 5/8"	+50/-65	WZ3
LARGE MISSILE IMPACT		



General Notes:

1. The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the Florida Building Code (FBC) excluding HVHZ and the industry standard requirement for the stated conditions.
2. Buck, framing and masonry by others and is responsibility of architect or engineer of record.
3. All glazing shall conform to ASTM E1300.
4. At minimum, glazing shall be 5.0mm tempered - 12.47mm airspace - 3.0mm annealed - 2.29mm PVB Interlayer by DuPont - 3.0mm annealed insulating glass.

PROJECT ENGINEER: --		DATE: 02/27/2018		JELD-WEN 3737 Lakeport Blvd Klamath Falls, OR. 97601 Phone: (800) 535-3936					
DRAWN BY: D. Vezo		SCALE: NTS							
CHECKED BY: J. Hawkins		TITLE: Aurora Inswing Full Lite Door Impact							
APPROVED BY: D. Vezo									
PART/PROJECT No.: D014951									
IDENTIFIER No. 110-17-138-IS		PLANT NAME AND LOCATION: ----		CAD DWG. No.:		REV: 00		SHEET 3 OF 6	

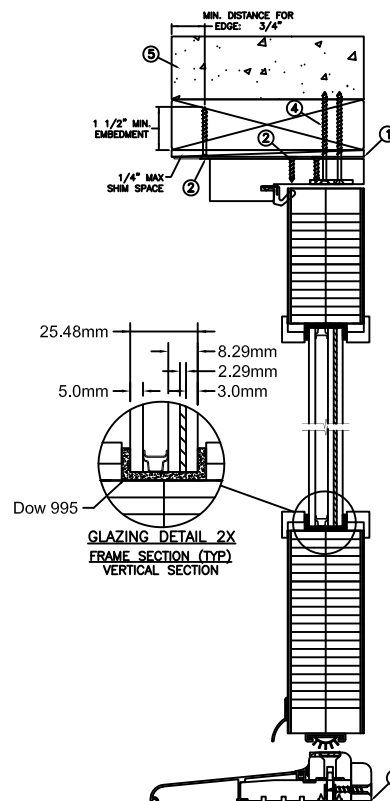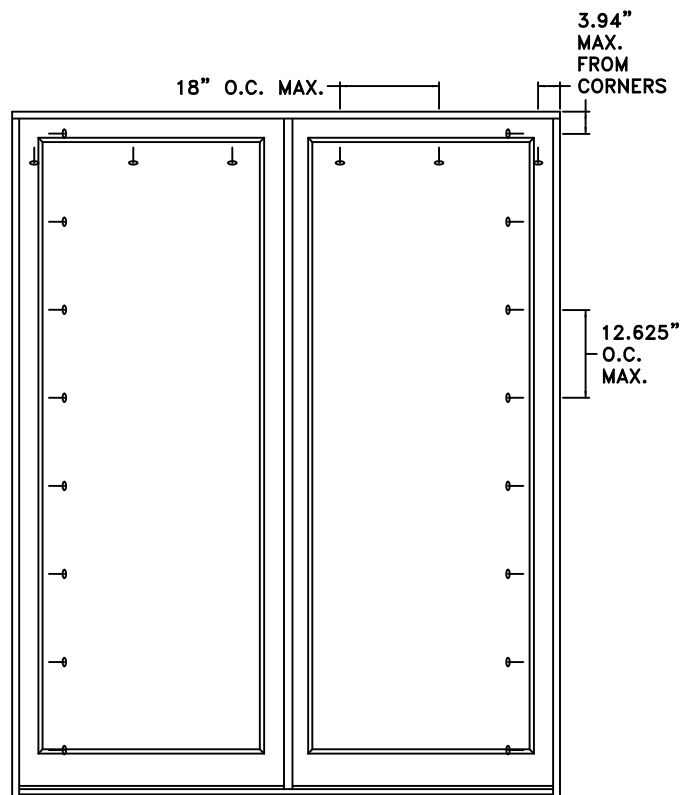

MASONRY STRAP INSTALLATION

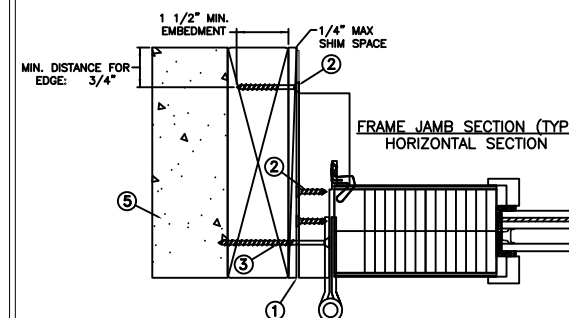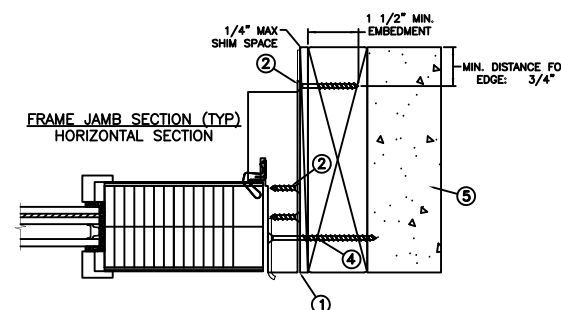

Max Frame	DP Rating	Impact
97 3/4" x 121 5/8"	+50/-65	WZ3

LARGE MISSILE IMPACT

Installed Fastener Schedule:

1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk (typ.).
2. Use 3/16" Tapcon or equivalent fasteners through strap with sufficient length to penetrate a minimum of 1 1/4" into concrete or masonry at each location with a 2 1/2" min. from edge distance. 2-#8 x 1/2" PH screws through the strap into frame. For concrete (min. $f_c = 3000$ psi) or masonry substrate (min $f_c = 2000$ psi) (CMU shall adhere to ASTM C90).
3. Install corrosion resistant 2-#12 X 3" screws through each hinge into rough opening.
4. Install corrosion resistant 2-#12 X 3" screws through each strike plate into rough opening.
5. Host structure (wood buck, stud framing and opening) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.


This schedule addresses only the fasteners required to anchor the door to achieve the rated design pressure up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the door or go to www.jeld-wen.com.

DISCLAIMER:




This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.

General Notes:

1. The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the Florida Building Code (FBC) excluding HVHZ and the industry standard requirement for the stated conditions.
2. Buck, framing and masonry by others and is responsibility of architect or engineer of record.
3. All glazing shall conform to ASTM E1300.
4. At minimum, glazing shall be 5.0mm tempered - 12.47mm airspace - 3.0mm annealed - 2.29mm PVB Interlayer by DuPont - 3.0mm annealed insulating glass.

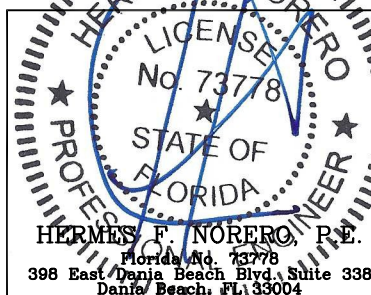

PROJECT ENGINEER: --	DATE: 02/27/2018	3737 Lakeport Blvd Klamath Falls, OR. 97601 Phone: (800) 535-3936 JELD-WEN			
DRAWN BY: D. Vezo	SCALE: NTS				
CHECKED BY: J. Hawkins	TITLE: Aurora Inswing Full Lite Door Impact				
APPROVED BY: D. Vezo					
PART/PROJECT No.: D014951					
IDENTIFIER No. 110-17-138-IS	PLANT NAME AND LOCATION: ----	CAD DWG. No.:	REV: 00	SHEET 4 OF 6	

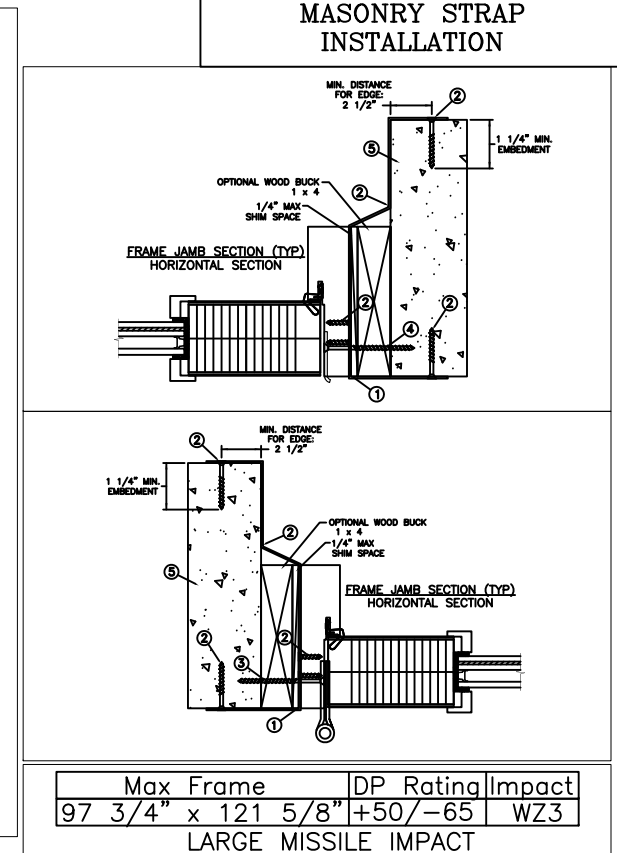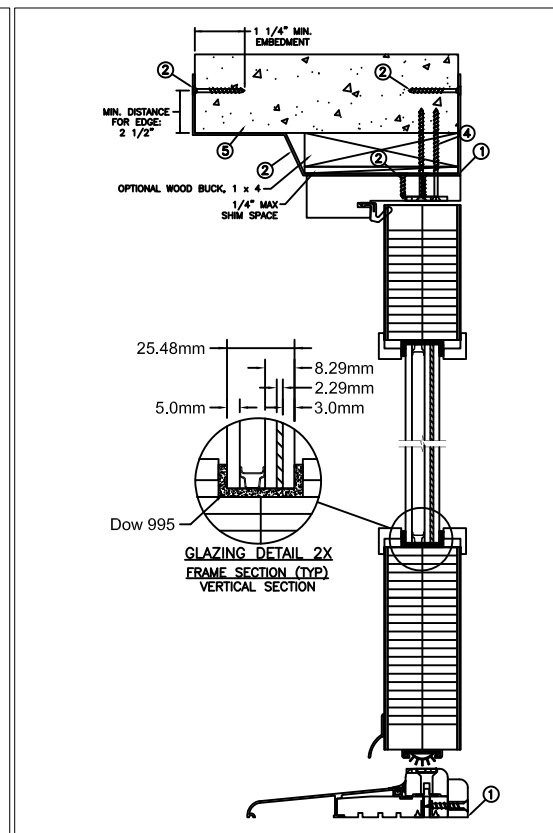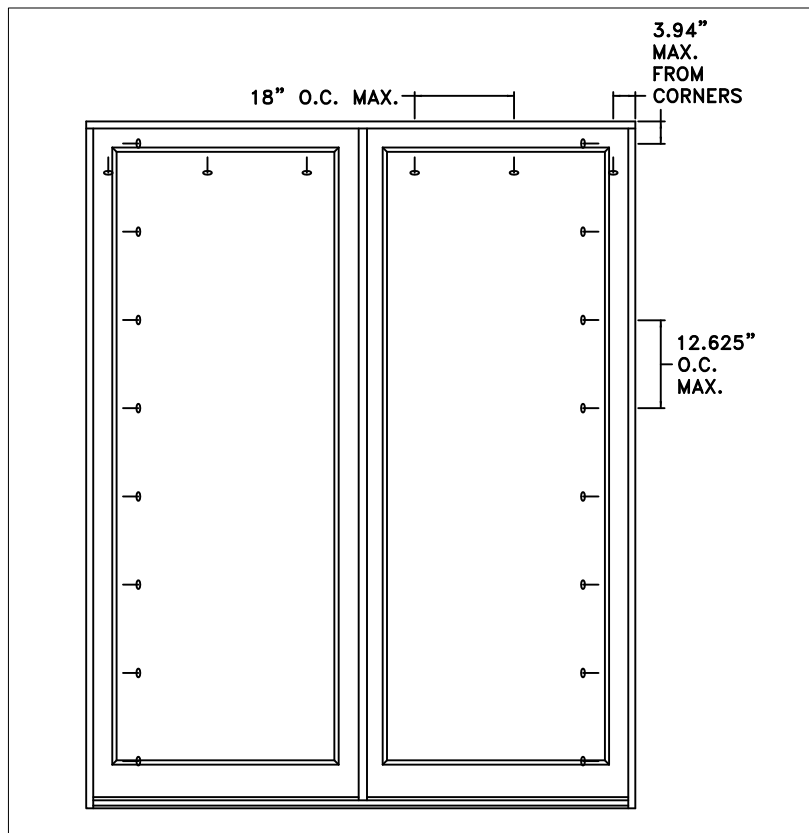

Installed Fastener Schedule:

1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk (typ.).
2. Use 3/16" Tapcon or equivalent fasteners through the interior and exterior of the strap with sufficient length to penetrate a minimum of 1 1/4" into concrete or masonry at each location with a 2 1/2" min. from edge distance. 2-#8 x 1/2" PH screws through the strap into frame. For concrete (min. fc = 3000 psi) or masonry substrate (min fc = 2000 psi) (CMU shall adhere to ASTM C90).
3. Install corrosion resistant 2-3/16 X 3" tapcon screws through each hinge into rough opening.
4. Install corrosion resistant 2-3/16 X 3" tapcon screws through each strike plate into rough opening.
5. Host structure (wood buck, stud framing and opening) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.


This schedule addresses only the fasteners required to anchor the door to achieve the rated design pressure up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the door or go to www.jeld-wen.com.

DISCLAIMER:

This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.



General Notes:

1. The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the Florida Building Code (FBC) excluding HVHZ and the industry standard requirement for the stated conditions.
2. Buck, framing and masonry by others and is responsibility of architect or engineer of record.
3. All glazing shall conform to ASTM E1300.
4. At minimum, glazing shall be 5.0mm tempered - 12.47mm airspace - 3.0mm annealed - 2.29mm PVB Interlayer by DuPont - 3.0mm annealed insulating glass.


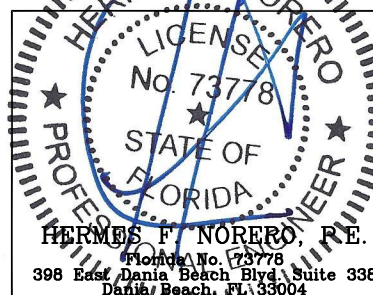


PROJECT ENGINEER: --		DATE: 02/27/2018	
DRAWN BY: D. Vezo		SCALE: NTS	
CHECKED BY: J. Hawkins		TITLE:	
APPROVED BY: D. Vezo		JELD-WEN Aurora Inswing Full Lite Door Impact	
PART/PROJECT No.: D014951			
IDENTIFIER No. 110-17-138-IS		PLANT NAME AND LOCATION: ----	CAD DWG. No.:
		REV: 00	SHEET 5 OF 6

3737 Lakeport Blvd
Klamath Falls, OR. 97601
Phone: (800) 535-3936

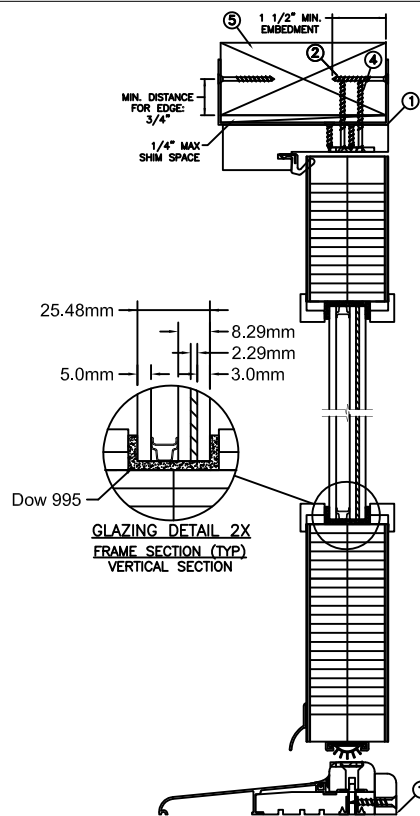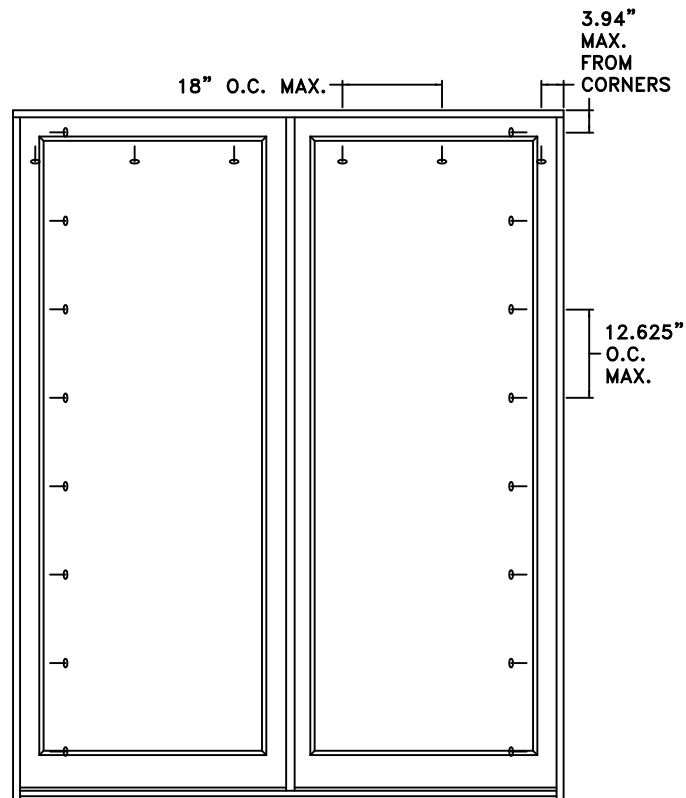

MASONRY STRAP INSTALLATION

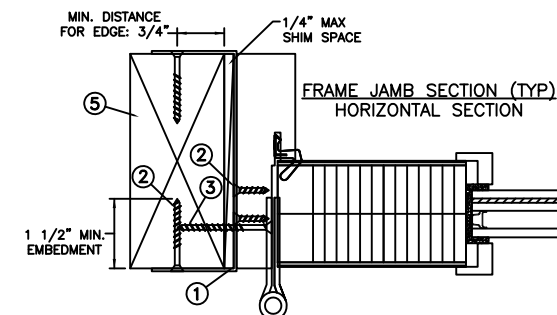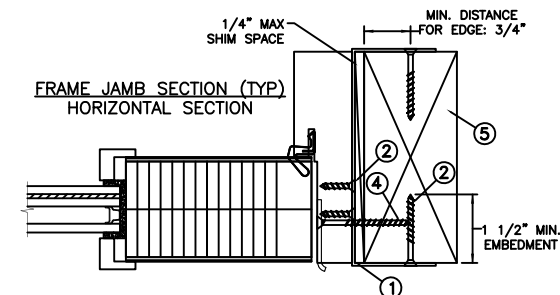

Max Frame	DP Rating	Impact
97 3/4" x 121 5/8"	+50/-65	WZ3
LARGE MISSILE IMPACT		

Installed Fastener Schedule:

1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk (typ.).
2. Install masonry straps to wood frame using #8 corrosion resistant fasteners no more than 3.94" from each corner and 15.75" o.c. along the jambs and 18" o.c. along the head. Bend straps around buck to the interior and exterior, and secure with #8 fastener thru masonry strap into buck. Fasteners must be long enough to penetrate at least 1 1/2" into framing members. Minimum specific gravity = (Min. S.G. = 0.42).
3. Install corrosion resistant 2-#12 X 3" screws through each hinge into rough opening.
4. Install corrosion resistant 2-#12 X 3" screws through each strike plate into rough opening.
5. Host structure (wood buck, stud framing and opening) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.


This schedule addresses only the fasteners required to anchor the door to achieve the rated design pressure up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the door or go to www.jeld-wen.com.

DISCLAIMER:

This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.

General Notes:

1. The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the Florida Building Code (FBC) excluding HVHZ and the industry standard requirement for the stated conditions.
2. Buck, framing and masonry by others and is responsibility of architect or engineer of record.
3. All glazing shall conform to ASTM E1300.
4. At minimum, glazing shall be 5.0mm tempered - 12.47mm airspace - 3.0mm annealed - 2.29mm PVB Interlayer by DuPont - 3.0mm annealed insulating glass.

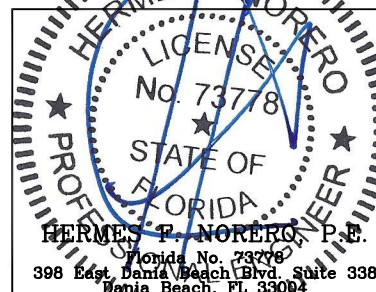

PROJECT ENGINEER: --		DATE: 02/27/2018		JELD-WEN 3737 Lakeport Blvd Klamath Falls, OR. 97601 Phone: (800) 535-3936		
DRAWN BY: D. Vezo		SCALE: NTS				
CHECKED BY: J. Hawkins		Aurora Inswing Full Lite Door Impact				
APPROVED BY: D. Vezo						
PART/PROJECT No.: D014951						
IDENTIFIER No. 110-17-138-IS		PLANT NAME AND LOCATION: ----		CAD DWG. No.:	REV: 00	SHEET 6 OF 6