

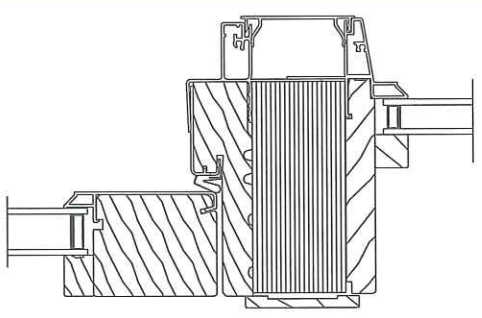


Weather Shield
Windows & Doors
8517 CONTEMPORARY DOOR
HORIZONTAL MULLION
INSTALLATION


THIS SCHEDULE SHOWS ONLY THE ADDITIONAL FASTENERS REQUIRED TO ANCHOR THE MULLION. EACH INDIVIDUAL WINDOW OR DOOR REQUIRES ANCHORAGE ACCORDING TO THE SCHEDULE FOR THAT PRODUCT AND ALLOWABLE ANCHORAGE METHOD.

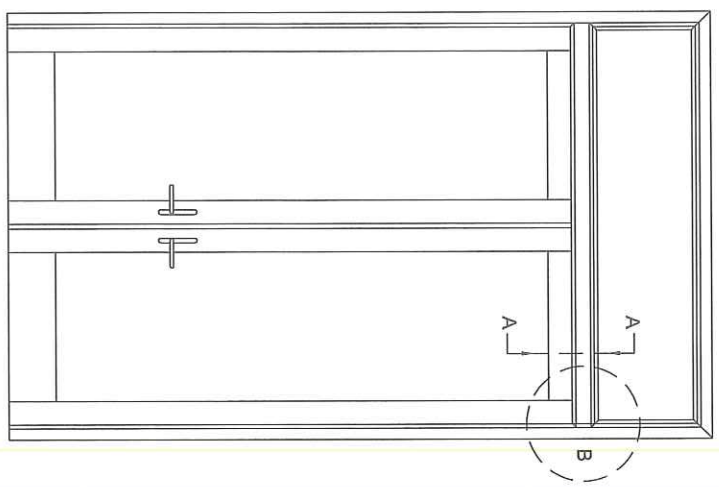


MULLION SECTION AT A-A
2" LVL REINFORCEMENT
SHOWN
OTHER REINFORCEMENT
AVAILABLE.

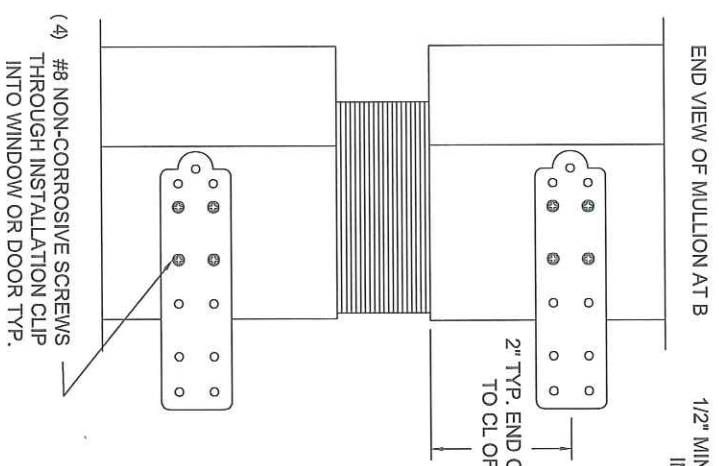

(4) #8 NON-CORROSIVE SCREWS
THROUGH INSTALLATION CLIP
INTO WINDOW OR DOOR TYP.

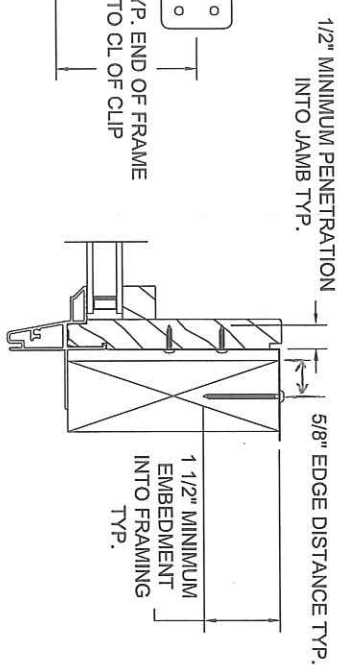

PLAN VIEW OF TRANSOM AT B
DIRECT SET TRANSOM SHOWN
SASHED TRANSOMS AVAILABLE

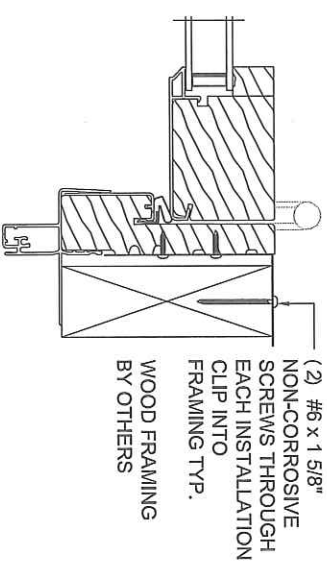

PLAN VIEW OF DOOR AT B

THIS SCHEDULE ADDRESSES ONLY THE FASTENERS REQUIRED TO ANCHOR THE MULLION (S) TO ACHIEVE THE RATED DESIGN PRESSURE. THOROUGHLY READ AND FOLLOW MANUFACTURERS INSTALLATION INSTRUCTIONS RECEIVED WITH UNIT. THIS GUIDE DOES NOT ADDRESS THE SEALING CONSIDERATIONS THAT MAY ARISE IN DIFFERENT WALL CONDITIONS.

6317 CONTINGENT INSURING DOOR										
		DRAWN BY:		DATE:		TITLE:				
		JVG		6-3-2016		HORIZONTAL MULLION ANCHORAGE				
						DWG. NO.:		REV		
						J101				
						PROPERTY OF WEATHER SHIELD MFG., INC. DRAWING IS NOT TO BE REPRODUCED OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, WITHOUT THE WRITTEN PERMISSION OF WEATHER SHIELD MFG., INC. ALL RIGHTS RESERVED.				
REV	DATE	DESCRIPTION		PCR NO.	ENG	PDR #:	PROFILE #:	SCALE: 1:1	SHEET NAME: Sheet1	SHEET 1 OF 1