



Windows & Doors

PLAN VIEW OF TRANSOM AT B
DIRECT SET TRANSOM SHOWN
SASHED TRANSOMS AVAILABLE

A technical drawing of a window frame. It shows a cross-section of the frame with a central vertical pane. Two arrows labeled 'A' point to the vertical frame members on either side of the pane. A dashed circle labeled 'B' is drawn at the bottom of the frame, indicating a specific detail or assembly point.

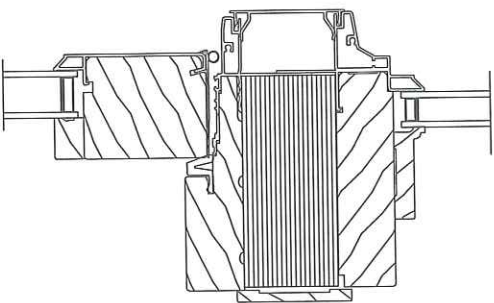


MULLION SECTION AT A-A
2" LVL REINFORCEMENT
SHOWN
OTHER REINFORCEMENT
AVAILABLE.

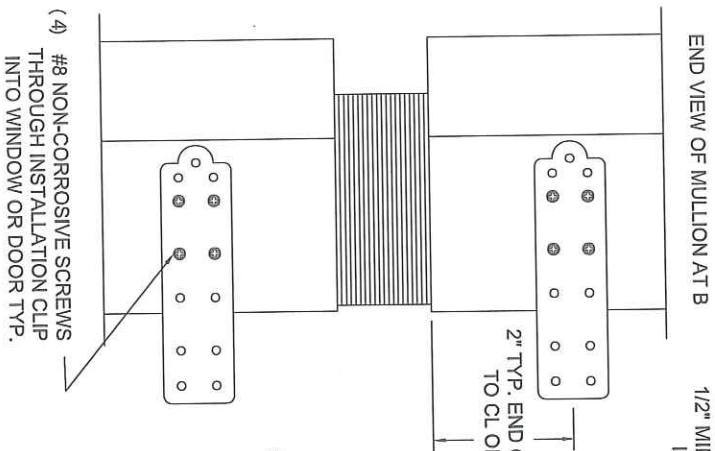

END VIEW OF MULLION AT B

1/2" MINIMUM PENETRATION
INTO JAMB TYP.

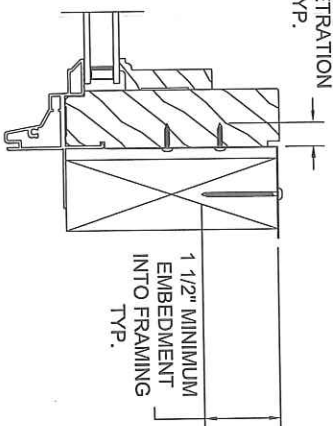


2" TYP. END OF FRAME
TO CL OF CLIP

1 1/2" MINIMUM
EMBEDMENT
INTO FRAMING
TYP.

PLAN VIEW OF DOOR AT B

5/8" EDGE DISTANCE TYP. — (2) #6 x 1 5/8"
NON-CORROSIVE

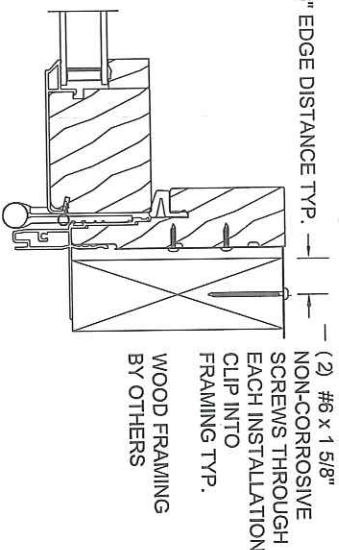

WOOD FRAMING
BY OTHERS

THIS SCHEDULE ADDRESSES ONLY THE FASTENERS REQUIRED TO ANCHOR THE MULLION (S) TO ACHIEVE THE RATED DESIGN PRESSURE. THOROUGHLY READ AND FOLLOW MANUFACTURERS INSTALLATION INSTRUCTIONS RECEIVED WITH UNIT. THIS GUIDE DOES NOT ADDRESS THE SEALING CONSIDERATIONS THAT MAY ARISE IN DIFFERENT WALL CONDITIONS.

[illegible]