
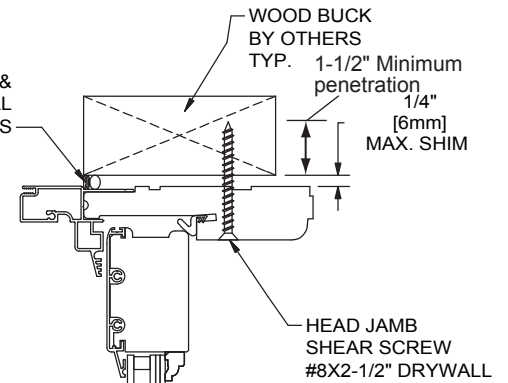


HEAD AND JAMB SHEAR SCREWS:
 OPENING TYPE (SUBSTRATE) = 2X_WOOD FRAME OR BUCK
 MINIMUM EMBED 1-1/2"
 MINIMUM EDGE DISTANCE 1"
 SIDE JAMB (SHEAR) SCREWS = #8X2-1/2"

NOTE:
 Stainless Steel fasteners are recommended.


left side of TOP VIEW shown
 right side typical

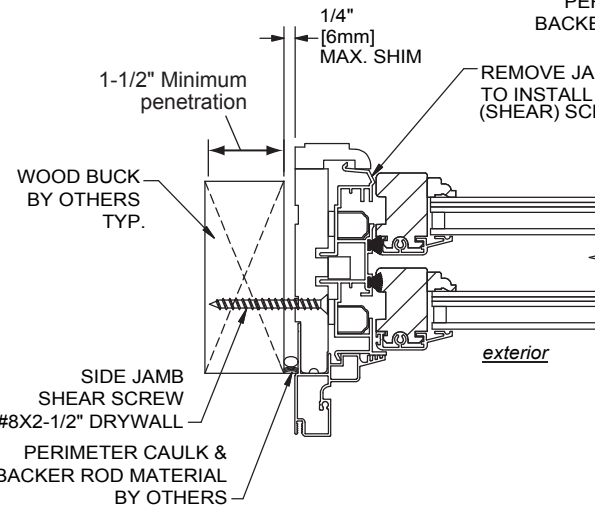

SIDE VIEW
 interior



WEATHER SHIELD 1104/1105 Double Hung Tilt "Impact" Through the Jamb Installation

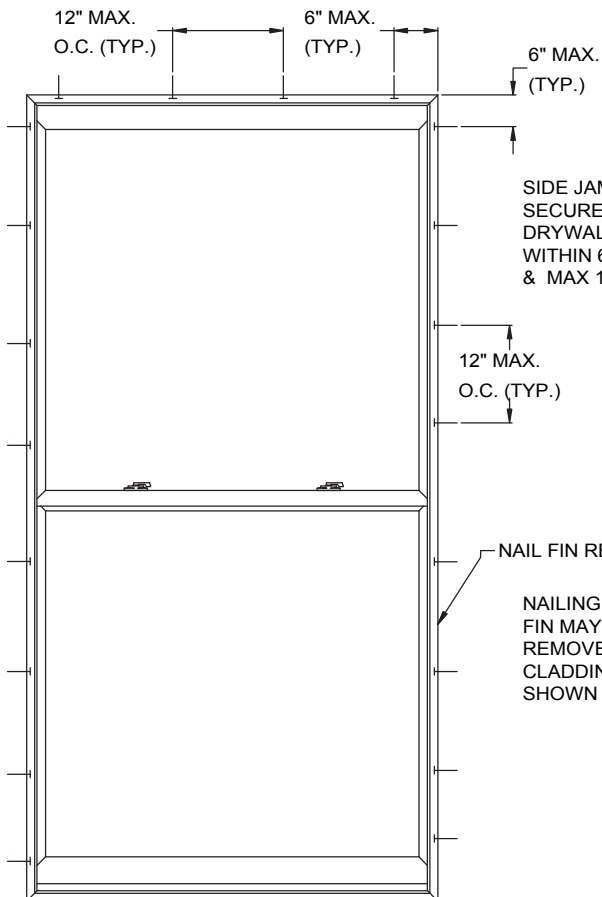

NAIL FIN REMOVED

NAILING FIN IS OPTIONAL;
 FIN MAY BE SCORED &
 REMOVED FROM
 CLADDING AS
 SHOWN

DRAWING NOT TO SCALE

WEATHER SHIELD Windows & Doors

PRODUCTS: **1104/1105 Double Hung Tilt Impact**

TITLE: Through the Jamb Installation Instructions

DWG. NO. 01-3265-08

PCN 28630