



REFERENCE DRAWING NUMBER 45-01387 FOR THE INDIVIDUAL UNIT NAIL FIN INSTALLATION METHOD  
 REFERENCE DRAWING NUMBER 45-01366 FOR THE INDIVIDUAL UNIT INSTALLATION CLIP INSTALLATION METHOD  
 REFERENCE DRAWING NUMBER 45-01385 FOR THE INDIVIDUAL UNIT THROUGH THE JAMB INSTALLATION METHOD



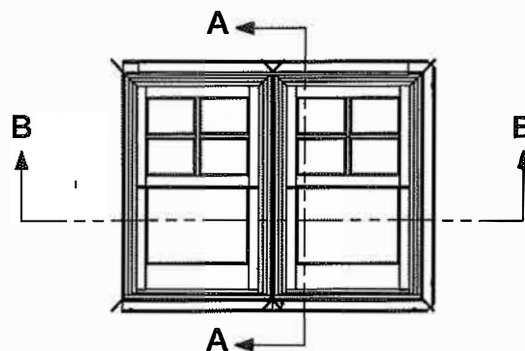


## Weather Shield Windows & Doors

1104, 1105, 8120  
 DOUBLEHUNG, TRANSOM, AND PICTURE  
 MULLION INSTALLATION

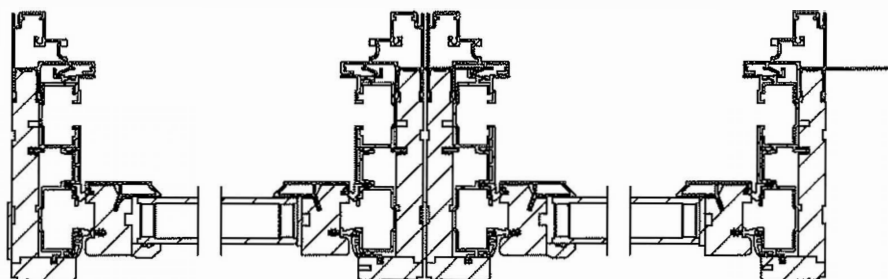

SECTION B-B  
 SCALE 1 : 4

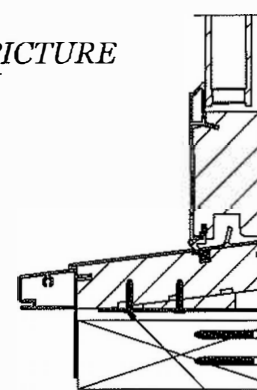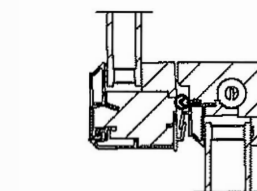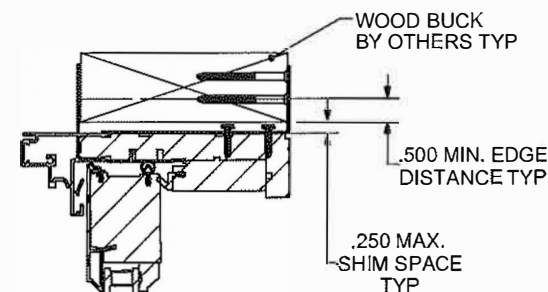

(4) #8 x 3/4" NON-CORROSIVE SCREWS  
 THROUGH INSTALLATION CLIP  
 (1/2" MIN. EMBEDMENT INTO JAMB)  
 TYPICAL

.250 SHIM

(4) #6 x 1-5/8" NON-CORROSIVE SCREWS  
 THROUGH INSTALLATION CLIP  
 INTO FRAMING MEMBER TYP  
 1-1/2" Minimum Embedment

THIS SCHEDULE ADDRESSES ONLY THE FASTENERS REQUIRED TO ANCHOR THE WINDOW(S) TO ACHIEVE THE RATED DESIGN PRESSURE. THOROUGHLY READ AND FOLLOW MANUFACTURERS INSTALLATION INSTRUCTIONS RECEIVED WITH UNIT. THIS GUIDE DOES NOT ADDRESS THE SEALING CONSIDERATIONS THAT MAY ARISE IN DIFFERENT WALL CONDITIONS.

| TOLERANCES UNLESS SPECIFIED: |                     |
|------------------------------|---------------------|
| INCHES                       | ANGLE               |
| X ± .1"                      | XX ± 1°             |
| XX ± .03"                    | XX.X ± .5° (1/2°)   |
| XXX ± .015"                  | XX.XX ± .25° (1/4°) |

## Weather Shield Windows & Doors

PRODUCTS:  
 1104, 1105

DRAWN BY:  
 SRS/JRA

DATE:  
 12/16/2015

TITLE:  
 INSTALLATION INSTRUCTIONS - TWIN

DWG NO.:  
 45-01290

REV

SCALE: 1:24 SHEET NAME: Sheet1

SHEET 1 OF 1

| REV | DATE | DESCRIPTION | PCR NO. | ENG | PDR #: | 10022 | PROFILE #: |
|-----|------|-------------|---------|-----|--------|-------|------------|
|     |      |             |         |     |        |       |            |
|     |      |             |         |     |        |       |            |
|     |      |             |         |     |        |       |            |

DO NOT SCALE DRAWING