



HEAD AND JAMB SCREWS:
OPENING TYPE (SUBSTRATE) = 2X_WOOD FRAME OR BUCK
MINIMUM EMBED 1-1/2"
SIDE JAMB SCREW = #8X5/8"
(1-1/2" MIN. EMBEDMENT)

NOTE:
Stainless Steel fasteners are recommended.


Weather Shield Windows & Doors

8120, 1104, 1105 Double Hung Tilt IMPACT NAIL FIN INSTALLATION

NAIL FIN
SECURE WITH #8X5/8" SCREWS
8" TO 10" AROUND PERIMETER
(1-1/2" MIN. EMBEDMENT)

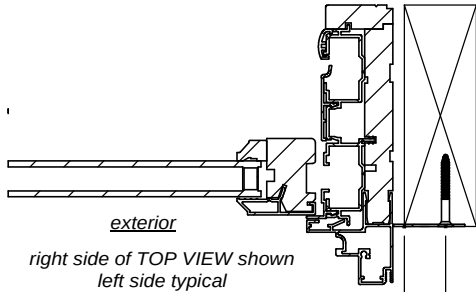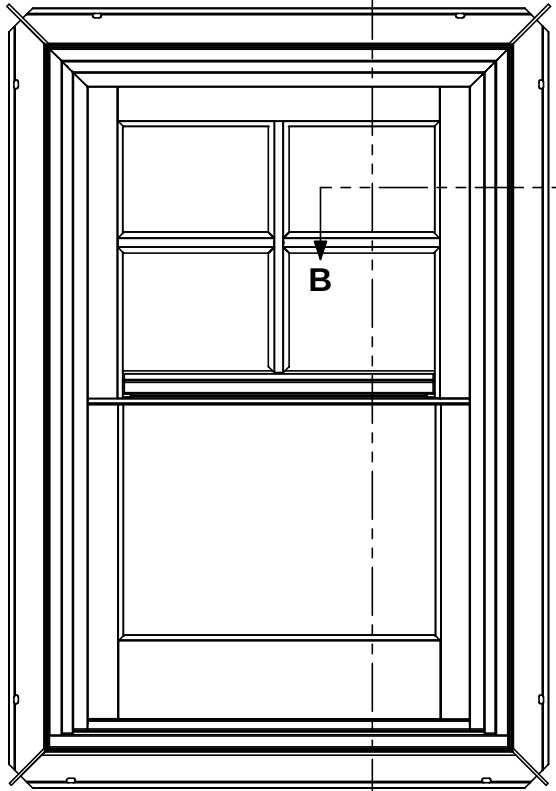

.625" MIN. EDGE
DISTANCE TYP.

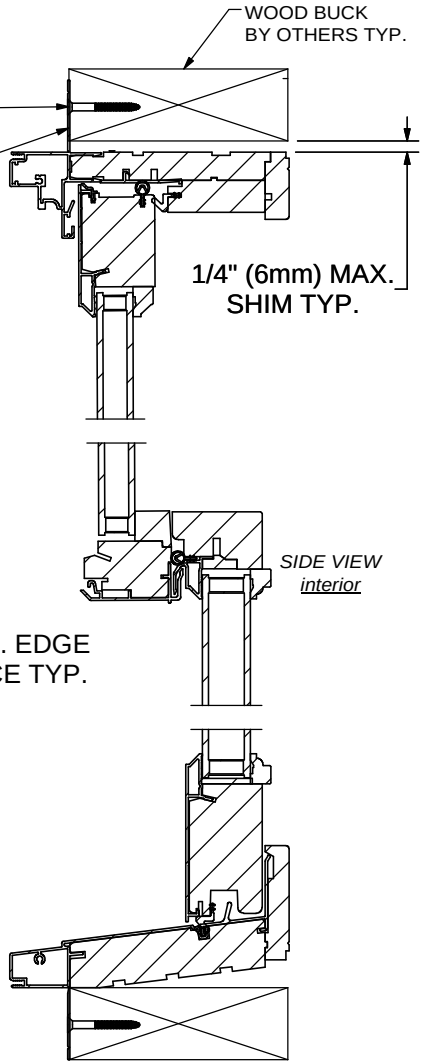

THIS SCHEDULE ADDRESSES ONLY THE FASTENERS REQUIRED TO ANCHOR THE WINDOW(S) TO ACHIEVE THE RATED DESIGN PRESSURE. THOROUGHLY READ AND FOLLOW MANUFACTURERS INSTALLATION INSTRUCTIONS RECEIVED WITH UNIT. THIS GUIDE DOES NOT ADDRESS THE SEALING CONSIDERATIONS THAT MAY ARISE IN DIFFERENT WALL CONDITIONS.

DRAWING NOT TO SCALE

TOLERANCES UNLESS SPECIFIED:	
INCHES	ANGLE
.X ± .1"	XX ± 1°
.XX ± .03"	XX.X ± .5° (1/2°)
.XXX ± .015"	XX.XX ± .25° (1/4°)

Weather Shield Windows & Doors

PRODUCTS: 1104, 1105		TITLE: INSTALLATION INSTRUCTION -	
DRAWN BY: SRS/JRA	DATE: 11/25/2015	DWG NO.: 45-01387	
PROPERTY OF WEATHER SHIELD MFG., INC. DRAWING IS NOT TO BE REPRINTED OR SUBMITTED FOR USE OUTSIDE OF WEATHER SHIELD MFG., INC. ALL RIGHTS RESERVED.		SCALE: 1:8	SHEET NAME: Sheet1
		SHEET 1	OF 1

DO NOT SCALE DRAWING