



Breakaway Flood Vent Installation Guide


MODEL #CSBA816

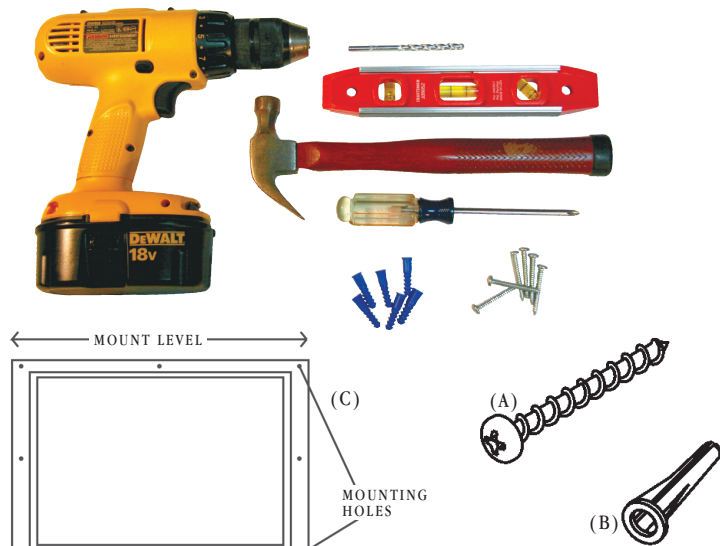

STEP 1.

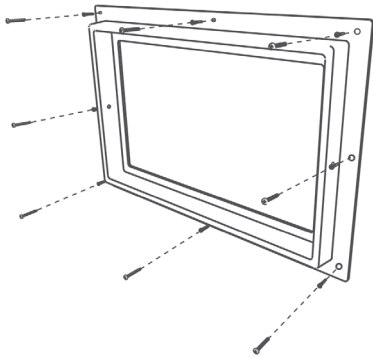

STEP 2.

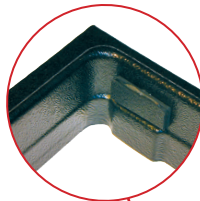

STEP 3.



What you'll need

Power drill
1/4" Masonry Bit
Phillips Head Screwdriver
Hammer
Level

Included in the kit:

A. Screws
B. Anchors
C. Frame
D. Louver

Step 1. Frame installation

BALANCE frame (C) centered over crawl space opening. With frame (C) in place, drill top center hole.
INSERT anchor (B) into hole in wall.
SECURE top center screw (A).
LEVEL frame (C). With frame (C) held in place, drill remaining holes.
INSERT remaining anchors (B) into wall.
SECURE all screws (A).

Step 2

INSERT (D) louver into frame. Snap louver into place.