




THROUGH FRAME INSTALLATION

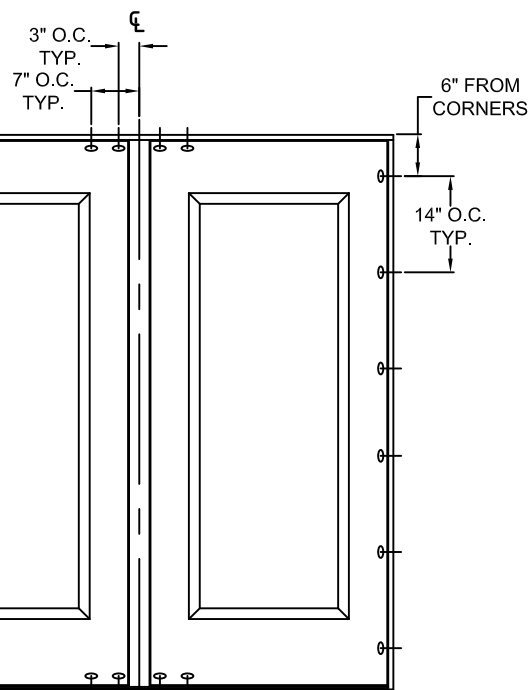

TYPICAL ELEVATION WITH FASTENER SPACING

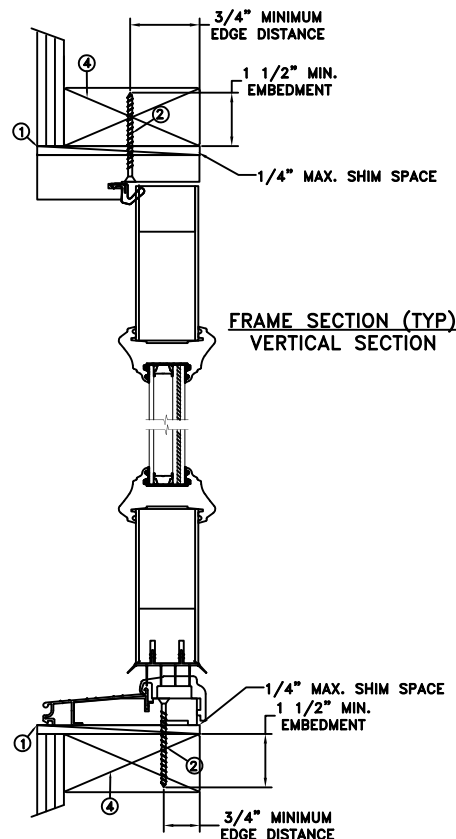

FRAME SECTION (TYP)
VERTICAL SECTION

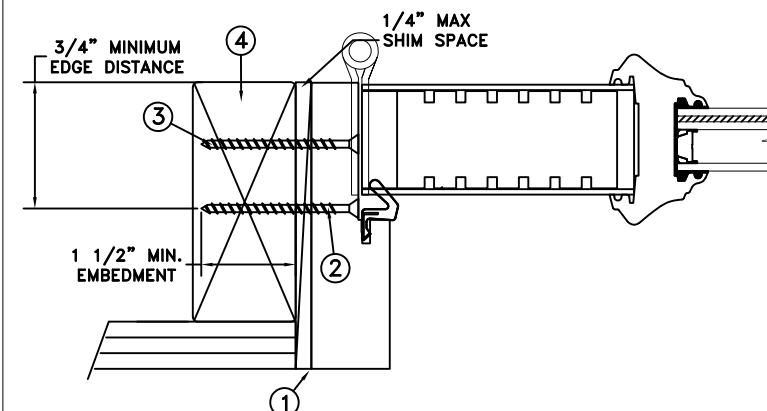

FRAME JAMB SECTION (TYP)
HORIZONTAL SECTION

MAXIMUM FRAME	DP	IMPACT
74" x 80.75"	+50/-50	YES

WINDZONE 3

Installation Notes:

1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
2. Use #10 PH or greater fastener through the head & side jambs with sufficient length to penetrate a minimum of 1-1/2" into the wood framing. For 2x wood frame substrate (min. S.G. = 0.42).
3. Install one (1) - #12 x 2-1/2" PFH wood screw through each hinge plate into rough opening.
4. Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.


General Notes:

1. The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
2. All glazing shall conform to ASTM E1300.
3. Glazing shall be, 6.4mm tempered - 8.7mm airspace - 4.7mm annealed - .76mm PVB Interlayer by Saflex - 4.7mm annealed glass.
4. Use structural or composite shims where required.

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.

DISCLAIMER:

This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.

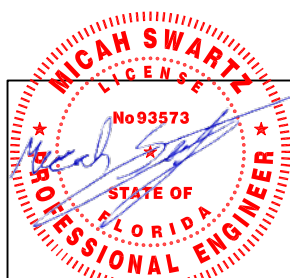


10/05/26 MICAH SWARTZ, P.E.

PE No. 93573
5134 Cambridge Ct.
Klamath Falls, OR. 97603
(541) 363-8075


This item has been digitally signed and sealed by Micah Swartz, P.E. on the date adjacent to the seal. Printed copies of this document are not considered signed and sealed and the signature must be verified on any electronic copies

	DATE: 09/30/2026	JELD-WEN 3737 LAKEPORT BLVD. KLAMATH FALLS OR, 97601 PHONE: (800) 535-3936	
DRAWN BY: M.HAM	SCALE: NTS		
CHECKED BY: M.HAM	Architectural Fiberglass Swinging Door Inswing 2 Panel		
APPROVED BY: J.KANTOLA			
RECORD No.: D014722			
REPORT No.: TEL 01681715	CAD DWG. No.: —	REV: D	SHEET 1 of 5


MASONRY STRAP INSTALLATION

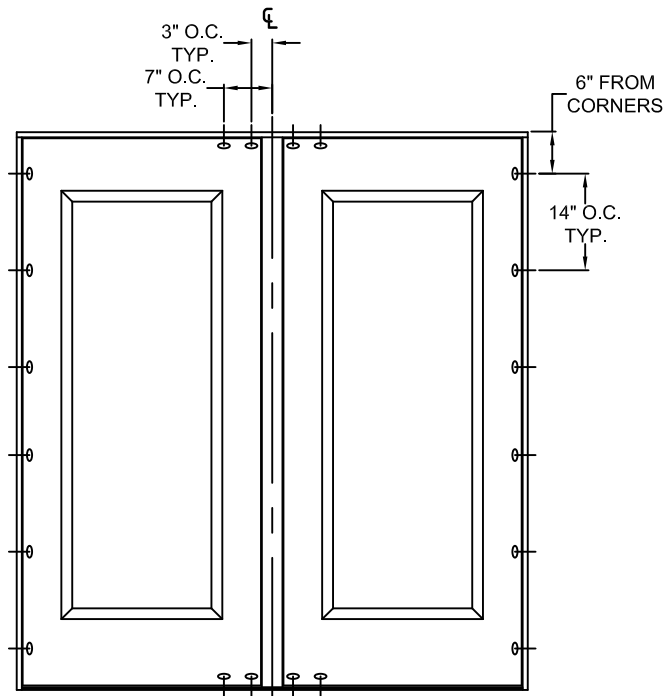

TYPICAL ELEVATION WITH FASTENER SPACING

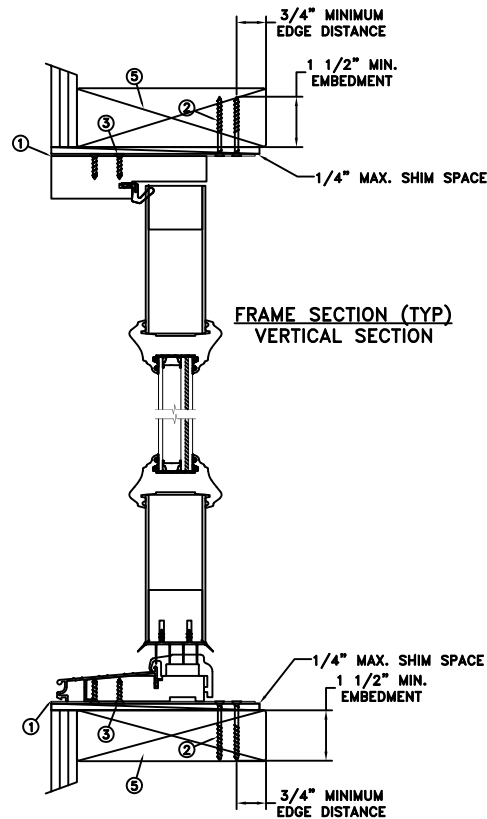

FRAME SECTION (TYP)
VERTICAL SECTION

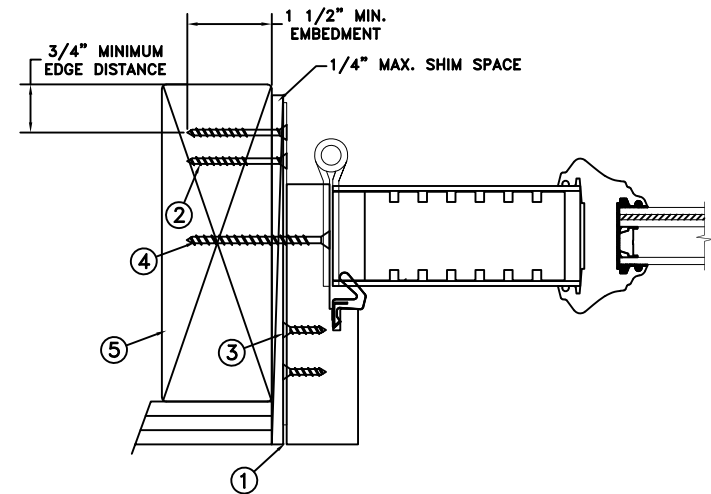

FRAME JAMB SECTION (TYP)
HORIZONTAL SECTION

MAXIMUM FRAME	DP	IMPACT
74" x 80.75"	+50/-50	YES

WINDZONE 3

Installation Notes:

1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
2. Use two (2) - #10 PFH or larger fasteners through masonry strap with sufficient length to penetrate a minimum of 1-1/2" into the buck. For 2x wood frame substrate (min. S.G. = 0.42).
3. Use two (2) - #10 x 3/4" PFH or larger fasteners through masonry strap into jamb without penetrating through the jamb into product causing visibility or collateral damage to product.
4. Install one (1) - #12 x 2-1/2" PFH wood screw through each hinge plate into rough opening.
5. Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.


General Notes:

1. The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
2. All glazing shall conform to ASTM E1300.
3. Glazing shall be, 6.4mm tempered - 8.7mm airspace - 4.7mm annealed - .76mm PVB Interlayer by Saflex - 4.7mm annealed glass.
4. Use structural or composite shims where required.
5. Masonry strap specifications: 20 Ga. galvanized steel, .036" min. thickness x 1.5" min. width.

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.

DISCLAIMER:

This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.

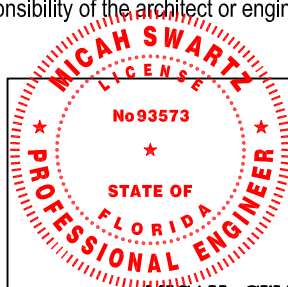


10/05/26 MICAH SWARTZ, P.E.


PE No. 93573
5134 Cambridge Ct.
Klamath Falls, OR. 97603
(541) 363-8075

This item has been digitally signed and sealed by Micah Swartz, P.E. on the date adjacent to the seal. Printed copies of this document are not considered signed and sealed and the signature must be verified on any electronic copies


	DATE: 09/30/2026	 3737 LAKEPORT BLVD. KLAMATH FALLS OR, 97601 PHONE: (800) 535-3936	
DRAWN BY: M.HAM	SCALE: NTS		
CHECKED BY: M.HAM	Architectural Fiberglass Swinging Door Inswing 2 Panel		
APPROVED BY: J.KANTOLA			
RECORD No.: D014722			
REPORT No.: TEL 01681715	CAD DWG. No.: —	REV: D	SHEET 2 of 5

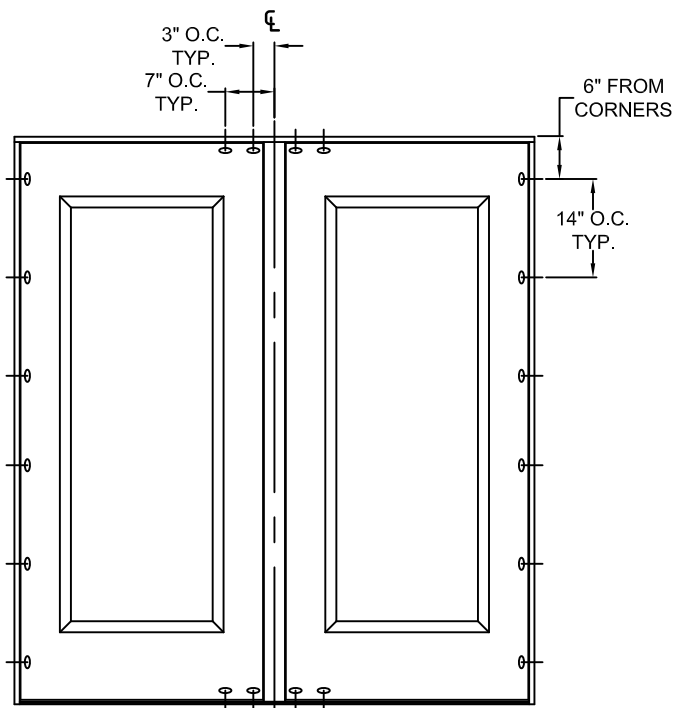

TYPICAL ELEVATION WITH FASTENER SPACING

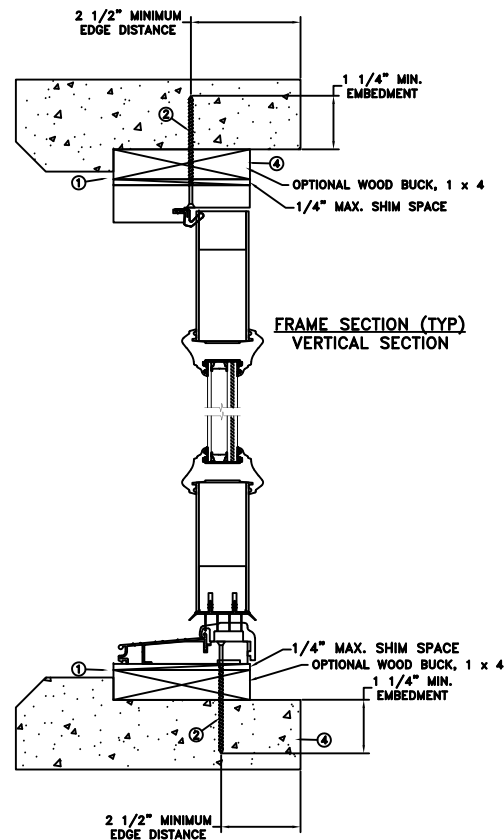

FRAME SECTION (TYP)
VERTICAL SECTION

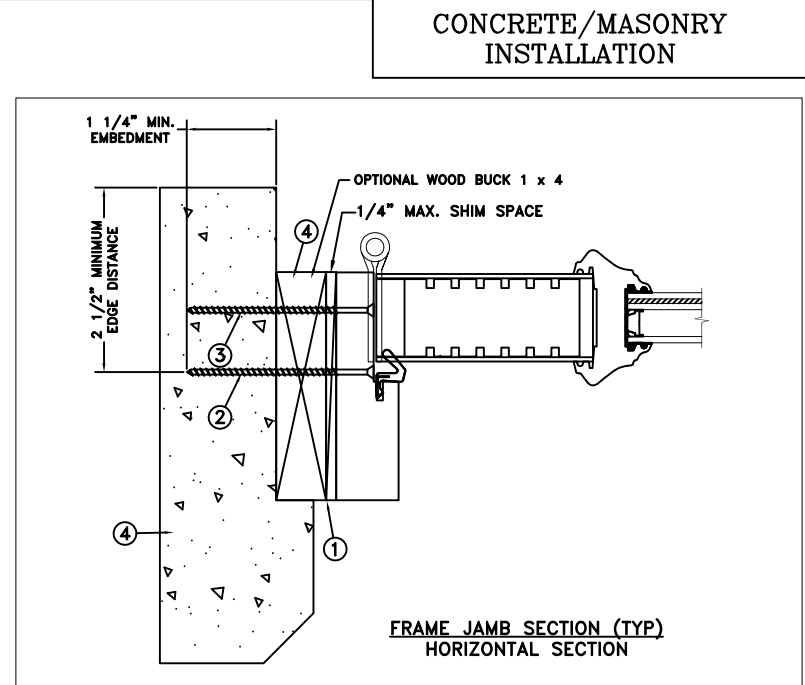

FRAME JAMB SECTION (TYP)
HORIZONTAL SECTION

MAXIMUM FRAME	DP	IMPACT
74" x 80.75"	+50/-50	YES

WINDZONE 3

Installation Notes:

1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
2. Use 1/4" tapcon or equivalent fasteners through frame with sufficient length to penetrate a minimum of 1-1/4" into concrete or masonry at each location with a 2-1/2" min. from edge distance. For concrete (min. fc = 3000 psi) or masonry substrate (CMU shall adhere to ASTM C90).
3. Install one (1) - 1/4" tapcon or equivalent fastener through each hinge plate, minimum 1-1/4" embedment into concrete or masonry.
4. Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.


General Notes:

1. The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
2. All glazing shall conform to ASTM E1300.
3. Glazing shall be, 6.4mm tempered - 8.7mm airspace - 4.7mm annealed - .76mm PVB Interlayer by Saflex - 4.7mm annealed glass.
4. Use structural or composite shims where required.

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.

DISCLAIMER:

This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.

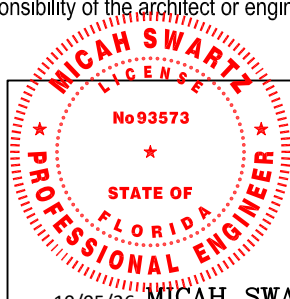


10/05/26 MICAH SWARTZ, P.E.



PE No. 93573
5134 Cambridge Ct.
Klamath Falls, OR. 97603
(541) 363-8075

This item has been digitally signed and sealed by Micah Swartz, P.E. on the date adjacent to the seal. Printed copies of this document are not considered signed and sealed and the signature must be verified on any electronic copies

	DATE: 09/30/2026	 3737 LAKEPORT BLVD. KLAMATH FALLS OR, 97601 PHONE: (800) 535-3936	
DRAWN BY: M.HAM	SCALE: NTS		
CHECKED BY: M.HAM	TITLE: Architectural Fiberglass Swinging Door Inswing 2 Panel		
APPROVED BY: J.KANTOLA			
RECORD No.: D014722			
REPORT No.: TEL 01681715		CAD DWG. No.: —	REV: D SHEET 3 of 5

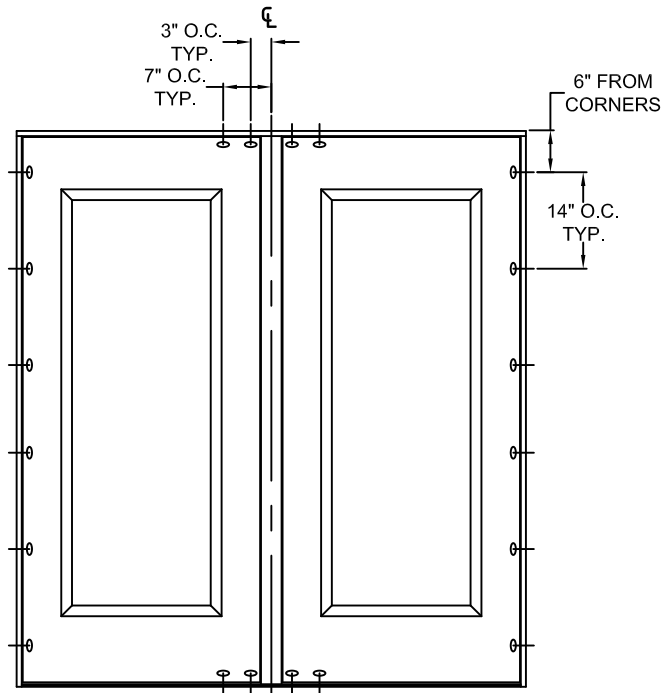

TYPICAL ELEVATION WITH FASTENER SPACING

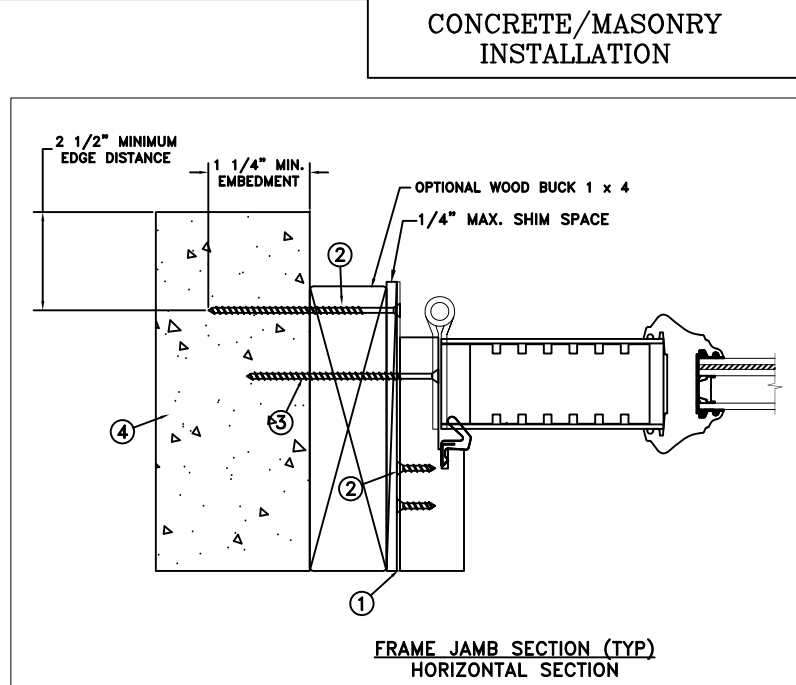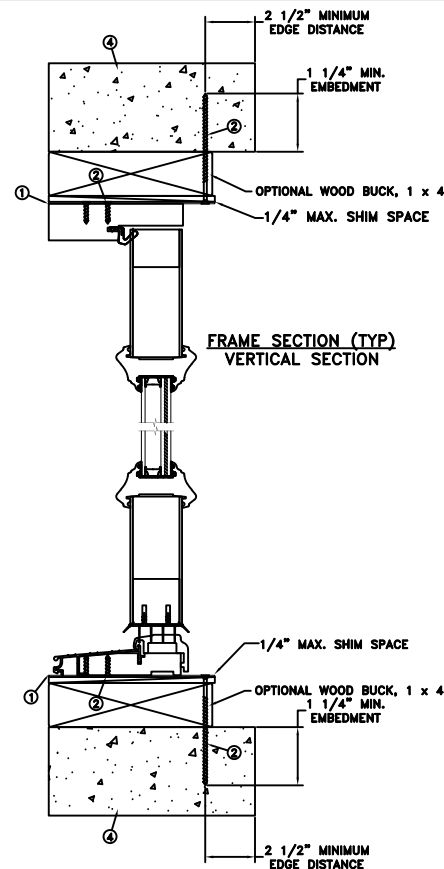

MAXIMUM FRAME	DP	IMPACT
74" x 80.75"	+50/-50	YES

WINDZONE 3

Installation Notes:

1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
2. Use one (1) - 1/4" Tapcon or equivalent fasteners through strap with sufficient length to penetrate a minimum of 1-1/4" into concrete or masonry at each location with a 2-1/2" min. from edge distance. Use two (2) - #10 x 3/4" PFH fasteners through masonry strap into frame. For concrete (min. fc = 3000 psi) or masonry substrate (CMU shall adhere to ASTM C90).
3. Install one (1) - 1/4" tapcon or equivalent fastener through each hinge plate, minimum 1-1/4" embedment into concrete or masonry.
4. Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.


General Notes:

1. The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
2. All glazing shall conform to ASTM E1300.
3. Glazing shall be, 6.4mm tempered - 8.7mm airspace - 4.7mm annealed - .76mm PVB Interlayer by Saflex - 4.7mm annealed glass.
4. Use structural or composite shims where required.
5. Masonry strap specifications: 20 Ga. galvanized steel, .036" min. thickness x 1.5" min. width.

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.

DISCLAIMER:

This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.

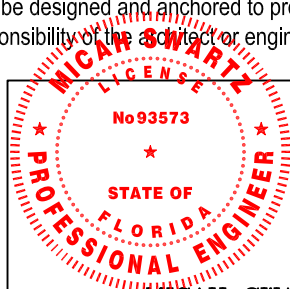


10/05/26 MICAH SWARTZ, P.E.

PE No. 93573
5134 Cambridge Ct.
Klamath Falls, OR. 97603
(541) 363-8075


This item has been digitally signed and sealed by Micah Swartz, P.E. on the date adjacent to the seal. Printed copies of this document are not considered signed and sealed and the signature must be verified on any electronic copies

	DATE: 09/30/2026	 3737 LAKEPORT BLVD. KLAMATH FALLS OR, 97601 PHONE: (800) 535-3936	
DRAWN BY: M.HAM	SCALE: NTS		
CHECKED BY: M.HAM	TITLE: Architectural Fiberglass Swinging Door Inswing 2 Panel		
APPROVED BY: J.KANTOLA			
RECORD No.: D014722			
REPORT No.: TEL 01681715	CAD DWG. No.: —	REV: D	SHEET 4 of 5


MASONRY STRAP INSTALLATION

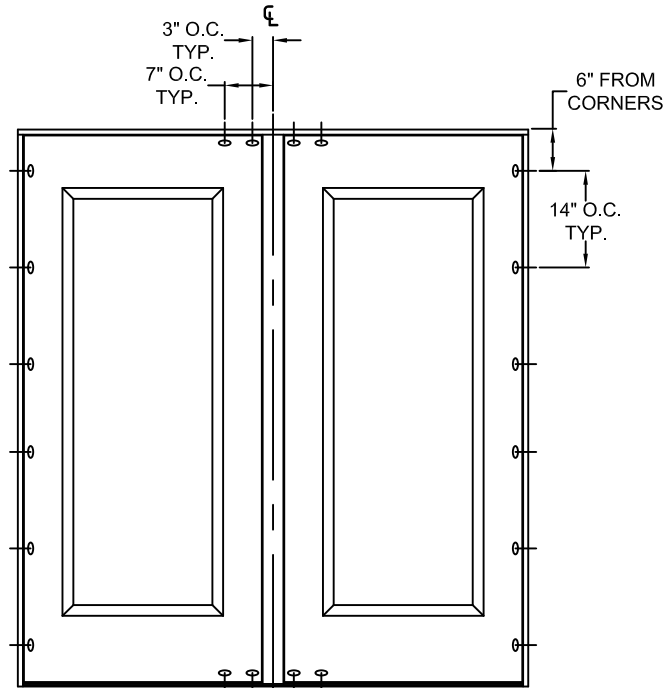

TYPICAL ELEVATION WITH FASTENER SPACING

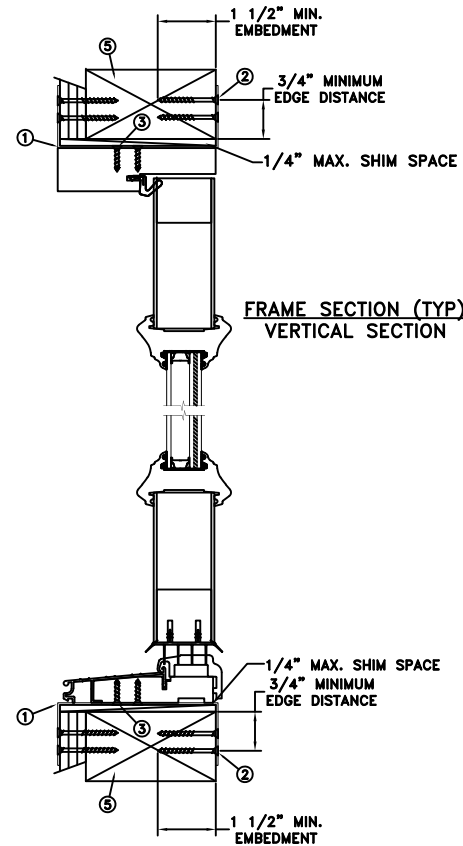

**FRAME SECTION (TYP)
VERTICAL SECTION**

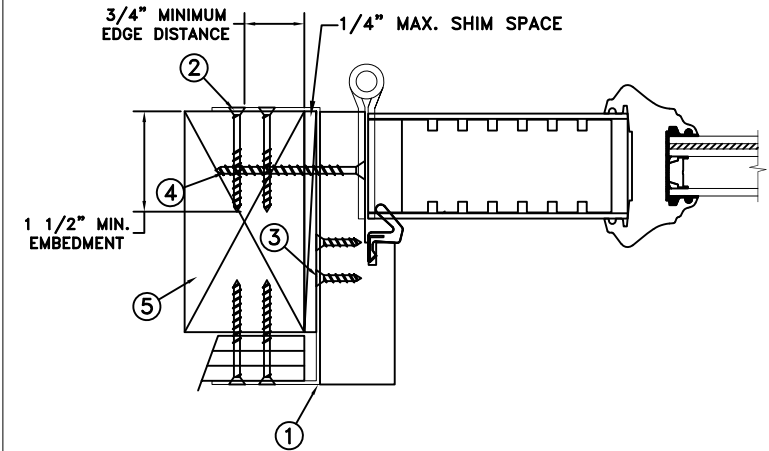

**FRAME JAMB SECTION (TYP)
HORIZONTAL SECTION**

MAXIMUM FRAME	DP	IMPACT
74" x 80.75"	+50/-50	YES

WINDZONE 3

Installation Notes:

1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
2. Use min. two (2) - #10 PFH or larger fasteners through masonry strap with sufficient length to penetrate a minimum of 1 1/2" into the buck. Bend straps around both sides of the buck. For 2x wood frame substrate (min. S.G. = 0.42).
3. Use min. two (2) - #10 x 3/4" PFH or larger fasteners through masonry strap into jamb without penetrating through the jamb into product causing visibility or collateral damage to product.
4. Install one (1) - #12 x 2-1/2" PFH wood screw through each hinge plate into rough opening.
5. Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.


General Notes:

1. The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
2. All glazing shall conform to ASTM E1300.
3. Glazing shall be, 6.4mm tempered - 8.7mm airspace - 4.7mm annealed - .76mm PVB Interlayer by Saflex - 4.7mm annealed glass.
4. Use structural or composite shims where required.
5. Masonry strap specifications: 20 Ga. galvanized steel, .036" min. thickness x 1.5" min. width.

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.

DISCLAIMER:

This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.

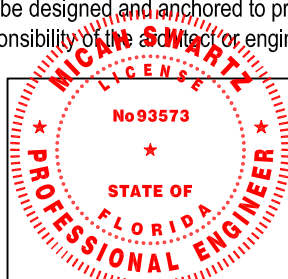

10/05/26 **MICAH SWARTZ, P.E.**

PE No. 93573
5134 Cambridge Ct.
Klamath Falls, OR. 97603
(541) 363-8075

This item has been digitally signed and sealed by Micah Swartz, P.E. on the date adjacent to the seal. Printed copies of this document are not considered signed and sealed and the signature must be verified on any electronic copies

	DATE: 09/30/2026	JELD-WEN 3737 LAKEPORT BLVD. KLAMATH FALLS OR, 97601 PHONE: (800) 535-3936	
DRAWN BY: M.HAM	SCALE: NTS		
CHECKED BY: M.HAM	TITLE: Architectural Fiberglass Swinging Door Inswing 2 Panel		
APPROVED BY: J.KANTOLA			
RECORD No.: D014722			
REPORT No.: TEL 01681715	CAD DWG. No.: —	REV: D	SHEET 5 of 5