
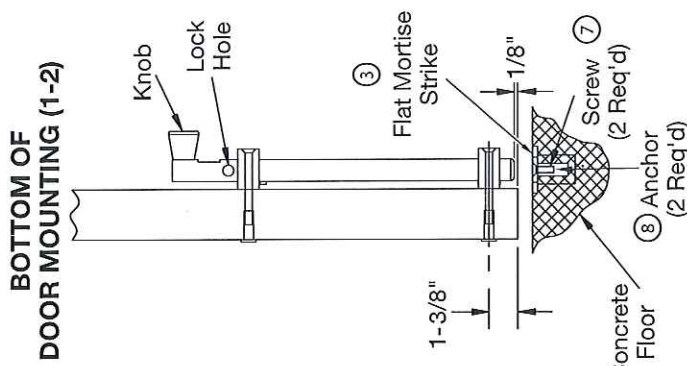
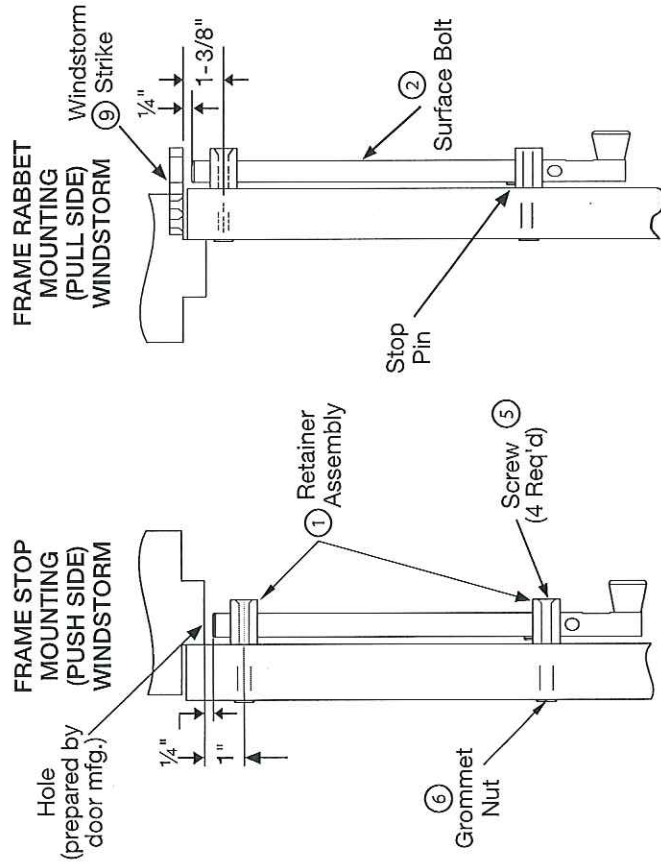


ASSA ABLOY

The global leader in door opening solutions

1. Strike Mounting:
 - Determine if bolt is to be mounted at top (1-1) or bottom (1-2) of door.
 - A 2 3/4" backset is recommended.
- 1-1. Top of Door (frame mounted strike):
 - Locate strike on frame as shown and mark hole locations. For Windstorm Strike, factory frame preparation is supplied.
 - Drill and tap for 1/4"-20 machine screws (#8 drill and 1/4"-20 tap are required).
 - Secure strike with three (3) 1/4"-20 x 3/4" screws (supplied).
- 1-2. Bottom of Door (floor mounted strike):
 - 1-1/8" dia. x 1 1/2" deep hole required in floor to accept surface bolt.
 - Mark and drill two (2) 7/16" dia. x 1 1/4" deep holes for strike anchors.
 - Secure strike with two (2) anchors and 1/4"-20 x 3/4" screws (supplied).
2. Surface Bolt Mounting:
 - Slide knob end retainer to stop pin.
 - Locate surface bolt and retainers on door as shown. Mark location of through-bolts.
 - Check bolt alignment in strike before drilling holes.
 - Drill four (4) 9/32" dia. holes through door.
 - Open holes for grommet nuts on opposite side of door using "V" size drill.
 - Secure retainers to door using grommet nuts and 1/4"-20 x 2-5/8" screws (supplied).
 - Check for proper operation.

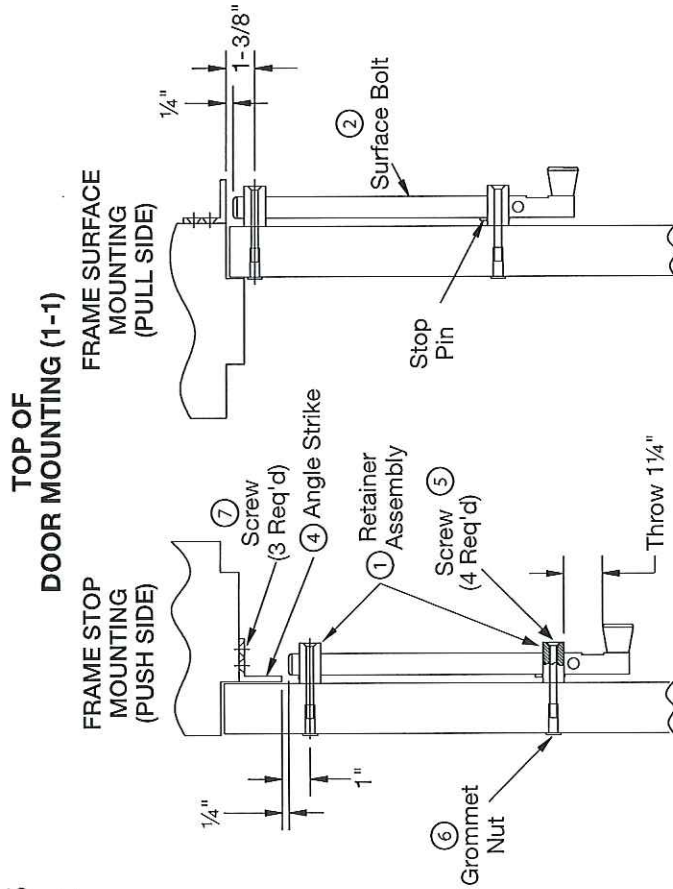

Item	Description	Qty.
1	Retainer	2
2	Surface Bolt	1
3	Flat Mortise Strike	1
4	Angle Strike	1
5	Screw, 1/4-20 x 2-5/8"	4
6	Grommet Nut	4
7	Screw, 1/4-20 x 3/4"	3
8	Anchor	2
9	Windstorm Strike	1

NOTE: Parts used depend on mounting application.