



Westchester Double Hung Transom Window
96" x 48" Overall Frame Size
Nail Fin Installation / Non-Impact

TEST REPORT SUMMARY:
MAXIMUM BASIC UNIT FRAME SIZE:
96" (2438mm) x 48" (1219mm)

- OVERALL DESIGN PRESSURE: ± 50.13 psf
- STRUCTURAL TEST PRESSURE: ± 75.19 psf
- RATING: CW-PG50

CCL Listing# 436-H-690.16-.20 | ELEMENT TEST REPORT #: ESP032826P-2529.9

Westchester Double Hung Transom Window
Nail Fin Installation / WDMA Instructions / Non-Impact


SHEET: 1 OF 2 | UPDATED: 4/29/2020 | DRAWN BY: B.K.

INSTALLATION NOTES:

1. USE 2" x PINE FOR WOOD BUCK
 - PLACE WOOD SHIMS EVERY 6-10"
2. 1/4" MAXIMUM SHIM SPACE AT HEAD, SILL & EACH JAMB
3. APPLY A CONTINUOUS BEAD OF SEALANT BETWEEN THE INTEGRAL VINYL NAIL FIN AND THE BUCK AT THE HEAD, SILL AND SIDE JAMBS TO SECURE INTEGRAL VINYL NAIL FIN TO FRAMING MATERIAL
4. INSTALL #8 X 1-1/4" PPH SCREWS SPACED APPROXIMATELY 2-4" FROM EACH CORNER AND 6" ON CENTER THROUGH THE NAILING FLANGE AT THE HEAD AND SIDES AND 4" ON CENTER AT THE SILL, INTO THE FRAMING MATERIAL; 3/8" MIN EDGE DISTANCE. THREE 20 GAUGE X 1-1/2" X 5" LONG GALVANIZED STRAPS, EVENLY SPACED AT THE SILL WERE FASTENED TO THE FRAME WITH TWO #6 X (5/8") PFH SCREWS AND TO THE BUCK WITH TWO #8 X 32MM (1-1/4") PPH SCREWS. THREE #8 X 51MM (2") PFH SCREWS WERE EVENLY PLACED THROUGH THE HEAD JAMB AND INTO THE BUCK.
5. 1" MINIMUM FASTENER EMBEDMENT INTO FRAMING MATERIAL
SILICONE SEAL OVER SCREW HEADS
6. MAXIMUM OVERALL BASIC UNIT WINDOW SIZE:
96" (2438mm) x 48" (1219mm)

GENERAL INSTALLATION NOTES:

- Check rough opening for proper size, plumb, level and square.
 - Make all necessary adjustments to ensure rough opening is plumb, level & square.
 - Sill must be flat, level and capable of supporting the weight of the unit.
 - Opening should allow a maximum of 1/4" shim space at head, sill and each jamb.
 - Consult full installation instructions found on the Sierra Pacific web site, www.sierrapacificwindows.com, for all recommended installation procedures.
 - Wood buck, framing, fasteners, sealant and all wall system materials are provided by others
- FLASHING:**
- For units that have to meet a specific DP (Design Pressure) rating, any kind of building wrap must be folded and taped away from each rough opening before the unit is installed. Unit must come in contact with the building's bare sheathing. A bead of silicone must be applied to the backside of the nail fin where it meets the unit, at head and jambs.
 - Once unit is installed and flashed properly, untape the building wrap and trim flush with the unit's exterior. A bead of sealant must be placed along the seam joint of the building wrap and the unit. Tape the corner cuts in the building wrap. See full window installation brochure for complete flashing details.

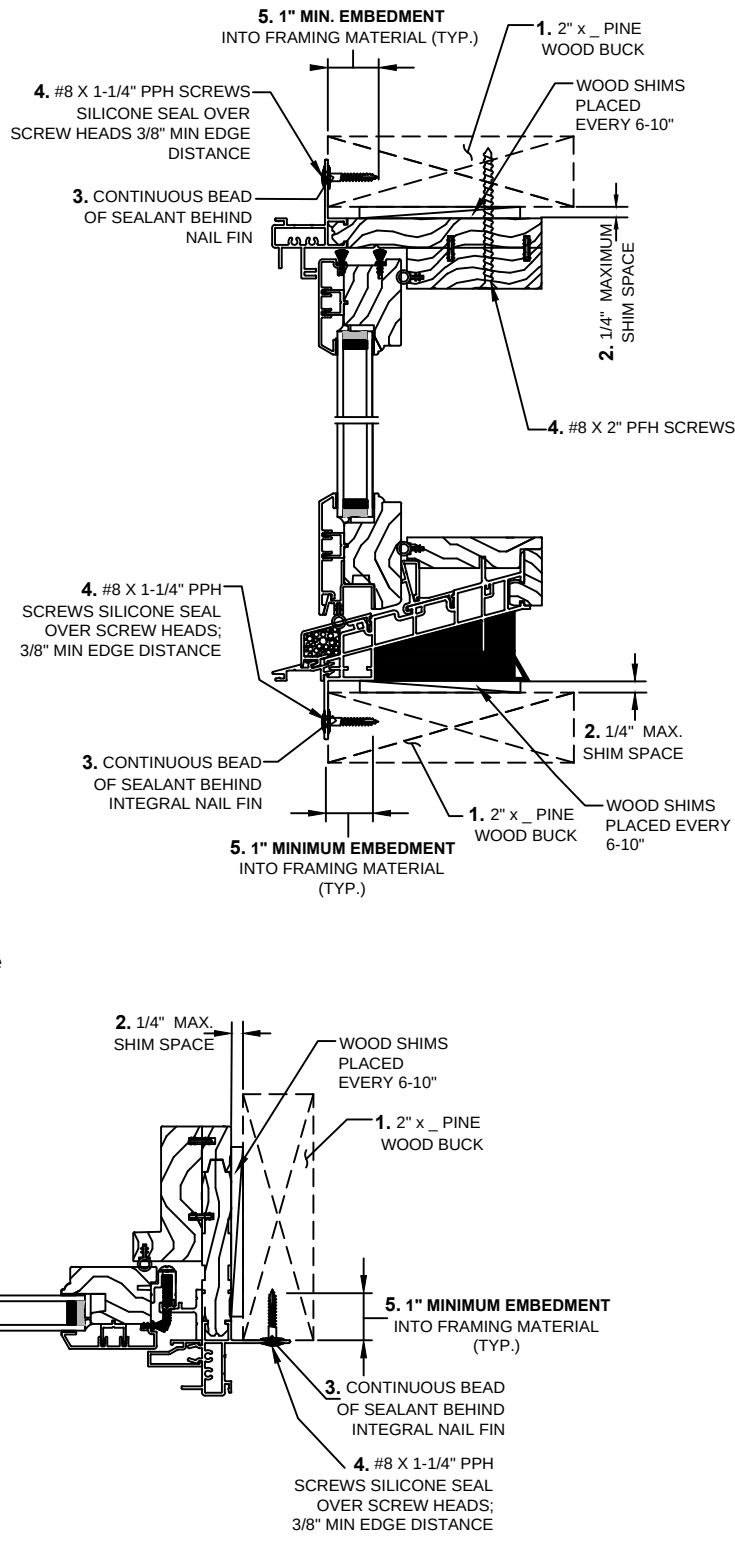

Installation requirements may vary in particular locations and in other types of construction. Proper installation is essential, and Sierra Pacific Windows, recommends consultation with an AAMA Certified Installer, or other qualified, registered building professional before installation of any Sierra Pacific product. Proper installation of Sierra Pacific products is the responsibility of the installer. Sierra Pacific is not responsible for proper installation. Sierra Pacific is not responsible for the design of, conditions in, or performance of building construction beyond the perimeters of the Sierra Pacific units. Sierra Pacific is not responsible for proper integration of the Sierra Pacific units with the weather-repellent systems of the building.



Westchester Double Hung Transom Window
96" x 48" Overall Frame Size
Nail Fin Installation / Non-Impact

TEST REPORT SUMMARY:
MAXIMUM BASIC UNIT FRAME SIZE:
96" (2438mm) x 48" (1219mm)

- OVERALL DESIGN PRESSURE: ± 50.13 psf
- STRUCTURAL TEST PRESSURE: ± 75.19 psf
- RATING: **CW-PG50**

CCL Listing #436-H-690.16-.20

ELEMENT TEST REPORT #: **ESP032826P-2529.9**

Westchester Double Hung Transom Window
Nail Fin Installation / WDMA Instructions / Non-Impact

SHEET: 2 OF 2

UPDATED: 4/29/2020

DRAWN BY: B.K.

ELEVATION SHOWING
FASTENER LOCATION & SPACING
(TYP.)

THREE 20 GAUGE X 1-1/2" X 5" LONG GALVANIZED STRAPS, EVENLY SPACED AT THE SILL WERE FASTENED TO THE FRAME WITH TWO #6 X (5/8") PFH SCREWS AND TO THE BUCK WITH TWO #8 X 32MM (1-1/4") PPH SCREWS. THREE #8 X 51MM (2") PFH SCREWS WERE EVENLY PLACED THROUGH THE HEAD JAMB AND INTO THE BUCK.

