


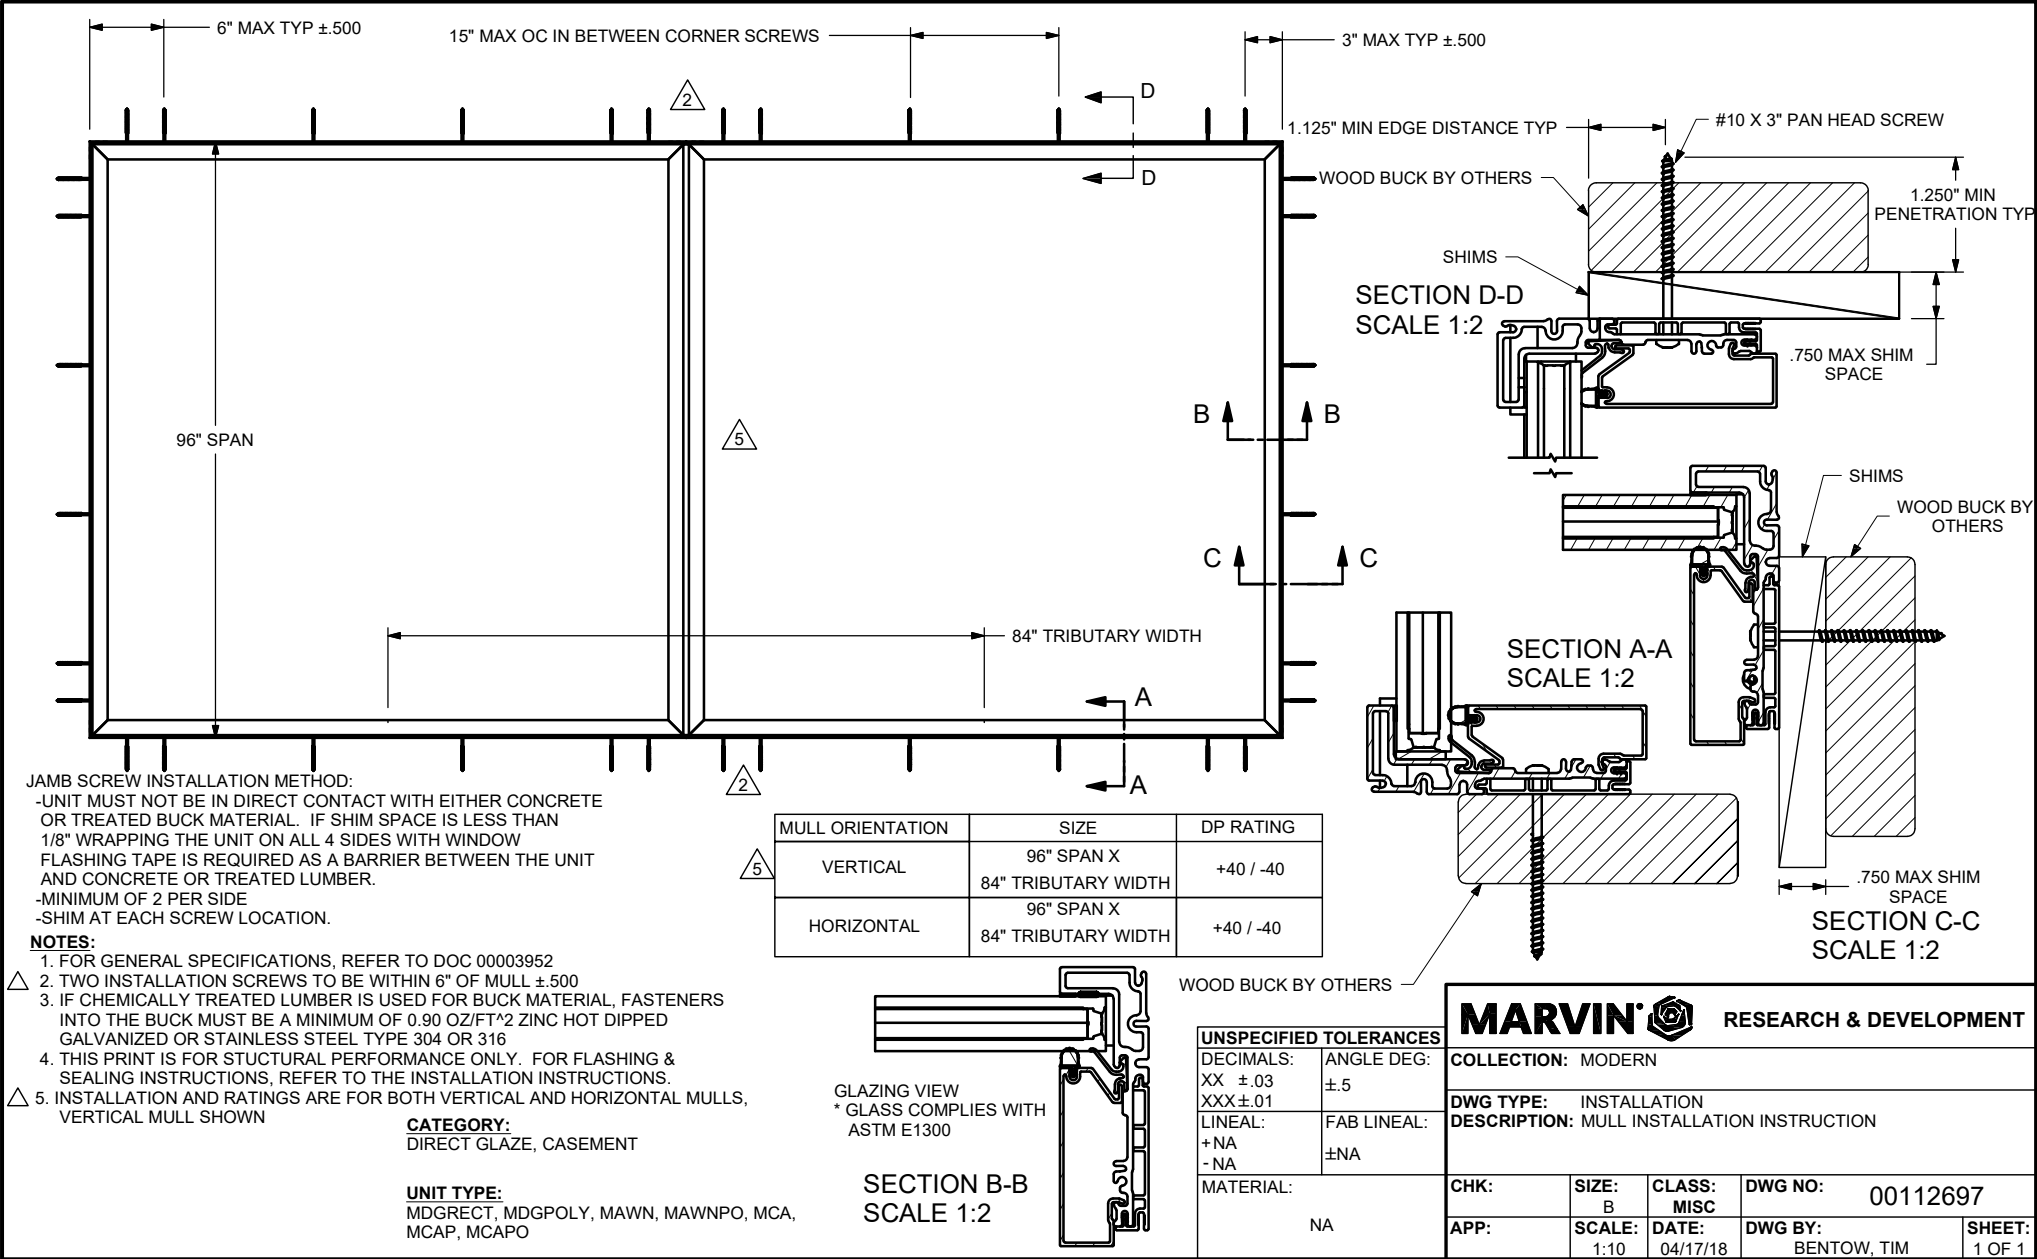


JAMB SCREW INSTALLATION METHOD:
-UNIT MUST NOT BE IN DIRECT CONTACT WITH EITHER CONCRETE OR TREATED BUCK MATERIAL. IF SHIM SPACE IS LESS THAN 1/8" WRAPPING THE UNIT ON ALL 4 SIDES WITH WINDOW FLASHING TAPE IS REQUIRED AS A BARRIER BETWEEN THE UNIT AND CONCRETE OR TREATED LUMBER.
-MINIMUM OF 2 PER SIDE
-SHIM AT EACH SCREW LOCATION.

- NOTES:**
1. FOR GENERAL SPECIFICATIONS, REFER TO DOC 00003952
 2. TWO INSTALLATION SCREWS TO BE WITHIN 6" OF MULL ±.500
 3. IF CHEMICALLY TREATED LUMBER IS USED FOR BUCK MATERIAL, FASTENERS INTO THE BUCK MUST BE A MINIMUM OF 0.90 OZ/FT² ZINC HOT DIPPED GALVANIZED OR STAINLESS STEEL TYPE 304 OR 316
 4. THIS PRINT IS FOR STRUCTURAL PERFORMANCE ONLY. FOR FLASHING & SEALING INSTRUCTIONS, REFER TO THE INSTALLATION INSTRUCTIONS.
 5. INSTALLATION AND RATINGS ARE FOR BOTH VERTICAL AND HORIZONTAL MULLS, VERTICAL MULL SHOWN

CATEGORY:
DIRECT GLAZE, CASEMENT

UNIT TYPE:
MDGRECT, MDGPOLY, MAWN, MAWNPO, MCA, MCAP, MCAPO

MULL ORIENTATION	SIZE	DP RATING
VERTICAL	96" SPAN X	+40 / -40
	84" TRIBUTARY WIDTH	
HORIZONTAL	96" SPAN X	+40 / -40
	84" TRIBUTARY WIDTH	

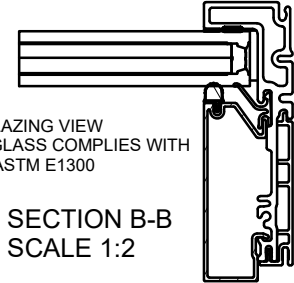

SECTION B-B
SCALE 1:2

MARVIN

RESEARCH & DEVELOPMENT

COLLECTION: MODERN

DWG TYPE: INSTALLATION

DESCRIPTION: MULL INSTALLATION INSTRUCTION

CHK:	SIZE: B	CLASS: MISC	DWG NO: 00112697
APP:	SCALE: 1:10	DATE: 04/17/18	DWG BY: BENTOW, TIM
			SHEET: 1 OF 1