

FASTENING HI-RIB WALL PANELS


FASTEN APPROX. 1/2" - 1" BELOW
TOP OF THE BEVELED PURLIN

#9x2" S.S.I.D. SCREWS
AT EACH HI-RIB & #9x1" S.S.I.D.
SCREWS CENTERED IN FLATS

CENTER RIB ON EDGE OF NAILERS


#9x1" S.S.I.D. SCREW AT
EACH NAILER UNDER
CORNER TRIM

*NAIL T#167 OR T#168 AT HEIGHT
DETERMINED FROM LENGTHS OF
PANELS UNDER 3x4 TRACKBOARD
(APPROX. 5" ABOVE GRADE).
NAIL WITH 1-1/2" R.S. NAILS
(3 PER 12' PIECE). SEE CORNER
NOTCHING DETAILS AT BASE OR AT
WAINSCOT ON A FOLLOWING PAGE.

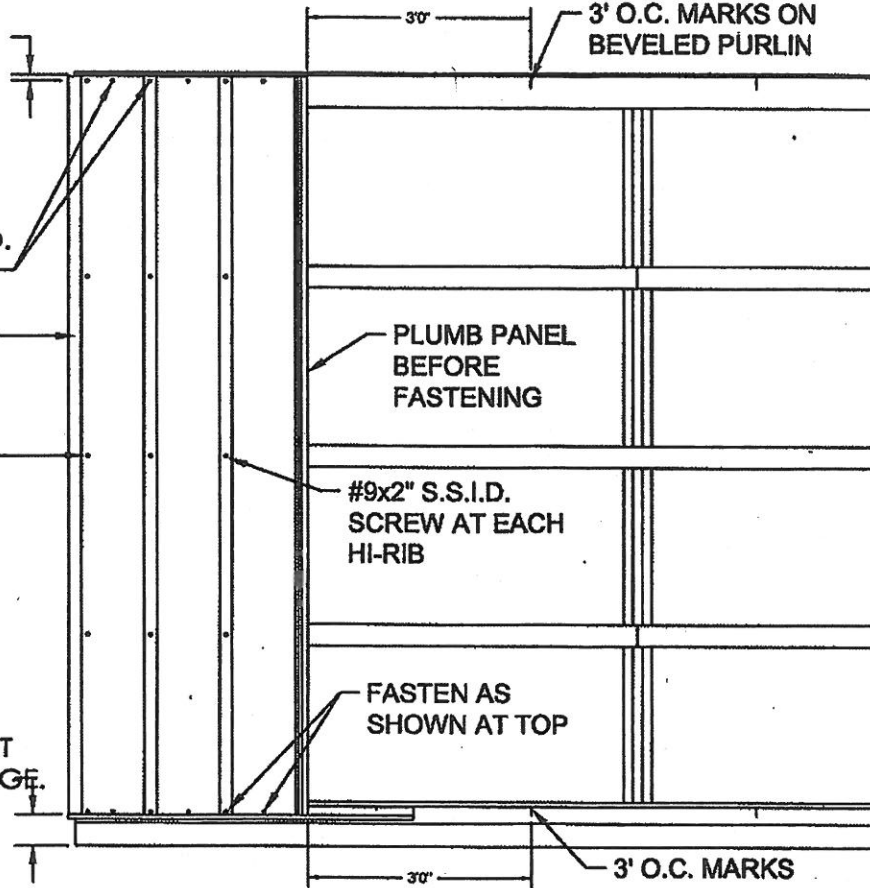


FASTENING END
STEEL AT END TRUSS
(WITHOUT OVERHANG)

FASTEN WITH #9x1"
S.S.I.D. SCREWS
CENTERED IN FLATS
& NEXT TO RIBS
FACING SIPHON
GROOVE

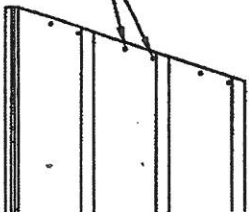

FASTENING SIDE OR END
STEEL AT OVERHANG

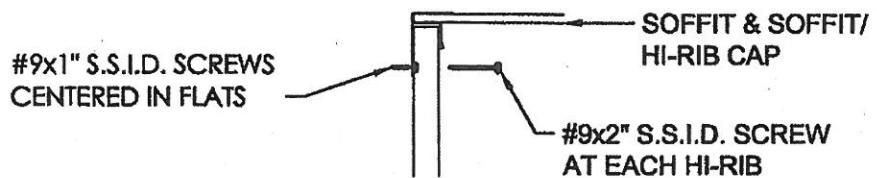

Allen N. Reeves
Allen N. Reeves, P.E., SECB
Structural Engineer
Florida License No. 19354
29 DEC. 2010

MORTON BUILDINGS, INC.

