



H3 Insert Double Hung Operating
47 1/2"x83 1/2" Frame Size
Thru-Frame Installation / Non-Impact

CCL Listing# 436-H-671.97-.101

Element Test Report Number: **ESP033996P-2572**

H3 Insert Double Hung Clad/Wood Composite Operating
Thru-Frame Installation / WDMA Instructions

PAGE 1 of 2

FL38003.1

UPDATED 11/03/2020

DRAWN BY: B.K.

TEST REPORT SUMMARY:

OVERALL BASIC UNIT SIZE:

47 1/2"(1207mm)x83 1/2"(2121mm)

- OVERALL DESIGN PRESSURE: **+45.11/-50.13 psf**

- STRUCTURAL TEST PRESSURE: **+67.67/-75.19 psf**

- RATING: **LC-PG45**

INSTALLATION NOTES:

1. USE 2" x _ WOOD BUCK

2. 1/4" MAXIMUM SHIM SPACE AT HEAD, SILL, JAMBS. PLACE WOOD SHIMS 6-10".


3. INSTALL #8 X 3" PPH SCREWS THRU-FRAME AT THE SIDE JAMBS, 7" FROM EACH CORNER AND ONE AT THE MIDSPAN. AND AT THE HEAD 7" FROM EACH CORNER.

4. APPLY BACKER ROD WITH A CONTINUOUS BEAD OF SEALANT BETWEEN THE FRAME AND ROUGH OPENING, ON ALL FOUR SIDES.

5. 1" MINIMUM FASTENER EMBEDMENT INTO FRAMING MATERIAL.

6. WINDOW SIZE: OVERALL FRAME SIZE 47 1/2"(1207mm)x83 1/2"(2121mm)

- Check rough opening for proper size, plumb, level and square.
- Make all necessary adjustments to ensure rough opening is plumb, level & square.
- Sill must be flat, level and capable of supporting the weight of the unit.
- Opening should allow a maximum of 1/4" shim space at head, sill and jambs.
- Consult full installation instructions found on the Sierra Pacific web site, www.sierrapacificwindows.com / Professionals / Design Resource, for all recommended installation procedures.
- Wood buck, framing, fasteners, sealant and all wall system materials are provided by others.

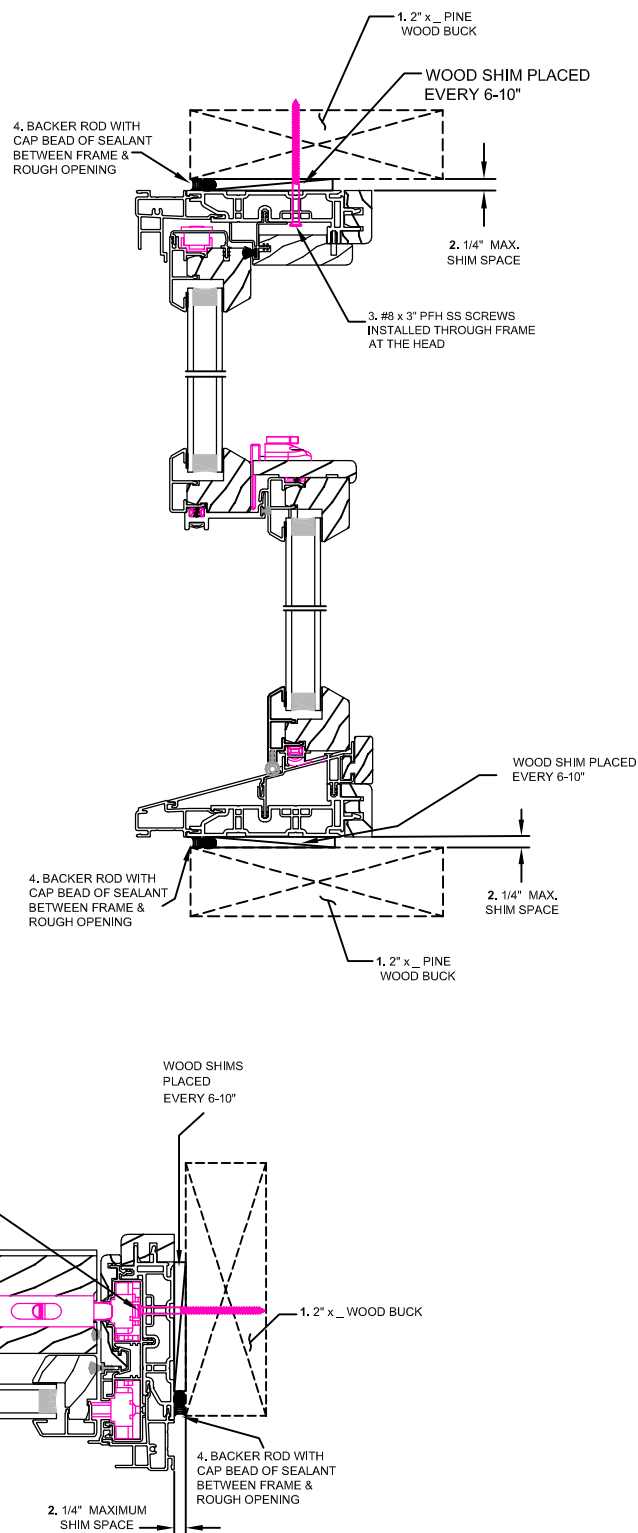



H3 Insert Double Hung Operating
47 1/2"x83 1/2" Frame Size
Thru-Frame Installation / Non-Impact

TEST REPORT SUMMARY:

OVERALL BASIC UNIT SIZE:

47 1/2"(1207mm)x83 1/2"(2121mm)

- OVERALL DESIGN PRESSURE: **+45.11/-50.13 psf**
- STRUCTURAL TEST PRESSURE: **+67.67/-75.19 psf**
- RATING: **LC-PG45**

CCL Listing# 436-H-659.30-.34

Element Test Report Number: **ESP033996P-2572**

H3 Insert Double Hung Clad/Wood Composite Operating
Thru-Frame Installation / WDMA Instructions

PAGE 2 of 2

FL38003.1

UPDATED 11/03/2020

DRAWN BY: B.K.

**ELEVATION SHOWING
FASTENER LOCATION & SPACING
(TYP.)**

