



All-Wood PS Transom
95 1/4"x36" Frame Size
Thru-Frame Installation / Non-Impact

All-Wood PS Transom
Thru-Frame Installation / WDMA Instructions

PAGE 1 of 2

UPDATED 02/26/2021



DRAWN BY: B.K.

INSTALLATION NOTES:

1. USE 2" x _ WOOD BUCK
2. 1/4" MAXIMUM SHIM SPACE AT HEAD, SILL, JAMBS. PLACE WOOD SHIMS 6-10".
3. INSTALLED USING #8 X 3" PPH SCREWS SPACED 6" FROM CORNERS AND 14" ON CENTER AT THE HEAD, SILL, & JAMBS.
4. APPLY BACKER ROD WITH A CONTINUOUS BEAD OF SEALANT BETWEEN THE FRAME AND ROUGH OPENING, ON ALL FOUR SIDES.
5. 1" MINIMUM FASTENER EMBEDMENT INTO FRAMING MATERIAL.
6. WINDOW SIZE: OVERALL FRAME SIZE **95 1/4"(2419mm)X36"(914mm)**

- Check rough opening for proper size, plumb, level and square.
- Make all necessary adjustments to ensure rough opening is plumb, level & square.
- Sill must be flat, level and capable of supporting the weight of the unit.
- Opening should allow a maximum of 1/4" shim space at head, sill and jambs.
- Consult full installation instructions found on the Sierra Pacific web site, www.sierrapacificwindows.com / Professionals / Design Resource, for all recommended installation procedures.
- Wood buck, framing, fasteners, sealant and all wall system materials are provided by others.

Width	Height	Design Pressure	Rating	CCL Listing #	Report No.
95 1/4" (2419mm)	36" (914mm)	±40.10 psf	Class CW-PG40	429-H-479.05-.09	L7588.01

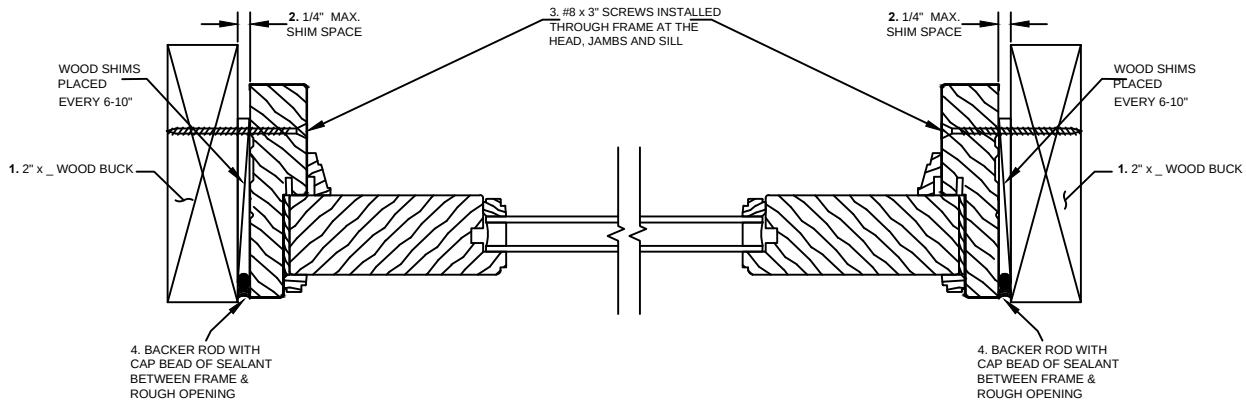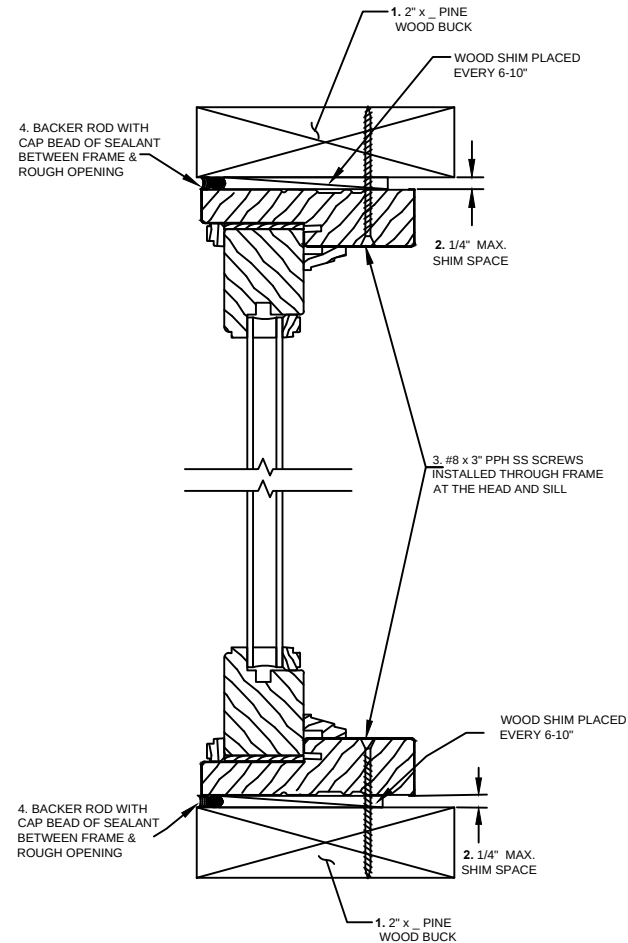



All-Wood PS Transom
95 1/4"x36" Frame Size
Thru-Frame Installation / Non-Impact

All-Wood PS Transom
Thru-Frame Installation / WDMA Instructions

PAGE 2 of 2

UPDATED 02/26/2021

DRAWN BY: B.K.

ELEVATION SHOWING
FASTENER LOCATION & SPACING
(TYP.)

Width	Height	Design Pressure	Rating	CCL Listing #	Report No.
95 1/4" (2419mm)	36" (914mm)	±40.10 psf	Class CW-PG40	429-H-479.05-.09	L7588.01

